



Body Wiring Manual



2001 and Later Aeromaster on Freightliner Chassis

Read First: Top Tips on Using This Online Manual

Browse pages with Bookmarks (hyperlinks) or Thumbnails

Bookmarks, at the left of the screen, are hyperlinks to document pages. From any page in this document, you can use bookmarks to jump to any section heading.

To jump to a topic by using its bookmark, point to the bookmark name, and when the arrow becomes a pointing hand, click on the name. If a triangle (or + sign) appears to the left of the bookmark, click the triangle (or + sign) to show or hide subordinate bookmarks.




Thumbnails are visual icons of the actual pages. After selecting the thumbnail view button (Acrobat Reader ver. 3.0) or tab (ver. 4.0/5.0; “Page” tab in 6.0), you can quickly browse for parts sections just by the “look” of the page. Click on the appropriate thumbnail to view that page.



Use the Zoom and Fit tools for magnification of page sections

 Select the Zoom tool. **(In ver. 4.0 and later, when the Hand tool is selected, you can temporarily change to the Zoom tool by holding down the Ctrl key and the space bar at the same time.)** Click and drag to draw a rectangle around the area you want to magnify.



To return to an overview, you can click on one of the following buttons:

- The Fit Page button scales the *entire* page to display within the main window.
- The Fit Width button scales the page *width* to display within the main window.



Find parts or procedures with the Find tool

Use the Find tool to search for a fragment of a word, a complete word, or multiple words in the active document. To **find** a word (e.g., a part name):

1. Click the Find tool.
2. In the Find What text box, enter the text to be found and click Find. When the program finds the text, the Find dialog box closes and the page containing the text is displayed with the text highlighted.
3. To find the **next occurrence** of the word, press F3, press Ctrl + G, or reopen the Find dialog box and click Find Again.



Revision Control

Revision B
Revision A

July 2012
March 2005

The latest updates and other information about parts and service will be available for viewing and downloading at www.utilimaster.com.

Important Notices

© 2012, Utilimaster.®

Printed in U.S.A.

Title: *2001 and Later Aeromaster on Freightliner Chassis—Body Wiring Manual*

Utilimaster Corporation attempts to provide information that is accurate, complete, and useful. All information contained in this manual is based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.

This material is confidential and the property of Utilimaster. It is shared with your company for the sole purpose of helping you with the operation of the described equipment.


Utilimaster makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Utilimaster shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Utilimaster expressly disclaims all responsibility and liability for the installation, use, performance, maintenance, and support of third-party products. Customers are advised to make their independent evaluation of such products.

No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Utilimaster.

Utilimaster® and Aeromaster® are registered trademarks of Utilimaster Corporation. All other products or name brands mentioned in this document are trademarks of their respective owners.

Browse the award-winning web site www.utilimaster.com for more information about Utilimaster and its products.

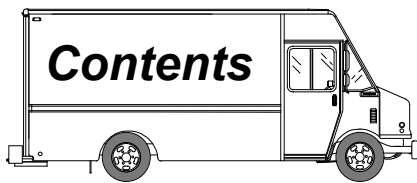

<i>Revision Control</i>	3
<i>Important Notices</i>	3
<i>Introduction</i>	7
<i>Wiring Manual Chart</i>	7
<i>Model Numbers</i>	8
<i>Freightliner Chassis Model Numbers</i>	8
<i>Utilimaster Body Model Numbers</i>	8
<i>What Model Do I Have?</i>	8
<i>VIN, Body Serial Number, and Work Order Numbers</i>	9
<i>Finding Information</i>	10
<i>Reporting Safety Defects</i>	10
<i>United States Only</i>	10
<i>Canada Only</i>	10
<i>Safety Considerations—Notes, Cautions, and Warnings</i>	11
<i>Battery</i>	12
<i>Access</i>	12
<i>Disconnection</i>	12
<i>Removal</i>	12
<i>Installation</i>	12
<i>Symbol Codes and Identification</i>	13
<i>Codes and Symbols</i>	13
<i>Circuit Number Identification</i>	14
<i>Harness Layout Models 31, 32, and 35</i>	15
<i>Harness Layout Models 40, 41, and 42</i>	16
<i>Connectors</i>	17
<i>Wiring Diagrams</i>	23
<i>Accessory Outlet (Cigarette Lighter)</i>	23
<i>Back-up Camera</i>	24
<i>Door Ajar System</i>	25
<i>Fan, Driver Convenience</i>	26
<i>Grounding System</i>	27
<i>Heater and Air Conditioning</i>	28

<i>Auxiliary Heater</i>	28
<i>Heater and Air Conditioning</i>	29
<i>Heater Only (Electronic Controls)</i>	29
<i>Heater and Air Conditioning (HVAC)</i>	30
<i>Heater with A/C System (Electronic Controls)</i>	30
<i>Light, Cab Dome</i>	31
<i>Lights, Cargo</i>	32
<i>Standard</i>	32
<i>Switch on Dash</i>	33
<i>Three-Way Switch</i>	34
<i>Lights, Forward</i>	35
<i>Clearance Lights</i>	35
<i>Incandescent Without Daytime Running Lights</i>	36
<i>LED Without Daytime Running Lights</i>	37
<i>Daytime Running Lights</i>	38
<i>Lights, HVAC Control Panel</i>	39
<i>Lights, Rear</i>	40
<i>Standard</i>	40
<i>Routed through Interior</i>	41
<i>Split Taillights</i>	42
<i>Split Taillights Routed through Interior</i>	43
<i>Supplemental High Mount Stop Light (SHMSL)</i>	44
<i>Lights, Spot, Scene/Flood, or Strobe</i>	45
<i>Mirrors, Heated</i>	46
<i>Power Distribution</i>	47
<i>Roof Wiring</i>	48
<i>Stereo System</i>	49
<i>Switches</i>	50
<i>Vent, Powered</i>	51
<i>Wiper System</i>	52
<i>Standard</i>	52
<i>Intermittent Option</i>	53

<i>More Information</i>	54
<i>Download Files</i>	54
<i>Utilimaster Quick Reference Parts Guide</i>	54
<i>Utilimaster Detailed Parts, Service, and Wiring Manuals</i>	54
<i>Utilimaster Glossary of Terms</i>	54
<i>Contact Utilimaster</i>	54
<i>Index</i>	55

Introduction

This manual (P/N 03102353-WY01EN) illustrates electrical wiring diagrams for Aeromaster® walk-in bodies on the **Freightliner “M2000” strip chassis and the “Straight Rail” strip chassis. It is specific to Utilimaster Model Numbers 31, 32, 35, 40, 41, and 42 Model Years 2001 to current production.** Wiring diagrams are dependent on model and year of the Freightliner chassis. (See the Wiring Manual Chart section below.)

This manual covers only those components manufactured by or installed by Utilimaster® Corporation. Items such as chassis and drive train components or certain interior options are covered by separate manufacturer-supplied information. Not all options are included in this manual and some numbers may have changed.

If your vehicle is equipped with a VACS system, supplementary information is in *Vehicle Access Controls System for Utilimaster Walk-In Vans Operation and Service Manual* (P/N 03102103). To order that manual, call 800-237-7806 or email CustSvc@Utilimaster.com.

All information, specifications, and illustrations

contained in this manual are based on the latest product information available at the time of publication. However, because of the Utilimaster policy of continual product improvement, Utilimaster reserves the right to amend the information in this document at any time without prior notice.



NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*

Wiring Manual Chart

Model Year	Utilimaster Body Model Number	Manual Part Number
1996-2001	31, 32, 35	03102353-WY96EN
2001-2002	31, 35	03102353-WY01EN
2001 and Later	32	
2002 and Later	40, 41, 42	

NOTE: In 2002, the Utilimaster Model 31 was replaced by the Model 41 and the Model 35 was replaced by the Model 41. Utilimaster’s Model 32 was discontinued in 2004. In 2005 the Model 42 was added. Cross-reference Utilimaster’s Body model numbers with Freightliner’s models in the Model Numbers section.

NOTE: See the More Information section about obtaining other manuals.

Model Numbers

Freightliner Chassis Model Numbers

Utilimaster builds bodies on Freightliner chassis designated by the Gross Vehicle Weight Rating (GVWR). Freightliner chassis model numbers **always** start with “MT.” They are MT35, MT45, and MT55.

Utilimaster Body Model Numbers

Utilimaster model numbers include 31, 32, and 35 for the “M2000” series and 40, 41, and 42 for the “Straight Rail” series.

What Model Do I Have?

Your vehicle can be referenced by either the **Freightliner chassis model number** or the **Utilimaster body model number**. Be careful to note the difference between Utilimaster’s Body Model Number 35 and Freightliner Chassis Model Number **MT35**. They are not the same thing.


The fifth and sixth digits in the **VIN** number indicate Freightliner’s chassis model number which can be cross-referenced with Utilimaster’s body model number. (See the chart below and the VIN information on the next page.) There are some differences that affect parts and options between the models and model years. Our Customer Service Department will gladly help if you need assistance.

VIN Positions 5 and 6 — Model, GVWR			Utilimaster Body Model	
Code	Chassis Model	GVWR	1996–2002	2002–Later
A5	MT 55	14,001 to 16,000 Class 4	31	41 and 42
AM	MT 35	9,001 to 10,000 Class H	32	32
AN	MT 45	14,001 to 16,000 Class 4	35	40
AP	MT 45	16,001 to 19,500 Class 5	35	40
AR	MT 55	19,500 to 26,000 Class 6	31	41 and 42
AS	MT 55	26,001 to 33,000 Class 7	31	41 and 42
BG	MT 55	16,001 to 19,500 Class 5	31	41 and 42
BH	MT 35	10,001 to 14,000 Class 3	32	32
BJ	MT 45	10,001 to 14,000 Class 3	35	40

VIN Positions 7 and 8 — Engine, Brakes				
Code	Chassis Model	Engine		Brakes
BV	MT 45 and 55	Cummins	5.9 Liter	Air
BW	MT 45 and 55	Cummins	5.9 Liter	Hydraulic
BX	MT 45 and 55	Cummins	5.9 Liter	Air over Hyd
CN	MT 45	MBE-900 Mercedes	4.3 liter	Air
CR	MT 45	MBE-900 Mercedes	4.3 liter	Air over Hyd
C5	MT 35	Cummins	3.9 liter	Air over Hyd
C6	MT 35	Cummins	3.9 liter	Air
C7	MT 35	Cummins	3.9 liter	Hydraulic

Electronic Cummins engines are **Black** in color. Older **Mechanical** Cummins engines are **Tan** in color.

VIN, Body Serial Number, and Work Order Numbers

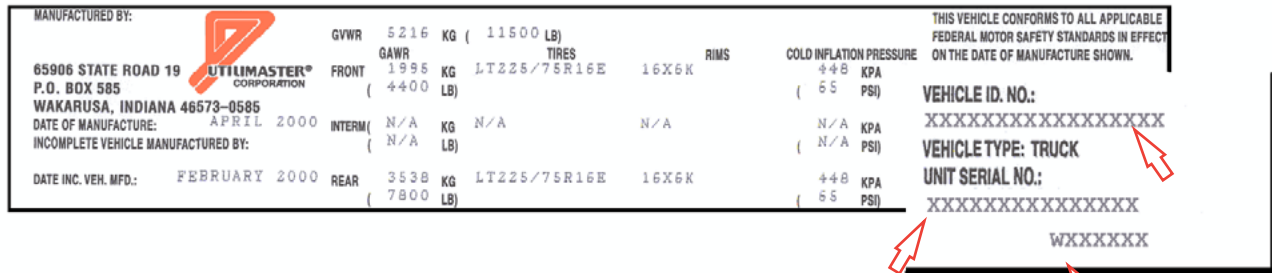

LA-03
Federal Certification Label

The 15-digit **Utilimaster Body (or Unit) Serial Number** is recorded on the **Federal Certification Label**. This label is a plastic decal (about 11” long and 2” high) that contains a variety of manufacturing information (including the VIN). This label is found between the quarter window and door. (See Illustrations LA-05 and LA-15).

The 17-digit chassis **Vehicle Identification Number (VIN)** is the legal identifier for this vehicle and is the number recorded in the license plate registration. The VIN appears on a small metal plate on the dash on the driver’s side. You can read the VIN if you look through the quarter-panel window. (See Illustration LA-10.) The number is also recorded on the Federal Certification Label. (See Illustration LA-05.)

A 7-digit (including a leading W) **Work Order Number** appears below the Unit Serial Number on the Federal Certification Label. (See Illustration LA-05.)



LA-10
Vehicle Identification Number



LA-15
Federal Certification Label and VIN Plate on Door Post

Finding Information

The Contents lists *sections* (and their respective *pages*) containing wiring diagrams and other information. The Index lists *pages* on which the indexed topics can be found.

Sheet numbers indicated by last two digits in the drawing number (lower right-hand corner of the drawing when viewed at the normal viewing angle) refer to the engineering drawing page numbers but are *not* in numerical order. These numbers are *not* meant to match the manual section or page numbers and are otherwise not referenced.

NOTE: If you are using the Adobe Acrobat version of this document printing out pages for detailed study is recommended because of the 90° rotation of the diagrams. Printing individual pages or a range of pages from the Acrobat Reader is easily accomplished by selecting File, Print, and then the desired print range.



WARNING: Connecting unauthorized devices to the vehicle's wiring can potentially cause vehicle malfunction, damage, fire, personal injury, and/or voiding of the warranty. Contact Utilimaster before connecting any devices to the vehicle's wiring other than plugging into a supplied accessory outlet (cigarette lighter).

Reporting Safety Defects

United States Only

If you believe that your vehicle has a defect that could cause a crash, injury, or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Utilimaster.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Utilimaster.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at **888-327-4236** or file a complaint online at:

<http://www-odi.nhtsa.dot.gov/ivoq>

or write to:

**U.S. Department of Transportation
National Highway Traffic Safety Administration
Office of Defects Investigation
NVS-216, 1200 New Jersey Avenue, SE
Washington, DC 20590**

Canada Only

If you believe that your Canadian-registered vehicle has a defect that could cause a crash, injury, or death, you should immediately inform Transport Canada, in addition to notifying Utilimaster.

To contact Transport Canada, call **800-333-0510** (or **613-993-9851** in the Ottawa region) or write to:

**Transport Canada
Motor Vehicle Defect Investigation
PO Box 8880
Ottawa, Ontario, K1G 3J2**

Safety Considerations—Notes, Cautions, and Warnings

As you read through the procedures, you will come across NOTES, CAUTIONS, and WARNINGS. Each one is there for a specific purpose.

- **NOTES** give you additional information that will help you to complete the procedure.
- **CAUTIONS** warn you against making an error that could damage the vehicle.
- **WARNINGS** remind you to be careful when there is a risk of personal injury.



Below are some basic WARNINGS that you should heed when you work on the vehicle's body. They are not all inclusive, however, and common sense must be used when servicing vehicles.

- Always wear safety glasses and other proper protective equipment (gloves, steel-toed shoes, face shields, knee pads, hearing protection) as appropriate to the process.
- Use safety stands and/or wheel blocks whenever you are underneath the vehicle.
- Put the transmission in Park and set the parking brake before working on the vehicle.
- Be sure that the ignition switch is Off unless otherwise required by the procedure.
- Operate engines only in well-ventilated areas.
- Keep yourself and your clothing away from the radiator fan, belts, and any moving parts when the engine is running.
- Keep hands and other objects clear of the radiator fan blades. The electric fan can start at any time even though the ignition is Off. Disconnect the fan when working under the hood.
- Avoid contact with hot metal parts, such as the radiator or exhaust system.
- Do **NOT** smoke while working on the vehicle.
- Always remove rings, watches, hanging jewelry, and loose clothing before working on a vehicle. Tie long hair securely behind your head.
- Become familiar with all warning labels.
- Always maintain firm footing and control of tools.
- Use only tools that are in good condition, and use them only in the appropriate manner.
- Get help when needed to avoid injuries caused by overexertion.
- Always be aware of the location of other people and potential trip hazards (e.g., air lines, electrical cords, tools).
- Utilimaster recommends that a licensed automotive air-conditioning specialist work on the vehicle's air-conditioning (HVAC) system.
- Avoid breathing A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, and throat. To remove R-134a from the A/C system use service equipment certified to meet the requirements of SAE J2210 (R-134a recycling equipment). If accidental system discharge occurs, ventilate work area **before** resuming service. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.


Battery



WARNING: To avoid accidental shock or damage to the vehicle, disconnect the battery before servicing an electrical component. Check your chassis-supplied operation or service information for specific recommendations.



WARNING: Always remove the (black) Negative cable(s) first and connect it last.

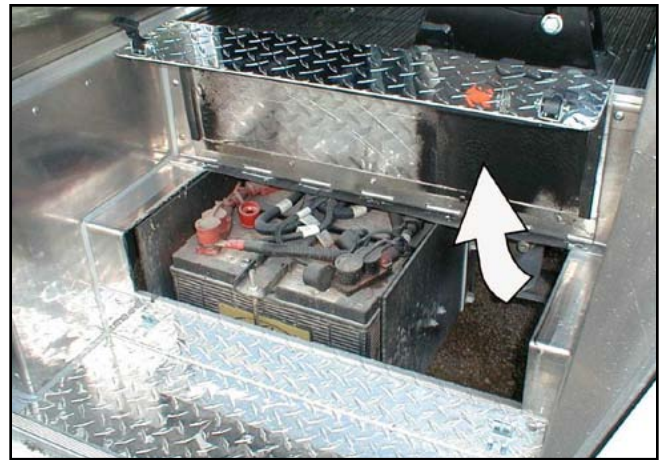

*Illustration BA-10
Stepwell Battery Access*

Access

NOTE: The batteries on most Aeromasters are located through an access panel in the right-hand stepwell. (See Illustration BA-10.) Otherwise see the Chassis Service Manual.

Disconnection

1. Make sure the ignition switch is Off.
2. Disconnect the **Negative (black)** battery cable(s) **first**. (See Illustration BA-20.)
3. Tuck the battery cable away from the terminal to prevent accidental contact.
4. When servicing the vehicle is finished, reconnect the cable.



*Illustration BA-20
Negative (black) Cable Disconnected and Tucked Away*

Removal

1. Disconnect battery. (See the Disconnection section.)
2. Remove the Positive battery cable(s).
3. Remove the battery hold-downs.
4. Note the location of the posts and remove the battery from the vehicle.


Installation

1. Install the battery in the battery tray—**in the same orientation**.
2. Secure the battery hold-downs.
3. Connect the battery cables, **Negative last**.

NOTE: Remember to fasten the access panel.

Symbol Codes and Identification

Codes and Symbols

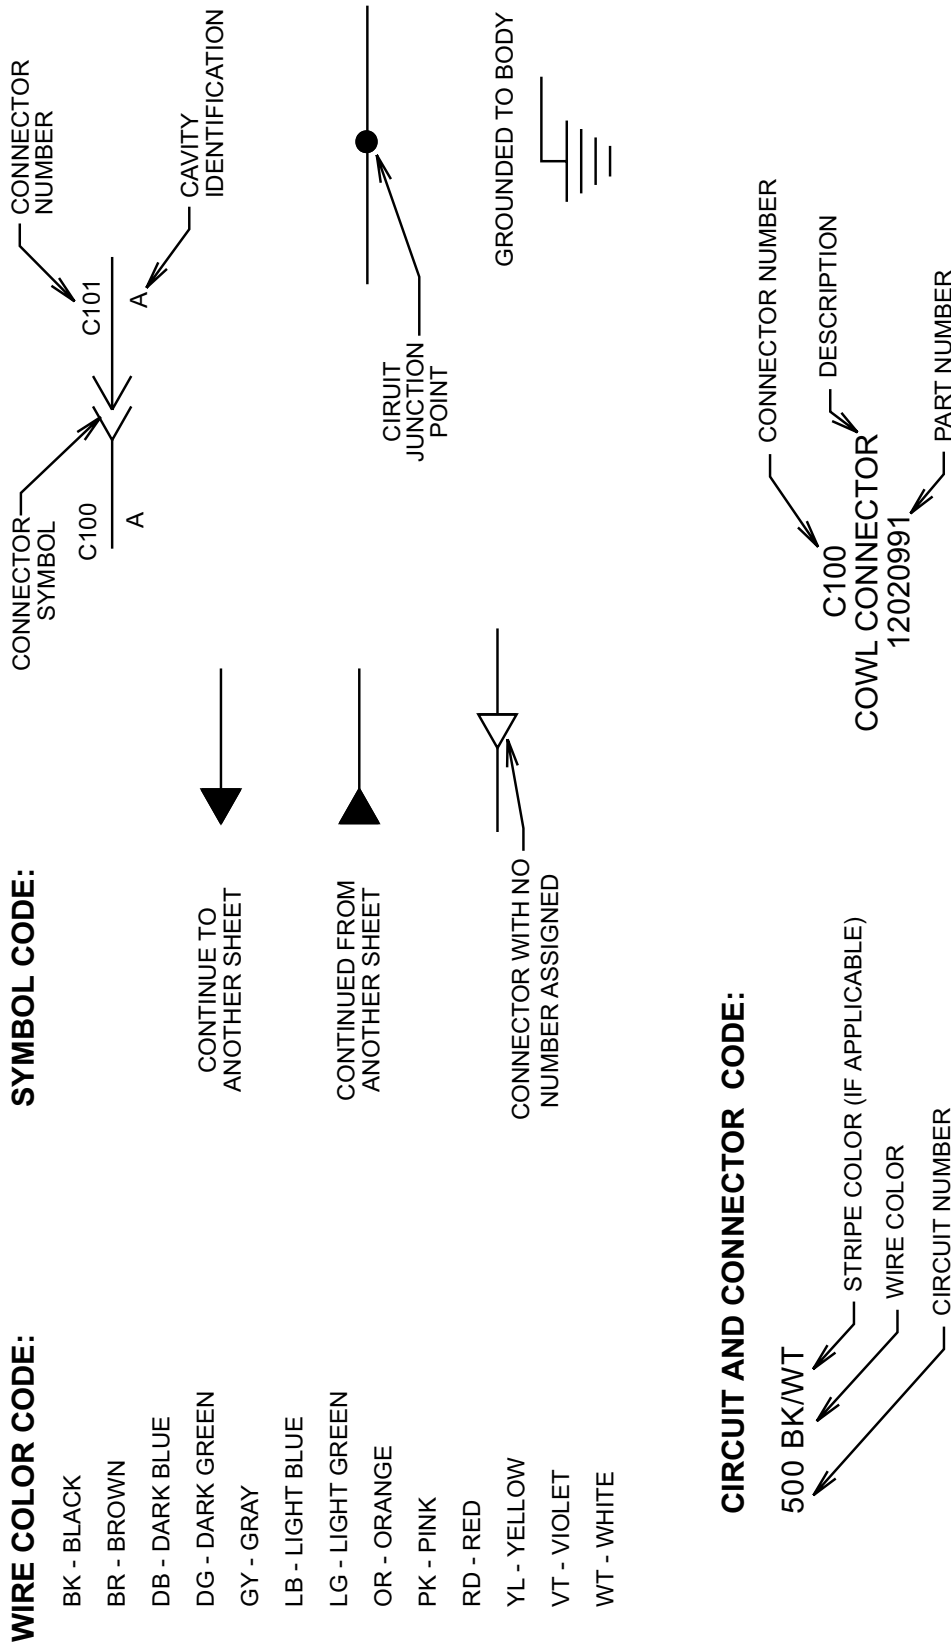

NOTES:

- 1) All connectors are shown in the **load (wire lead insertion)** position.
- 2) Special customer options may not be covered by these diagrams.
- 3) Wire colors on some optional equipment may vary from this document.

Circuit Number Identification

CIRCUIT NUMBER IDENTIFICATION


CIRC No.	COLOR	DESCRIPTION	CIRC No.	COLOR	DESCRIPTION	CIRC No.	COLOR	DESCRIPTION
110	PINK W/BLACK STRIPE	IGNITION POWER	258	LIGHT BLUE W/WHITE STRIPE	AUXILIARY SWITCH	*925	BLACK	RIGHT DOOR OPEN SWITCH 2
120	ORANGE	WIPER POWER	280	LIGHT BLUE W/ RED STRIPE	ILLUMINATION	*926	YELLOW	BLKHD DOOR OPEN SWITCH 1
130	RED	CIGARETTE LIGHTER POWER	350	BLACK W/ PINK STRIPE	DOOR AJAR SIGNAL	*927	BLACK W/ WHITE STRIPE	LEFT DOOR SOLENOID 1
150	RED	BATTERY POWER	380	LIGHT BLUE	UPS SECURITY CIR 1	*928	BLACK W/ WHITE STRIPE	RIGHT DOOR SOLENOID 1
170	RED	AUXILIARY BATTERY POWER	381	VIOLET	UPS SECURITY CIR 2	*929	BLACK W/ WHITE STRIPE	BLKHD DOOR SOLENOID 1
200	DARK BLUE	DOVE LIGHT POWER	382	LT BLUE W/BLK STRIPE	UPS SEAT PRESSURE CIR 1	*930	BLACK W/ WHITE STRIPE	RIGHT DOOR SOLENOID 2
220	YELLOW	CARGO LIGHTS	383	VIOLET W/BLK STRIPE	UPS SEAT PRESSURE CIR 2	*931	BLACK W/ WHITE STRIPE	LEFT DOOR SOLENOID 2
222	YELLOW W/BLACK STRIPE	CARGO LIGHTS (3 WAY SWITCH)	500	BLACK	GROUND	*933	BLACK W/ WHITE STRIPE	BLKHD DOOR SOLENOID 2
224	YELLOW W/ WHITE STRIPE	CARGO LIGHTS (3 WAY SWITCH)	510	BLACK W/ WHT STRIPE	WIPER MOTOR GROUND	*934	RED	COMMUNICATION BUS HIGH
230	BROWN	TAIL/RUNNING LIGHTS	520	BLACK	DOVE LIGHT GRD	*935	BLACK	COMMUNICATION BUS LOW
231	BROWN W/ WHITE STRIPE	CLEARANCE LIGHTS ONLY	530	BLACK	HVAC GROUND	*936	RED	KEYLESS POWER
232	DARK GREEN	RIGHT TURN/STOP	540	BLACK	FRONT LIGHT GROUND	*940	YELLOW	STARTER RELAY
233	DARK GREEN	FRONT RIGHT TURN	700	DARK BLUE W/WHITE STRIPE	BLOWER MOTOR POWER (HVAC)	*941	YELLOW	ACCESSORY RELAY
234	RED	STOP ONLY	710	DARK GREEN	A/C SIGNAL (HVAC)	*942	ORANGE W/ BLACK STRIPE	RELAY COMMON
235	YELLOW	FRONT LEFT TURN	720	DARK GREEN	A/C SIGNAL (HVAC)	*943	PINK	IGNITION RELAY
236	LIGHT GREEN	BACK UP	721	DARK GREEN W/ WHITE STRIPE	A/C SIGNAL TO COMPRESSOR	*944	LIGHT BLUE	INTERIOR LIGHT RELAY
237	GRAY	UNIVERSAL TURN/STOP	731	DARK BLUE	HVAC WATER VALVE SIGNAL	*945	ORANGE	INTERIOR LIGHT RELAY
238	YELLOW	LEFT TURN/STOP	820	DARK GREEN	WIPER LOW	*946	YELLOW	INTERIOR LGHT RELAY OUTPUT
240	LIGHT GREEN W/ BLACK STRIPE	LO BEAM (HEADLIGHT)	830	RED	WIPER HIGH	*947	PINK W/ BLACK STRIPE	HORN TRIGGER (GND)
241	LIGHT GREEN W/ WHITE STRIPE	RIGHT LO BEAM (HEADLIGHT)	840	GRAY	WIPER PARK	*948	LIGHT GREEN	ACC AND IGN RELAY TRIGGER
242	RED W/ BLACK STRIPE	HIGH BEAM (HEADLIGHT)	890	VIOLET	WASHER MOTOR	*950	BLACK	REAR DOOR OPEN SWITCH 2
243	RED W/ WHITE STRIPE	LEFT HIGH BEAM (HEADLIGHT)	*920	DARK GREEN	EXTERIOR DOOR SWITCH	*960	YELLOW	REAR DOOR OPEN SWITCH 1
254	DARK GREEN	AUXILIARY SWITCH	*921	DARK GREEN	BULKHEAD DOOR SWITCH	*961	BALCK W/ WHITE STRIPE	REAR DOOR SOLENOID 2
256	DARK GREEN W/ WHITE STRIPE	AUXILIARY SWITCH	*922	BLACK	LEFT DOOR OPEN SWITCH 2	*962	BALCK W/ WHITE STRIPE	REAR DOOR SOLENOID 1
257	LIGHT BLUE	AUXILIARY SWITCH	*923	YELLOW W/BLACK STRIPE	LEFT DOOR OPEN SWITCH 1	*970	WHITE	HORN OUTPUT
			*924	YELLOW	RIGHT DOOR OPEN SWITCH 1	*980	DARK GREEN W/ BLACK STRIPE	PASSENGER DOOR OVERRIDE

* SPECIFIC TO THE VACS SYSTEM.


NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Ultilmaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

Circuit ID - Diagram 58231212ax08 Sheet 8

Harness Layout Models 31, 32, and 35

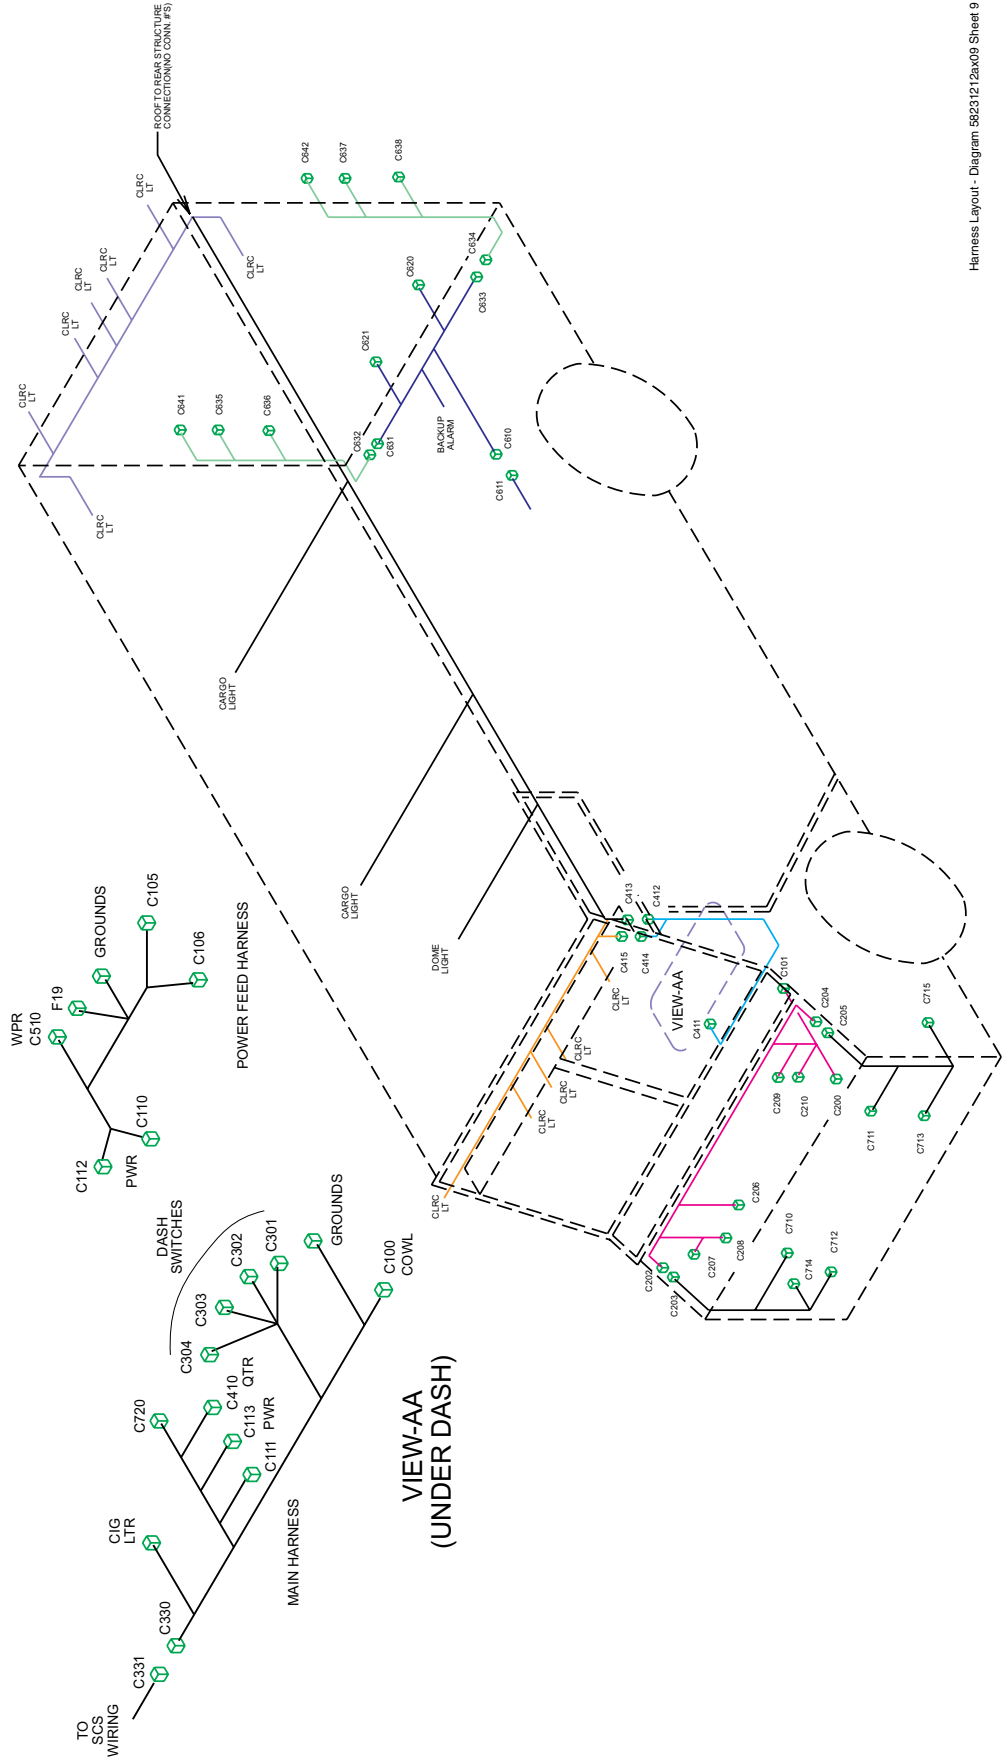


Harness Layout Models 40, 41, and 42

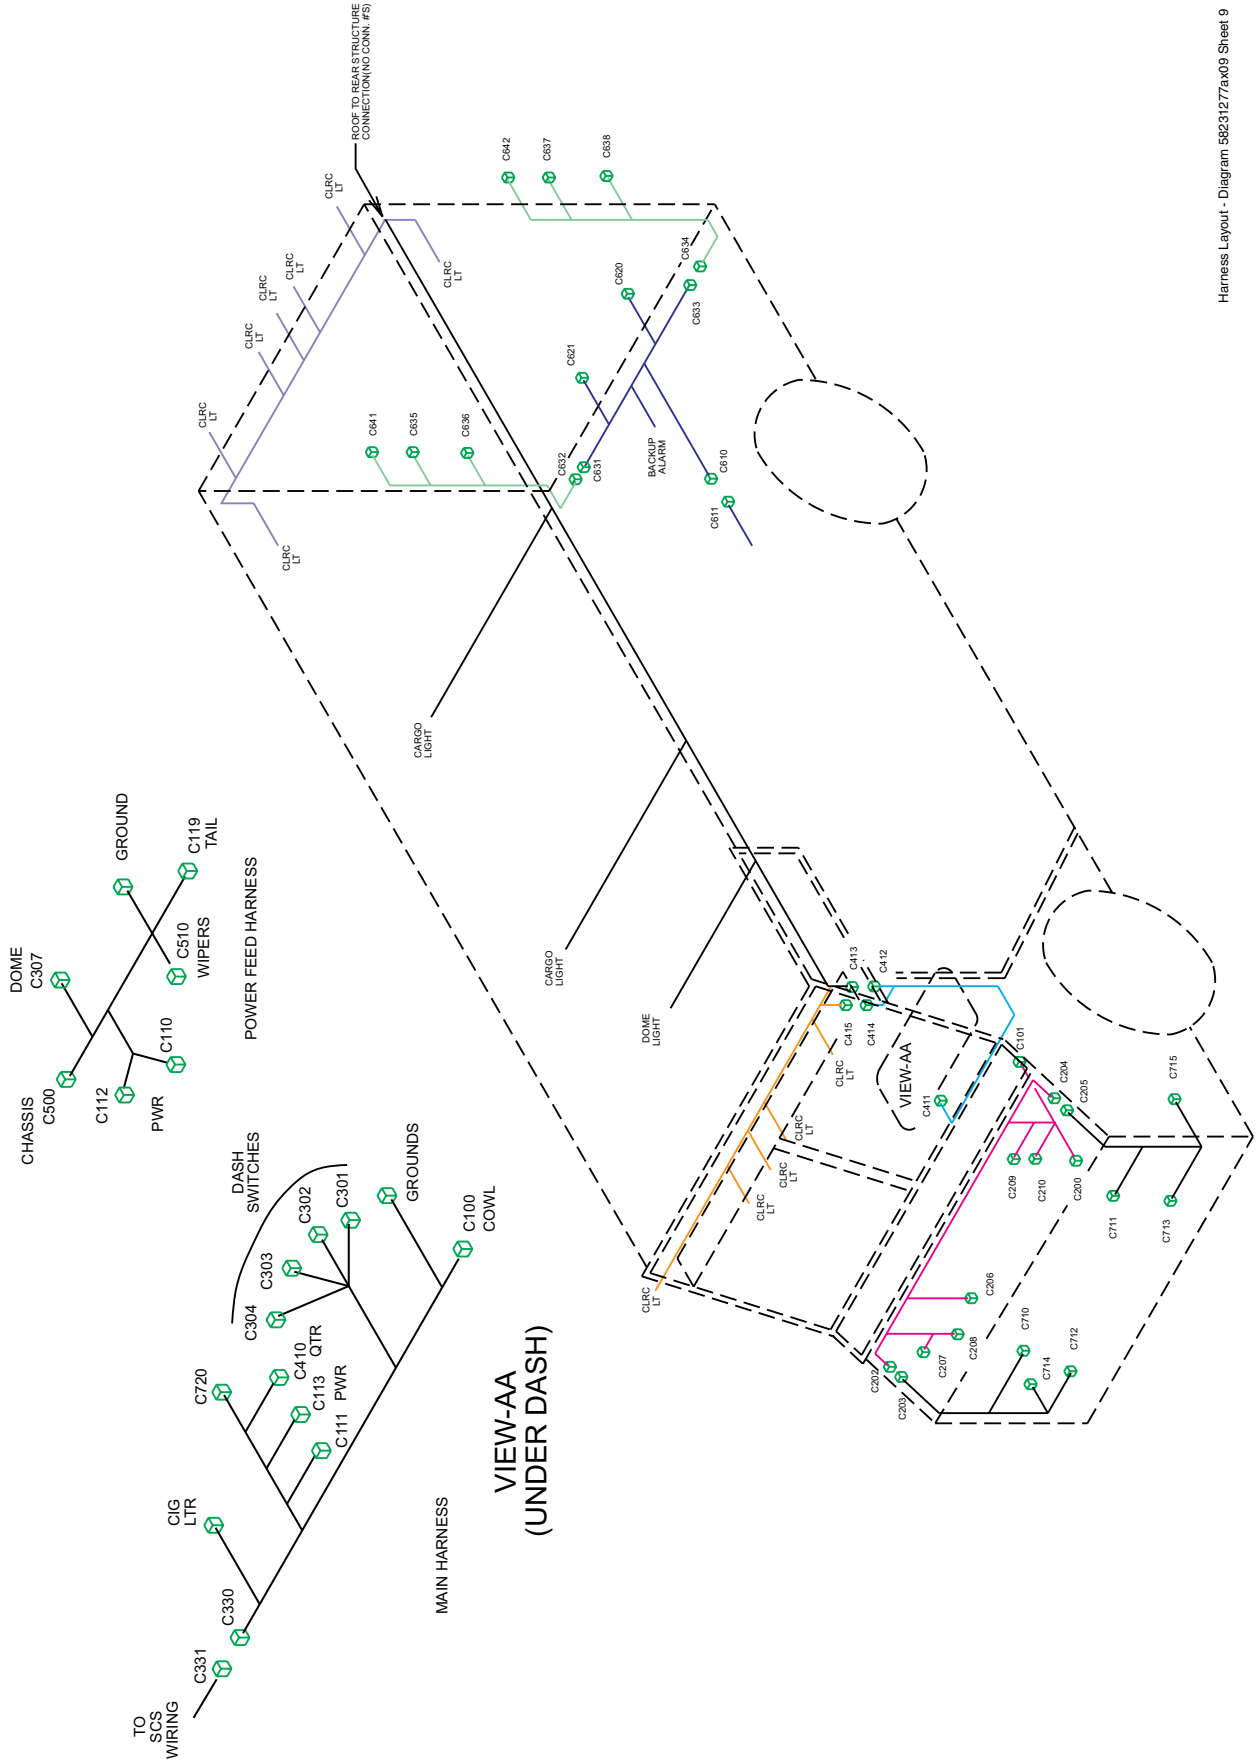

Harness Layout - Diagram 56231277ax09 Sheet 9


Connectors

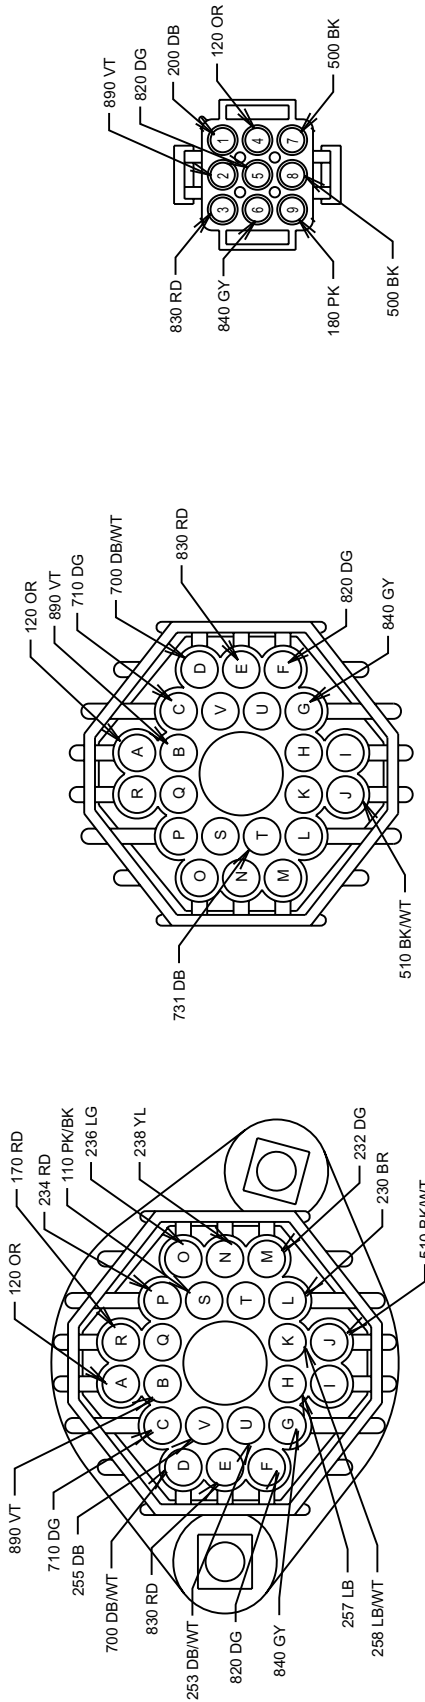


C100
COWL CONNECTOR
12020991

C101
COWL CONNECTOR
12020005


C110
POWER FEED #1 PLUG
770021-1

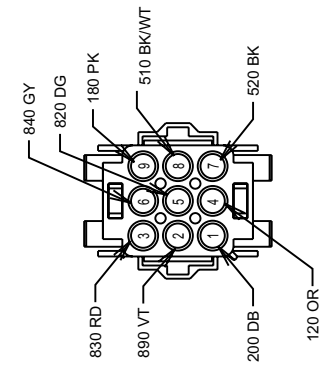


C111
POWER FEED #1 CAP
770028-1

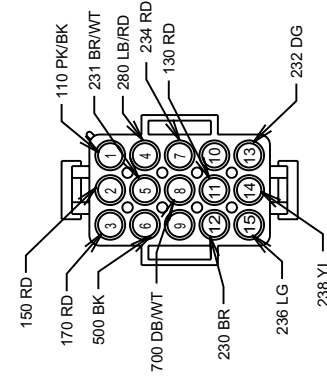

C112
POWER FEED #2 PLUG
770023-1

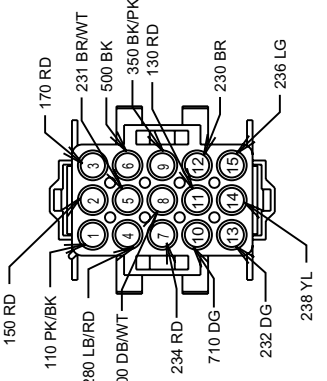


C113
POWER FEED #2 CAP
770030-1

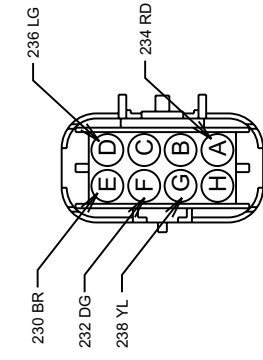


C119
TAIL LIGHT FEED
15326655


Connectors (continued)

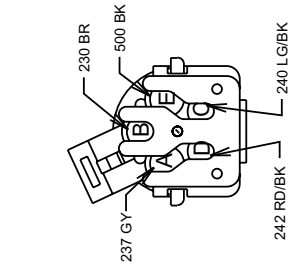


C205
LT HEADLIGHT FEED
12034342

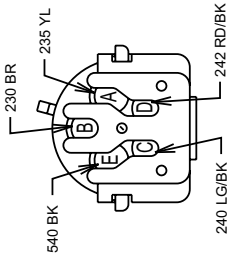


C204
LT HEADLIGHT DIST
12065158

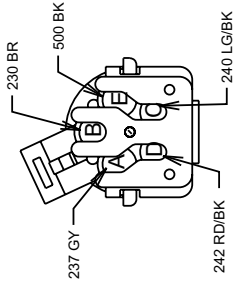


C203
RT HEADLIGHT FEED
12034342

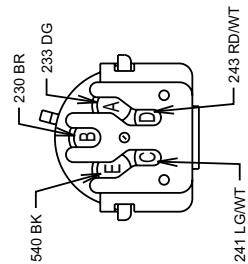


C202
RT HEADLIGHT DIST
12065158

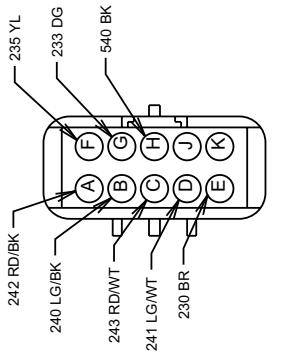


C200
FORWARD LIGHT FEED
1352661

 


C209
A/C JUMPER
12015791

 


C208
WIPER MOTOR
12015791

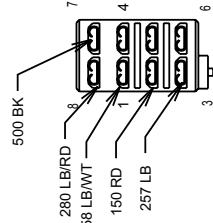


C302
AUXILIARY SWITCH #2
999-16716-001

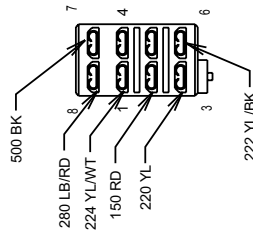


C301
AUXILIARY SWITCH #1
999-16716-001

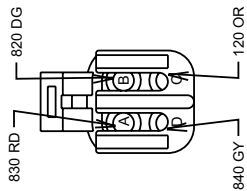


C207
WIPER MOTOR
12015798

 

C206
WASHER PUMP
480115-1

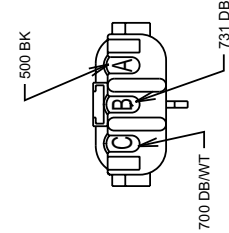


C212
HVAC WATERVALVE FEED
12015793

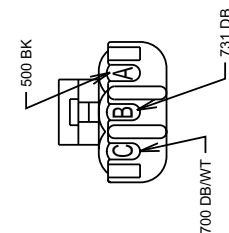


C211
HVAC WATERVALVE DIST.
12010717

Connectors - Diagram 58231212ax03 Sheet 3


Connectors (continued)

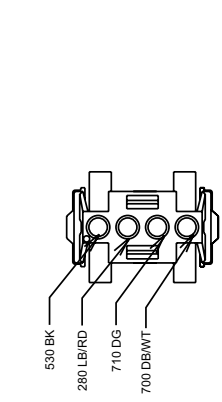


C331
HVAC DIST
770026-1

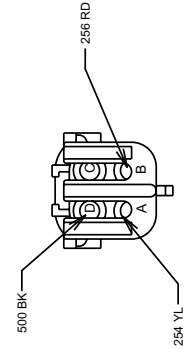


C340
AUXILIARY HEATER (SCS)
12015024

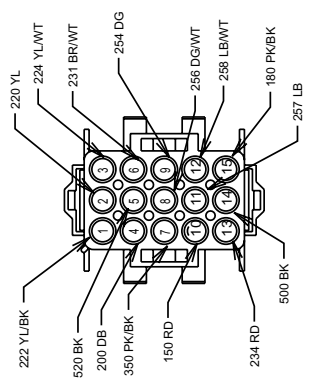


C413
QTR POST (ROOF)
770030-1

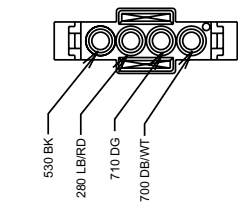


C330
HVAC FEED
770019-1

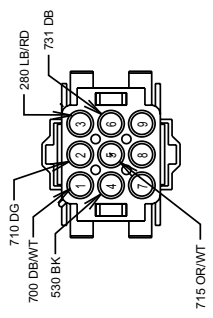


C334
HVAC ELECTRONIC DIST.
770028-1

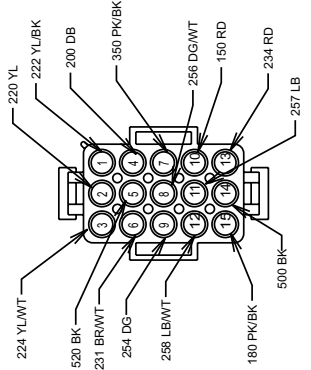


C412
QTR POST (POST)
770023-1

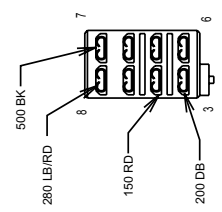


C307
DOME LIGHT SWITCH
999-16716-001

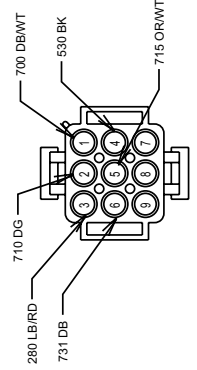


C304
AUXILIARY SWITCH #4
999-16716-001

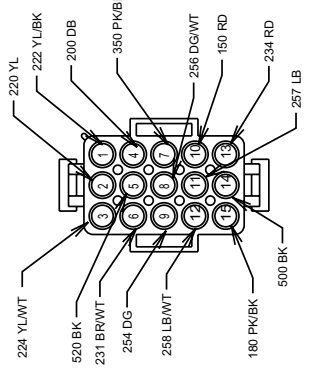


C411
QTR POST (POST)
770023-1

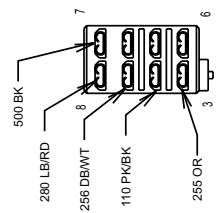

C303
AUXILIARY SWITCH #3
999-16716-001

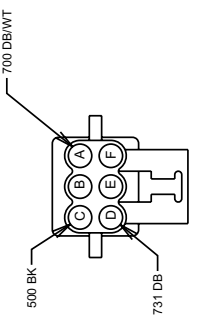


C332
HVAC WATER VALVE
12052848

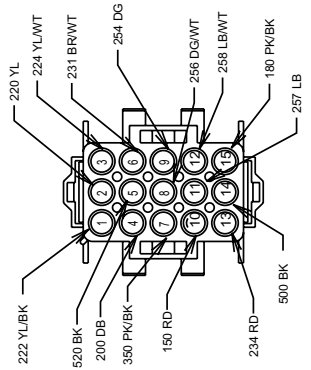


C410
QTR POST (DASH)
770030-1


Connectors (continued)

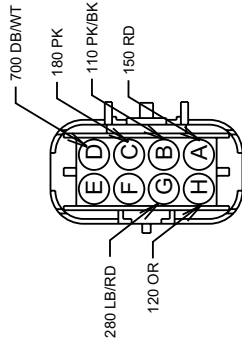


C500
BODY BUILDER
15326655

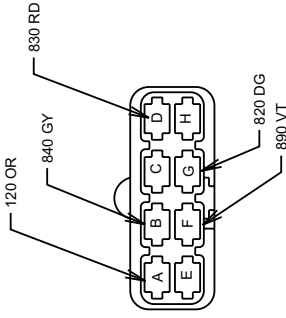


C510
INTERMITTENT
WIPER SWITCH
02963972

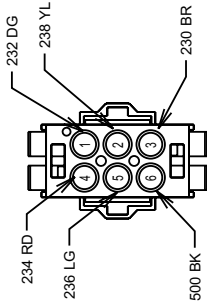


C419
INTERIOR ROUTED
REAR LIGHTING
770027-1

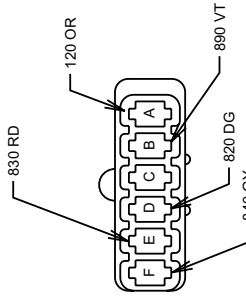


C510
WIPER SWITCH
06288539

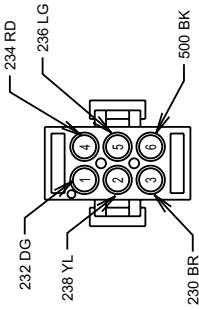


C418
INTERIOR ROUTED
REAR LIGHTING
770020-1

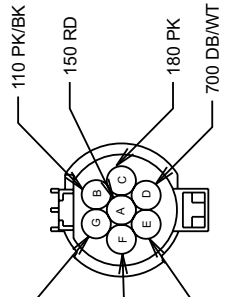


C500
BODY BUILDER
MERCEDES ENGINE
12110753

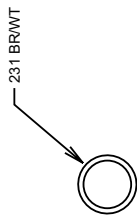


C415
QTR POST (ROOF)
MOLDED CONNECTOR

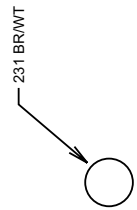


C414
QTR POST (POST)
MOLDED CONNECTOR

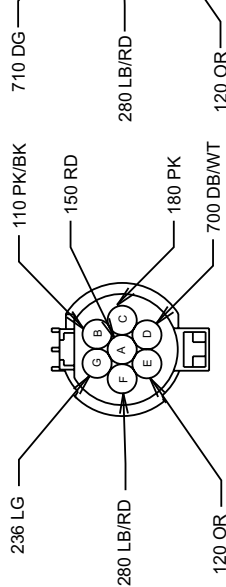


C500
BODY BUILDER
CUMMINS ENGINE
12110753

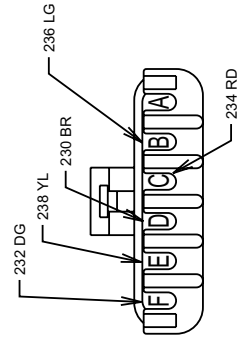


C611
FREIGHTLINER REAR LIGHT FEED
12010975

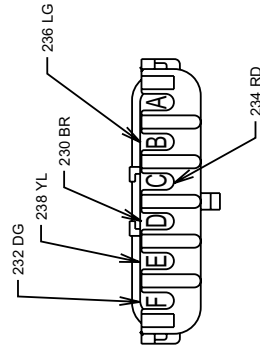


C610
REAR LIGHT FEED
12020786

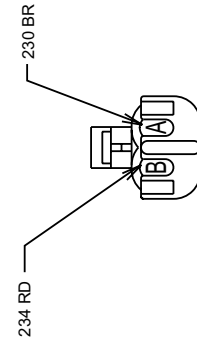


C511
BRAKE AND CLEARANCE
LIGHT FEED
12010973

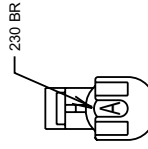

C622
LICENCE PLATE LIGHT
12015791

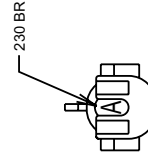


C621
LICENCE PLATE
LIGHT FEED
12010966

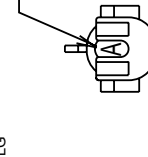


C620
LICENCE PLATE
LIGHT FEED
12010966


Connectors (continued)

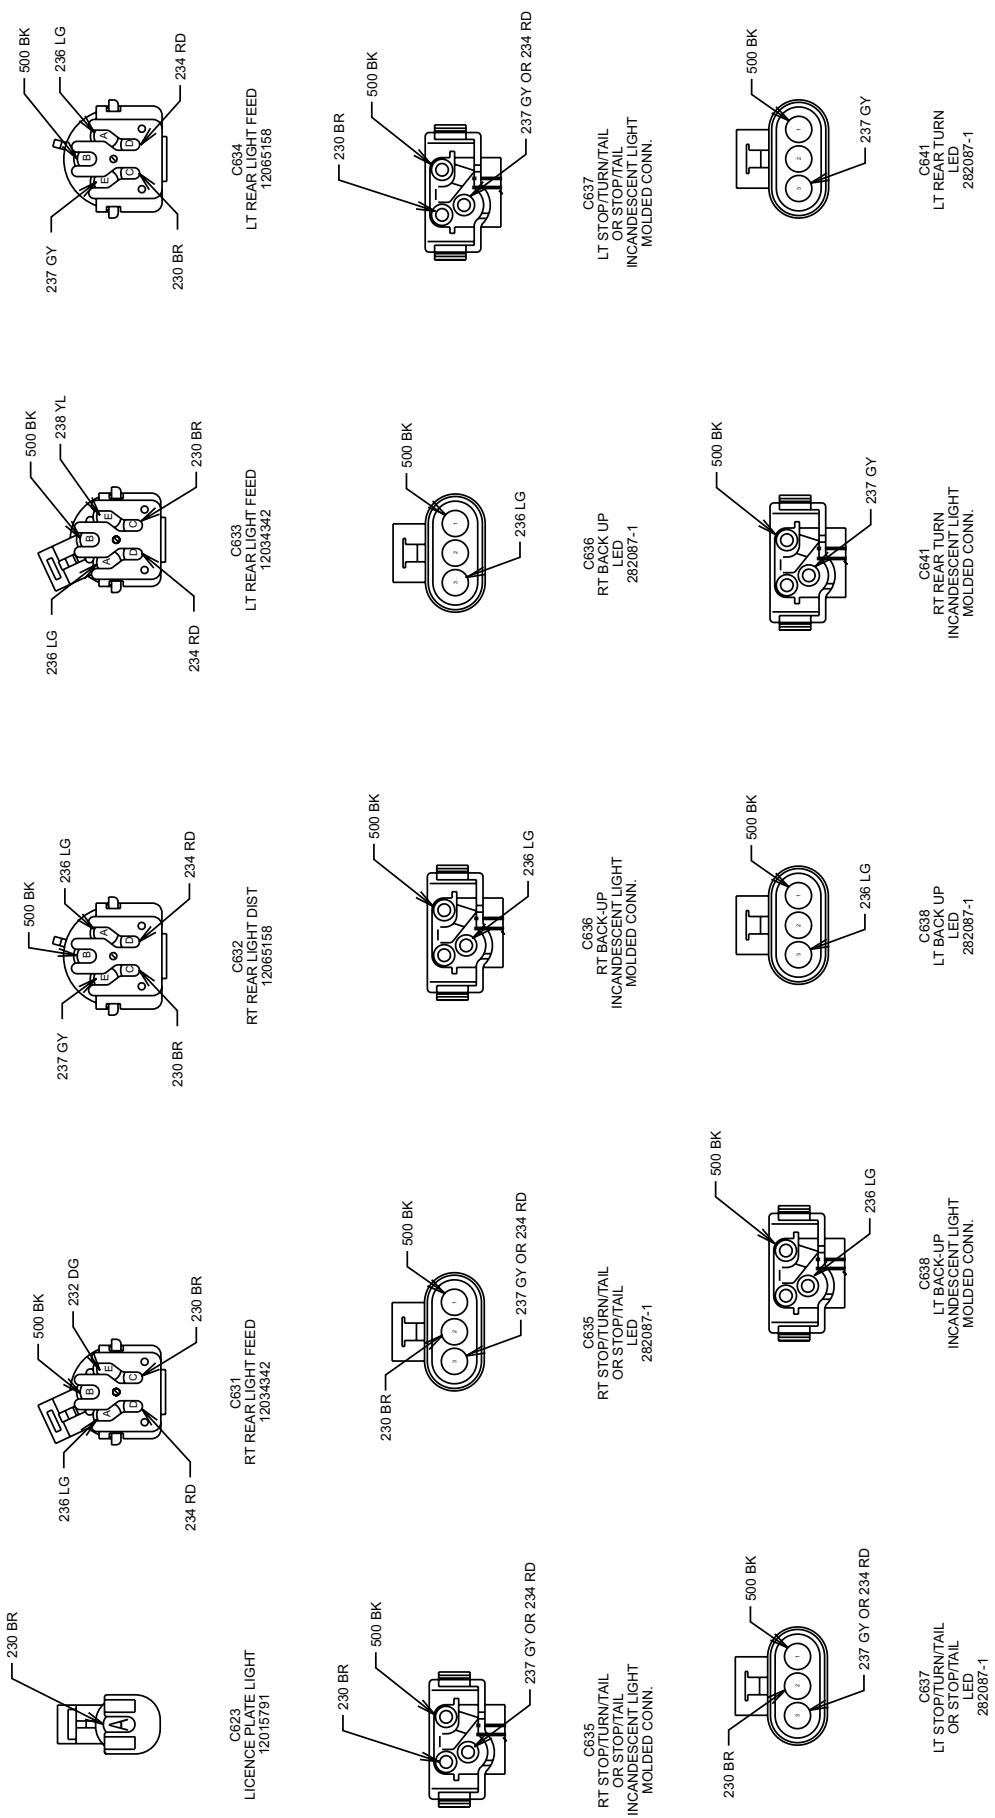


Connectors (continued)

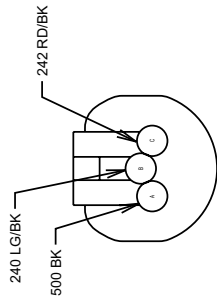


C710
RT HEADLIGHT
HELLA HALOGEN
12048369

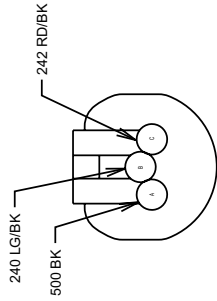


C711
LT HEADLIGHT
HELLA HALOGEN
12048369

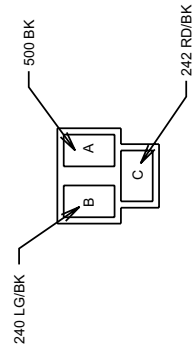


C710
RT ATC HEADLIGHT
INCANDESCENT OR HALOGEN
12077384

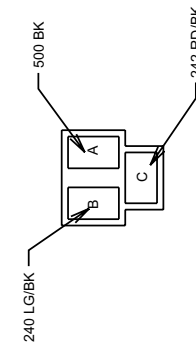


C711
LT ATC HEADLIGHT
INCANDESCENT OR HALOGEN
12077384

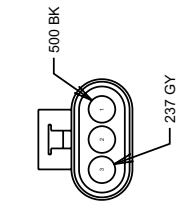


C641
LT REAR TURN
INCANDESCENT LIGHT
LED
282087-1

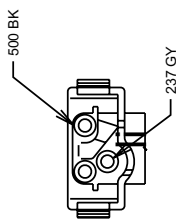


C641
LT REAR TURN
INCANDESCENT LIGHT
MOLDED CONN.

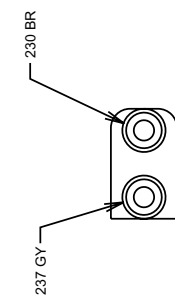


C715
LF FRONT
SIDEMARKER LIGHT
MOLDED CONN.

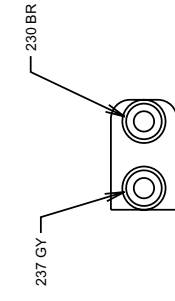


C714
RT FRONT
SIDEMARKER LIGHT
MOLDED CONN.

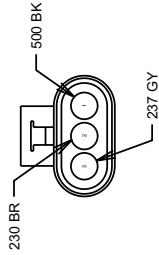


C713
LT FRONT TURN
LED
282087-1

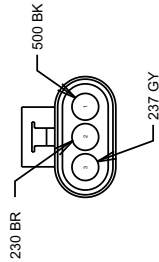

C712
RT FRONT TURN
LED
282087-1

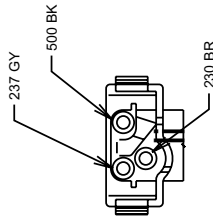


C712
RT FRONT TURN
INCANDESCENT LIGHT
MOLDED CONN.

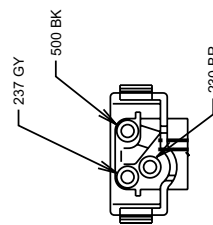

C713
LT FRONT TURN
INCANDESCENT LIGHT
MOLDED CONN.

Wiring Diagrams

Accessory Outlet (Cigarette Lighter)

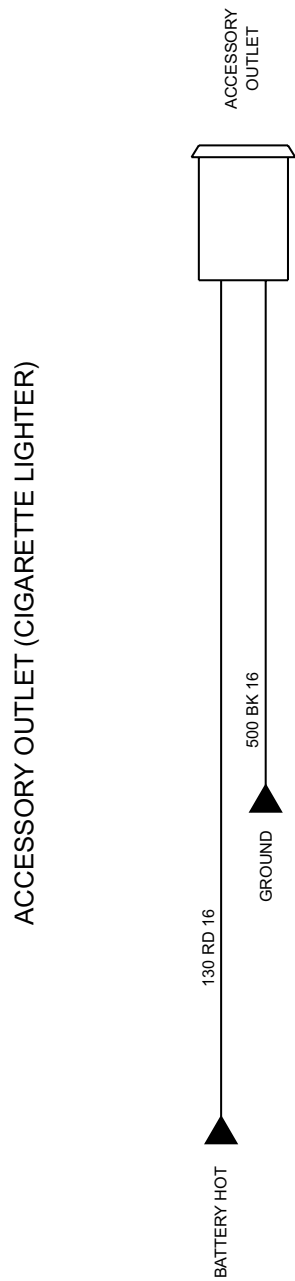


Accessory Outlet - Diagram 58231212ax32 Sheet 32



WARNING: Connecting unauthorized devices to the vehicle's wiring can potentially cause vehicle malfunction, damage, fire, personal injury, and/or voiding of the warranty. Contact Utilimaster before connecting any devices to the vehicle's wiring other than plugging into a supplied accessory outlet (cigarette lighter).

Back-up Camera


BACK-UP CAMERA SYSTEM

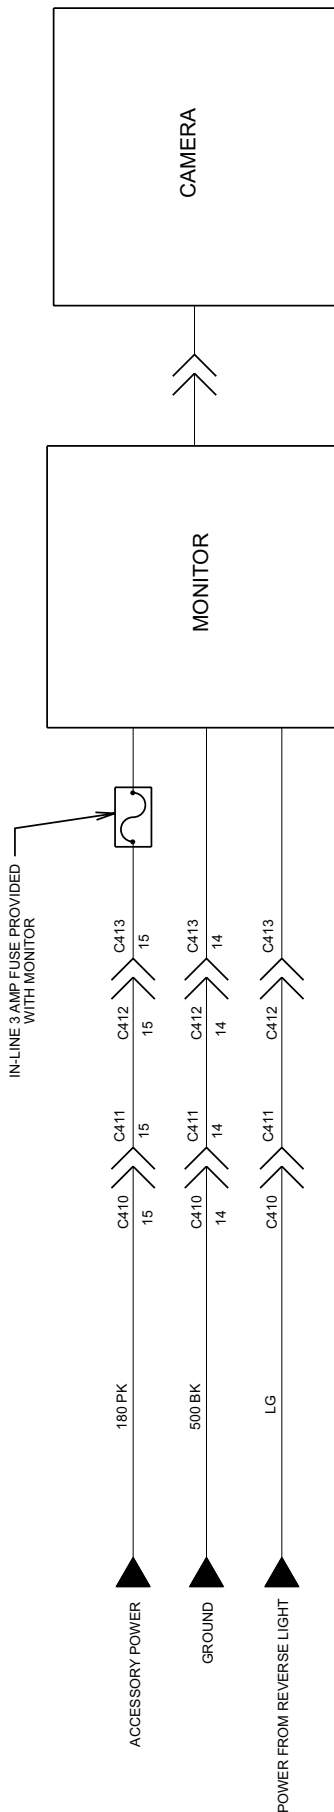

Back-up Camera - Diagram 56231212ax26 Sheet 26

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.


Door Ajar System

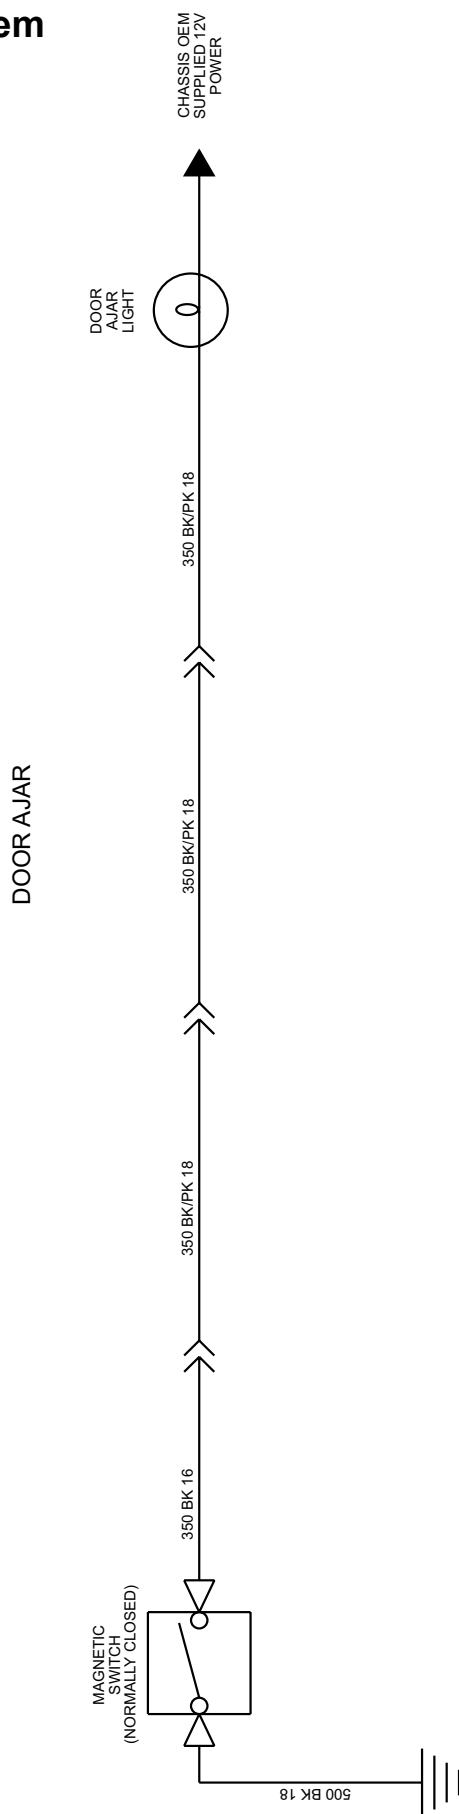

Door Ajar - Diagram 58231008ax Sheet 27


NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*

Fan, Driver Convenience




WARNING: Connecting unauthorized devices to the vehicle's wiring can potentially cause vehicle malfunction, damage, fire, personal injury, and/or voiding of the warranty. Contact Utilimaster before connecting any devices to the vehicle's wiring other than plugging into a supplied accessory outlet (cigarette lighter).

DASH FAN

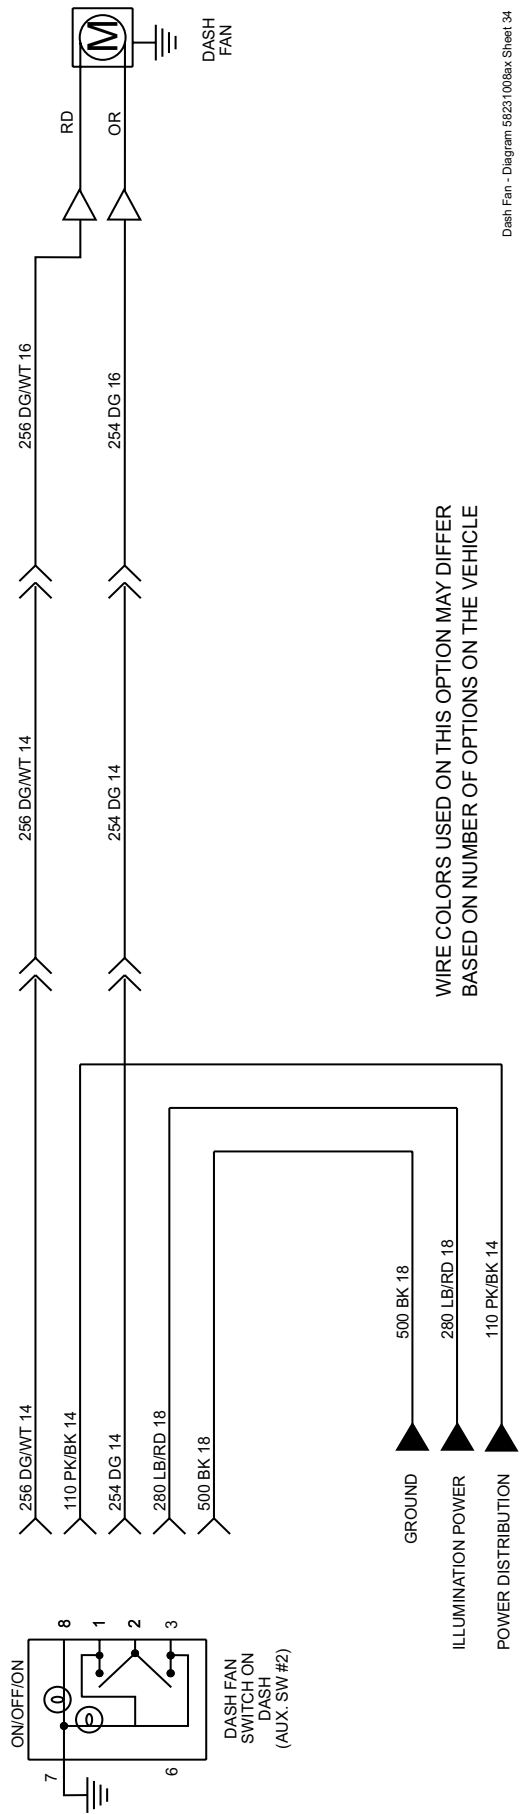

Grounding System

GROUNDING SYSTEM

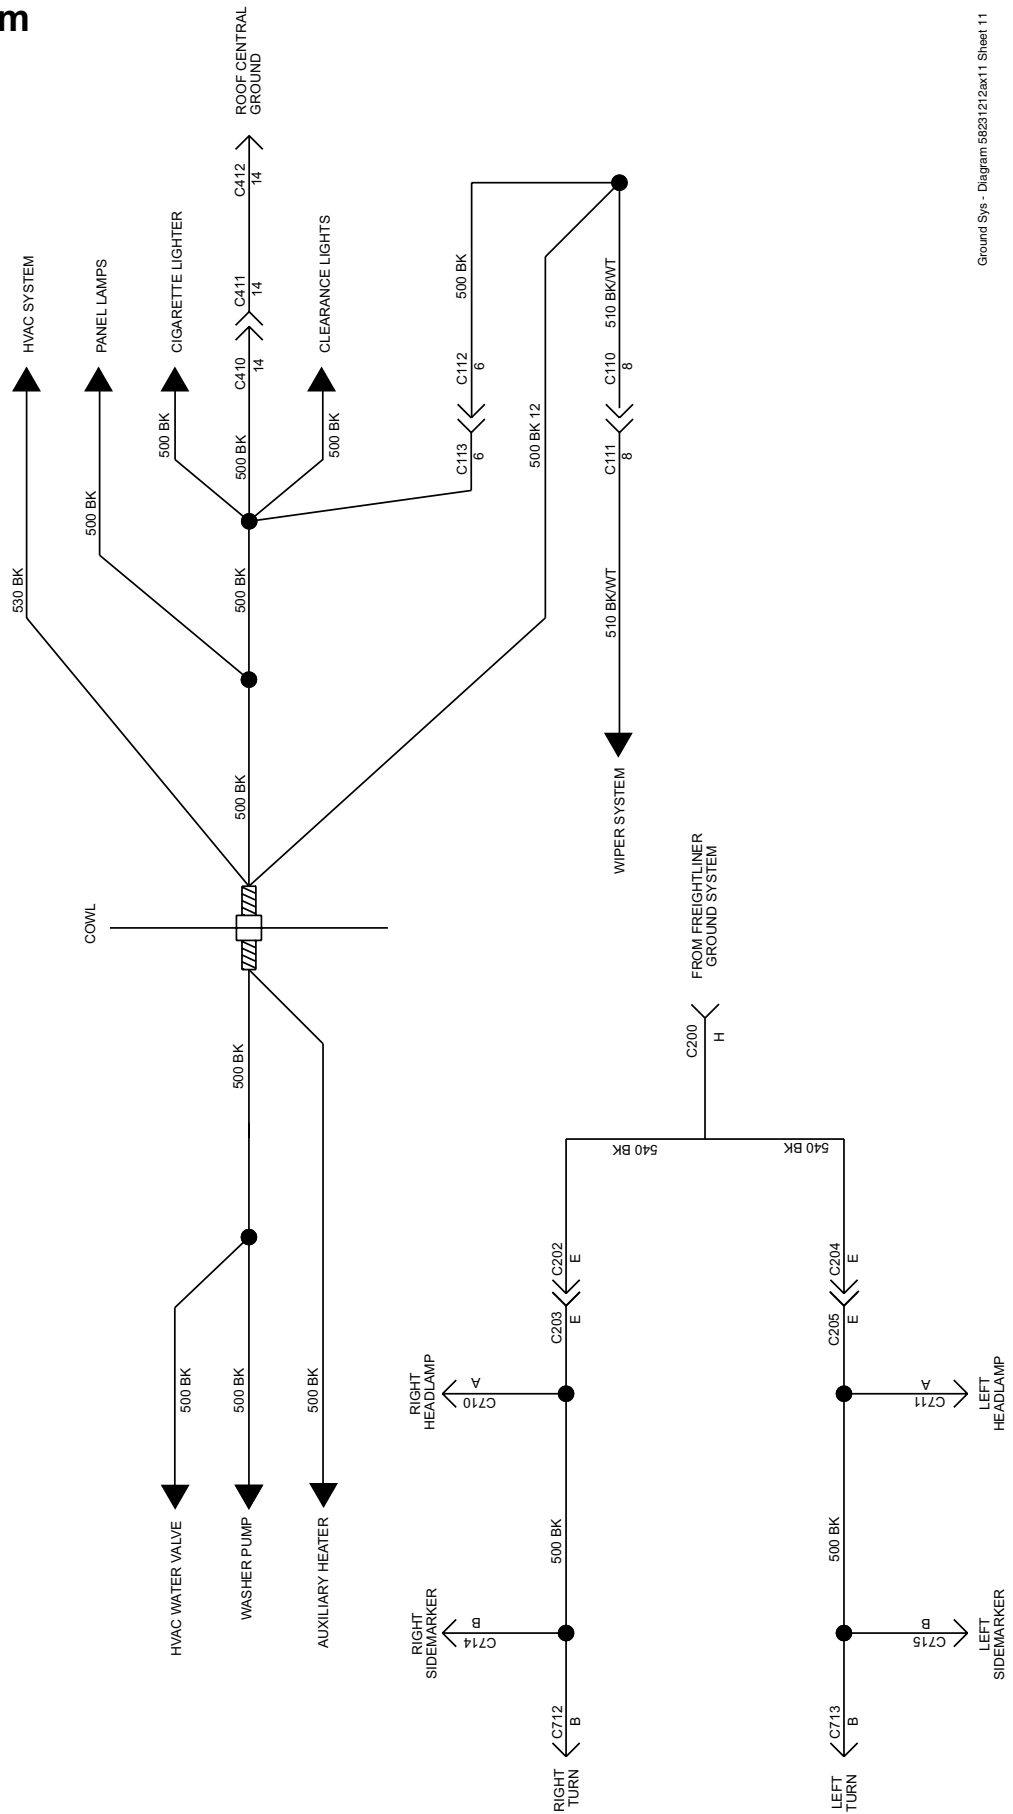


Ground Sys - Diagram 56231212ax11 Sheet 11

Heater and Air Conditioning

Auxiliary Heater

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.


AUXILIARY HEATER (DRIVER'S FOOT AREA)

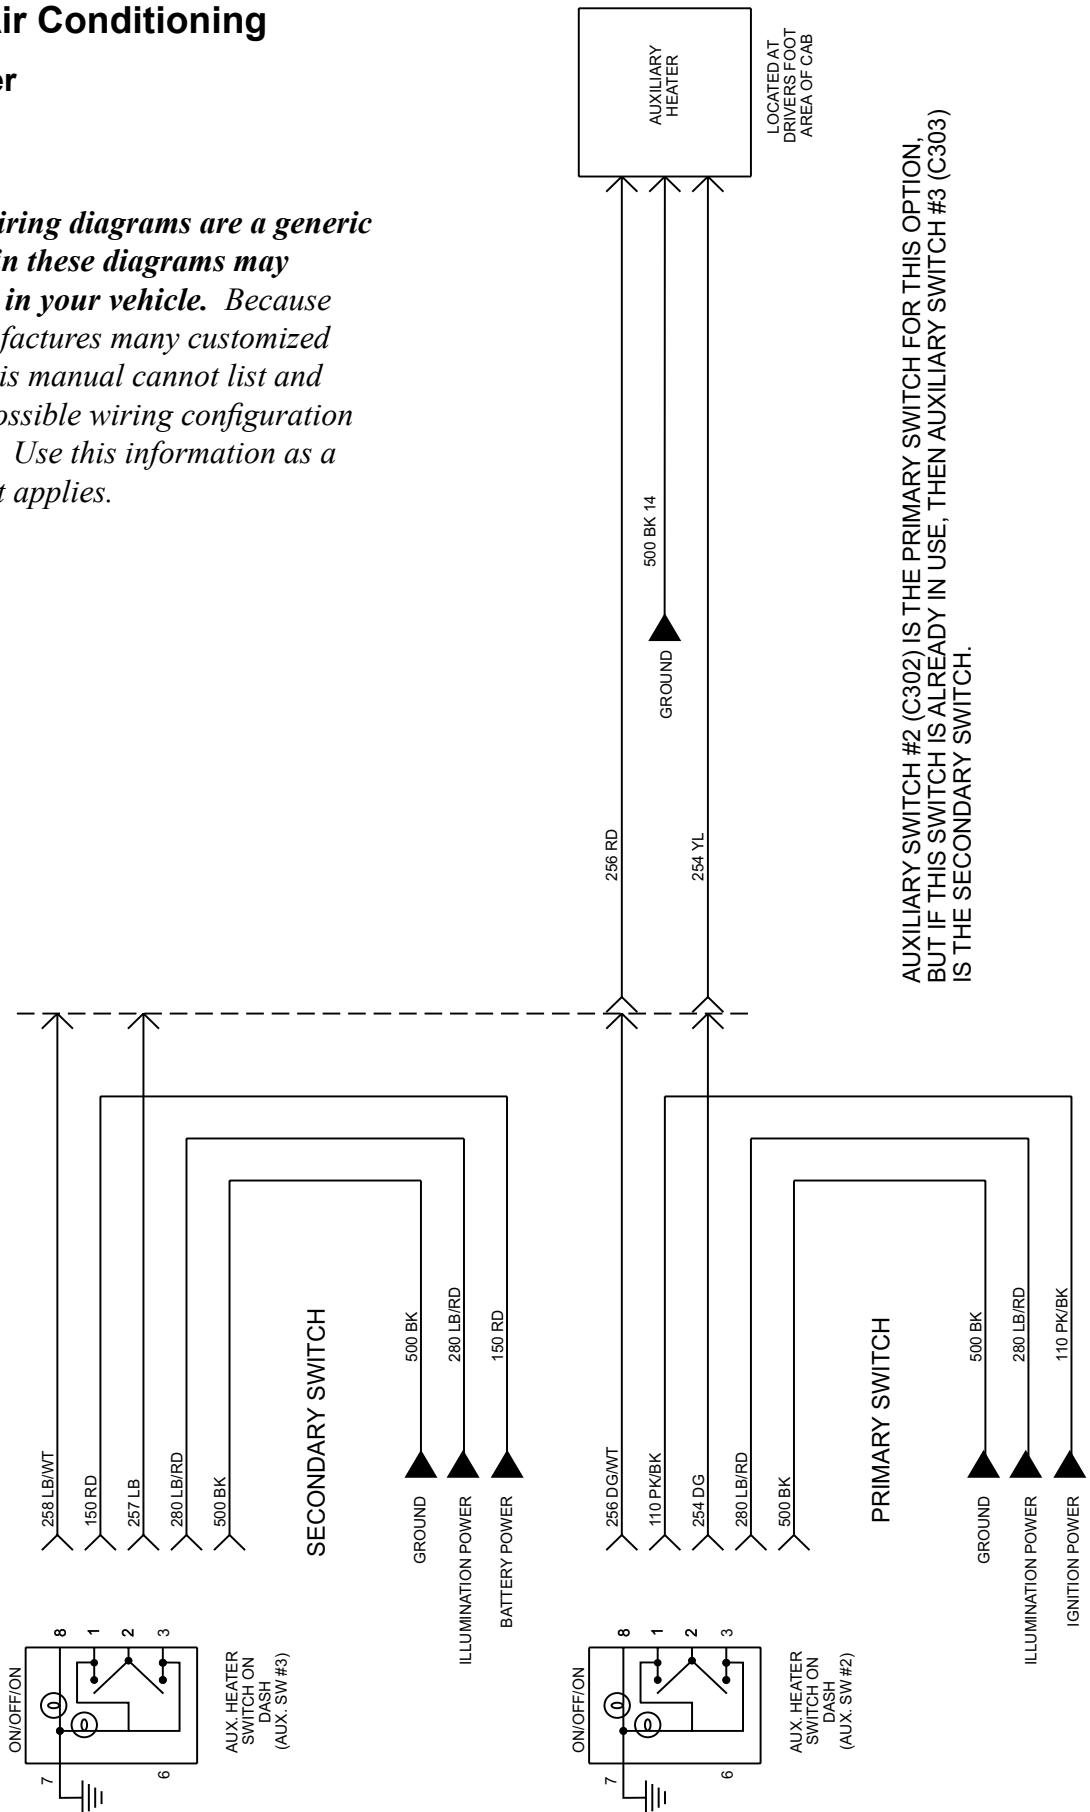

Heater and Air Conditioning


Heater Only (Electronic Controls)

HEAT ONLY ELECTRONIC CONTROLS

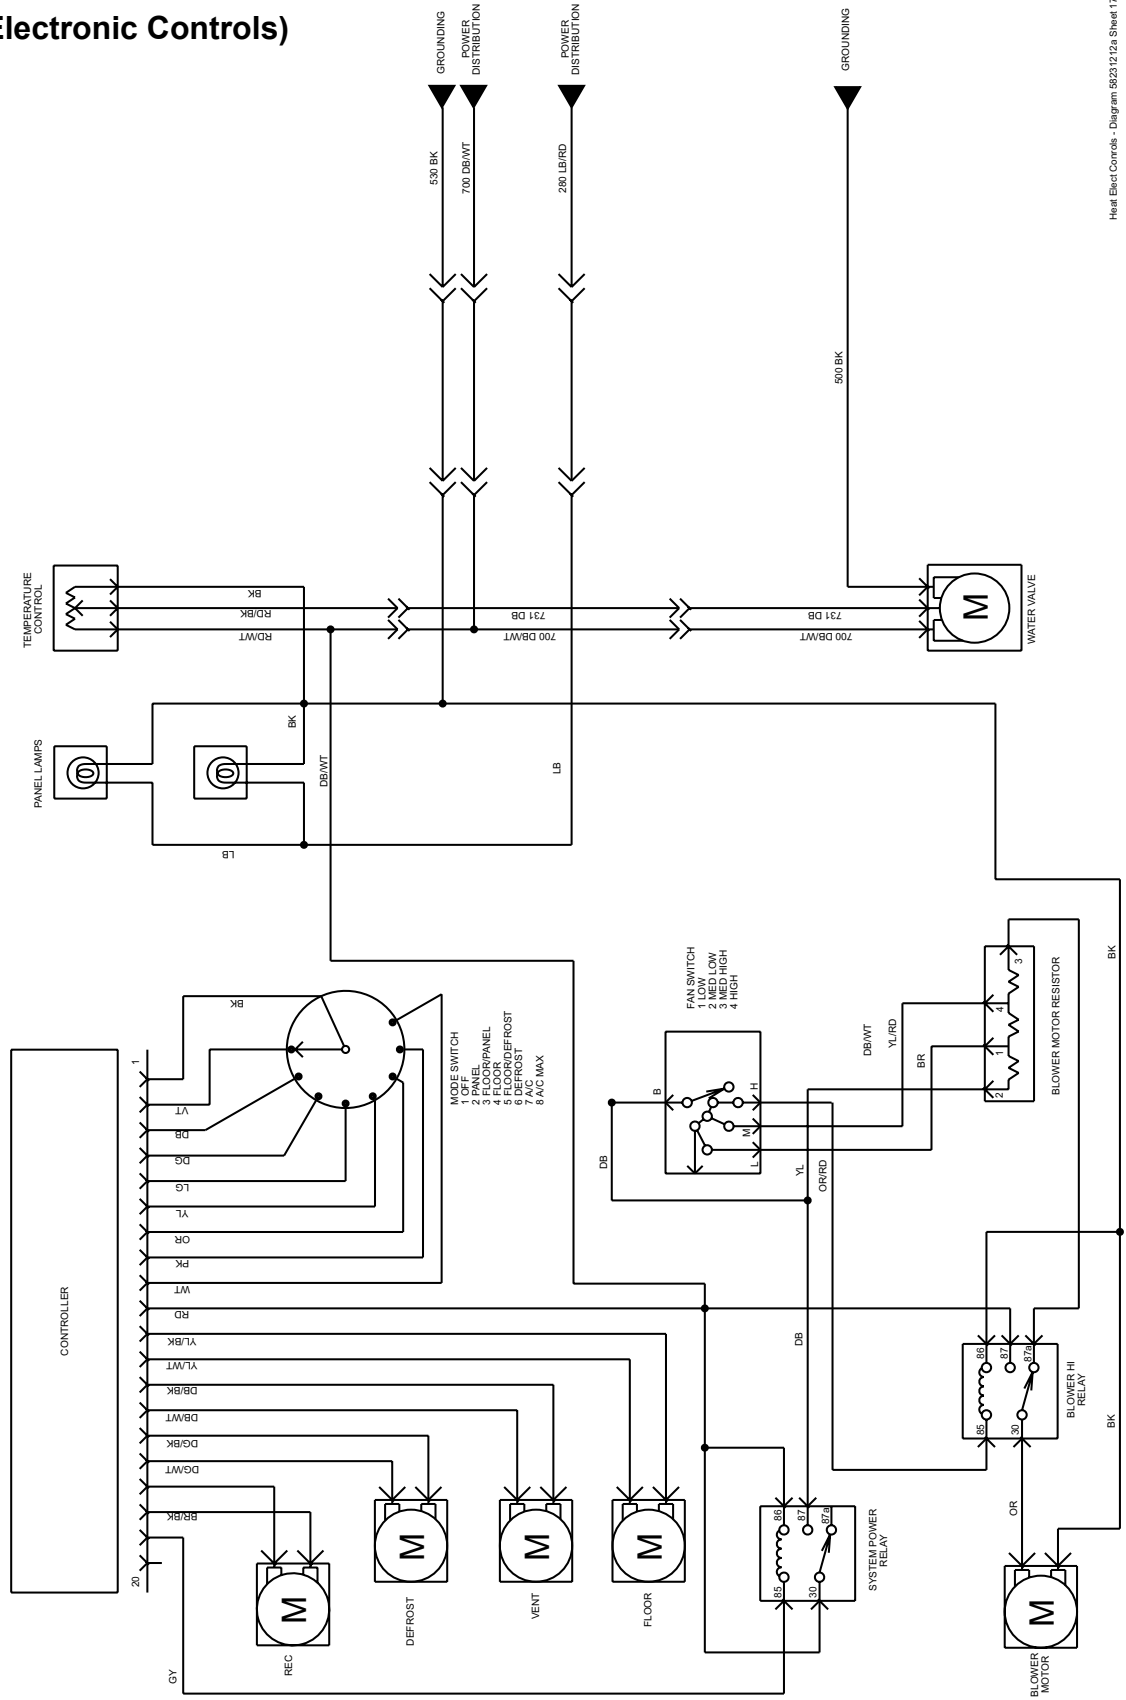


Heater and Air Conditioning (HVAC)

Heater with A/C System (Electronic Controls)

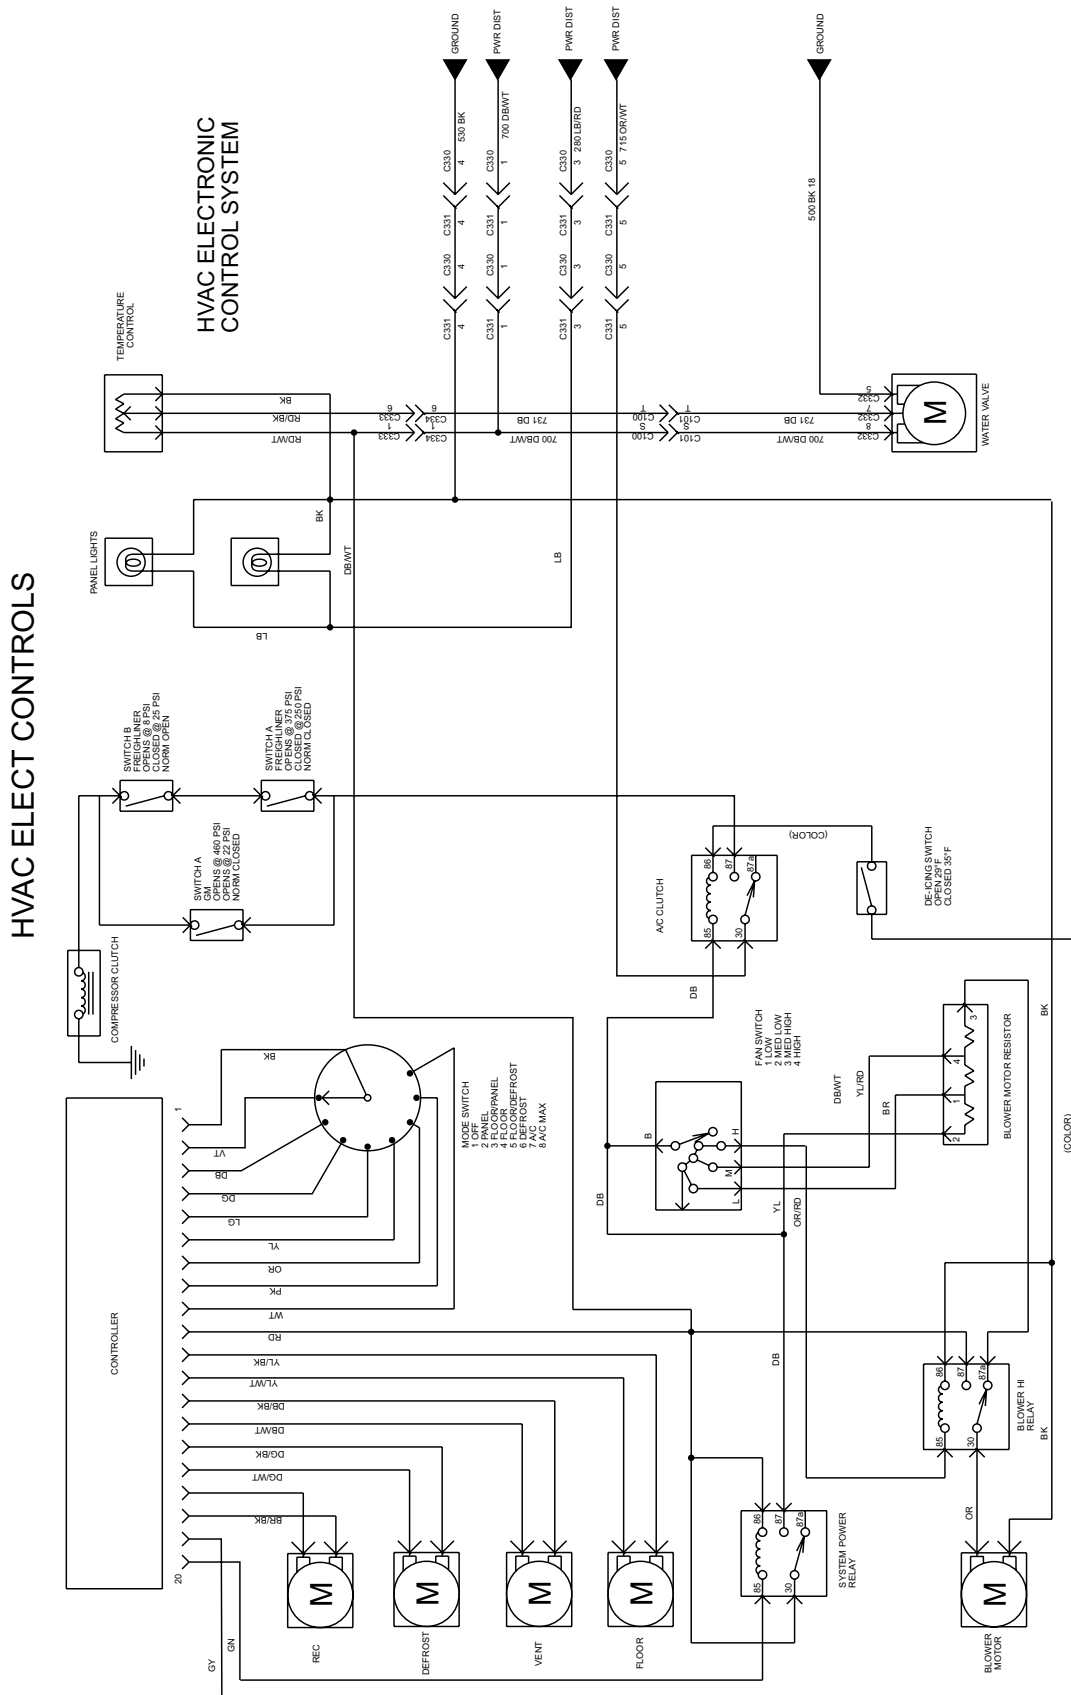

Light, Cab Dome

CAB DOME LIGHT DASH MOUNTED SWITCH

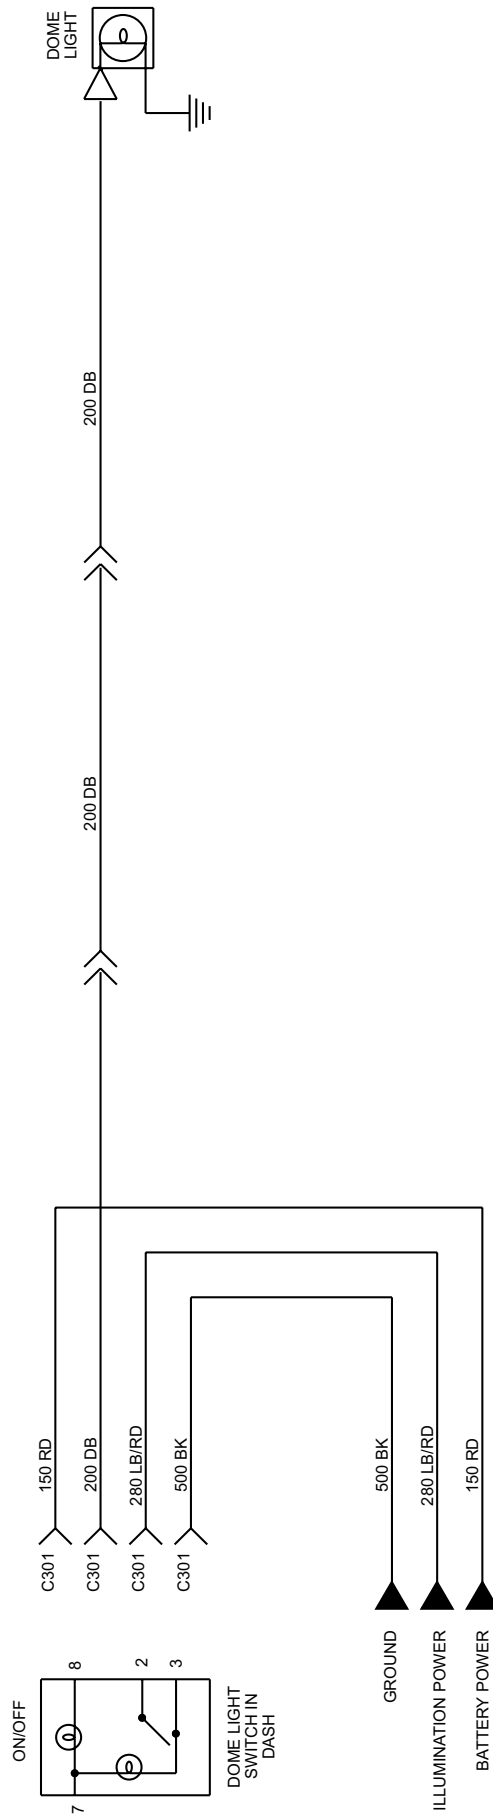


Lights, Cargo

Standard

NOTE: *These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.*


CARGO LIGHTS STANDARD WIRING

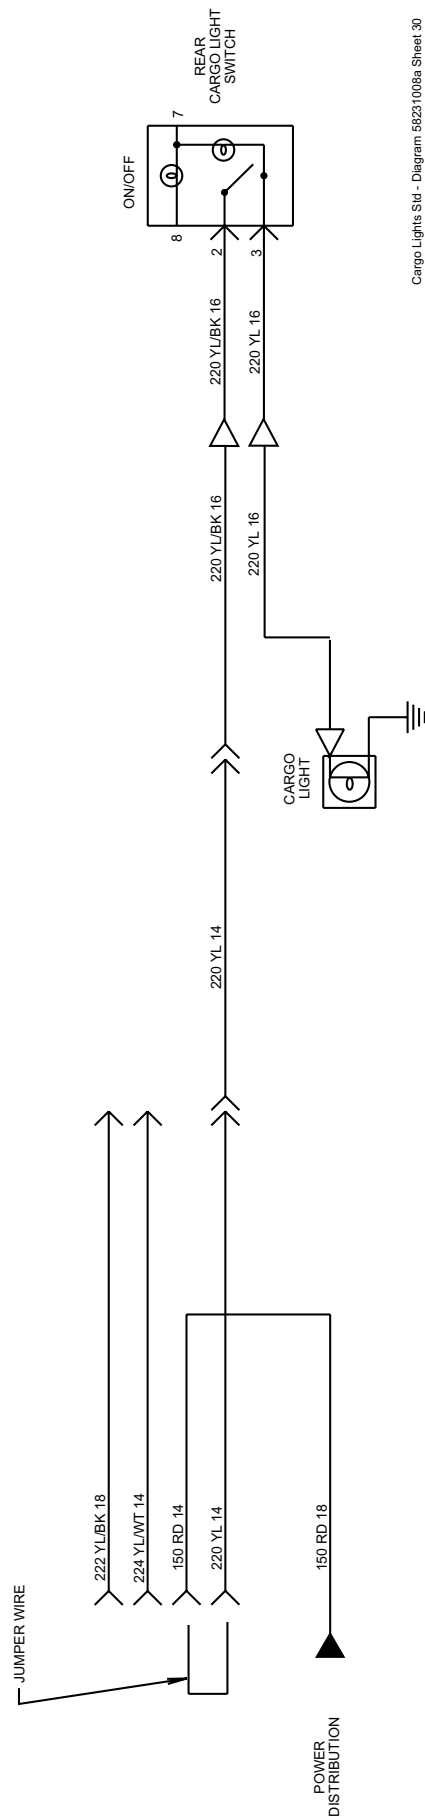

Cargo Lights Std - Diagram 56231006a Sheet 30

Lights, Cargo Switch on Dash


NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

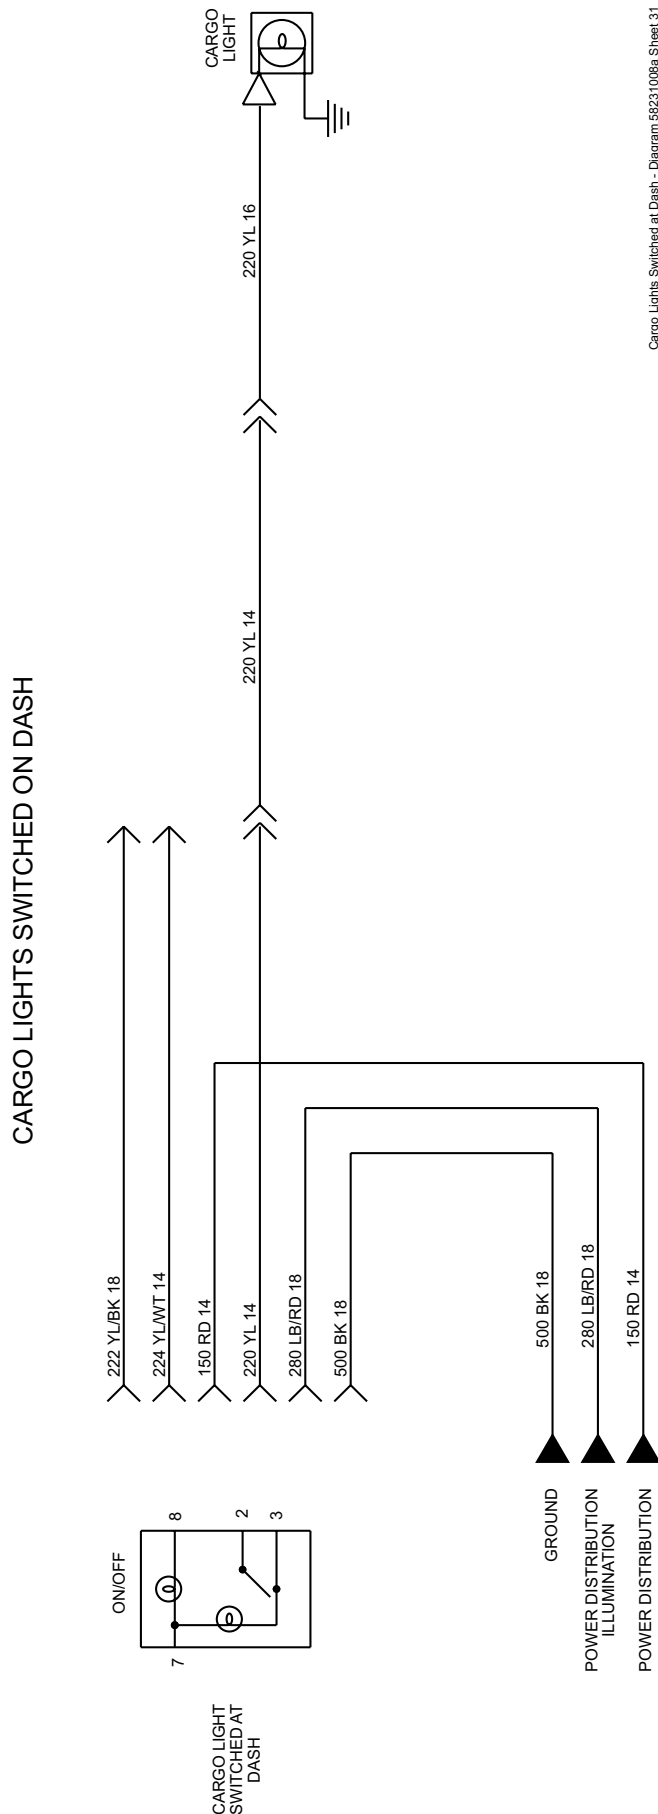

Cargo Lights Switched at Dash - Diagram 58231008a Sheet 31

Lights, Cargo Three-Way Switch

CARGO LIGHTS 3-WAY SWITCH

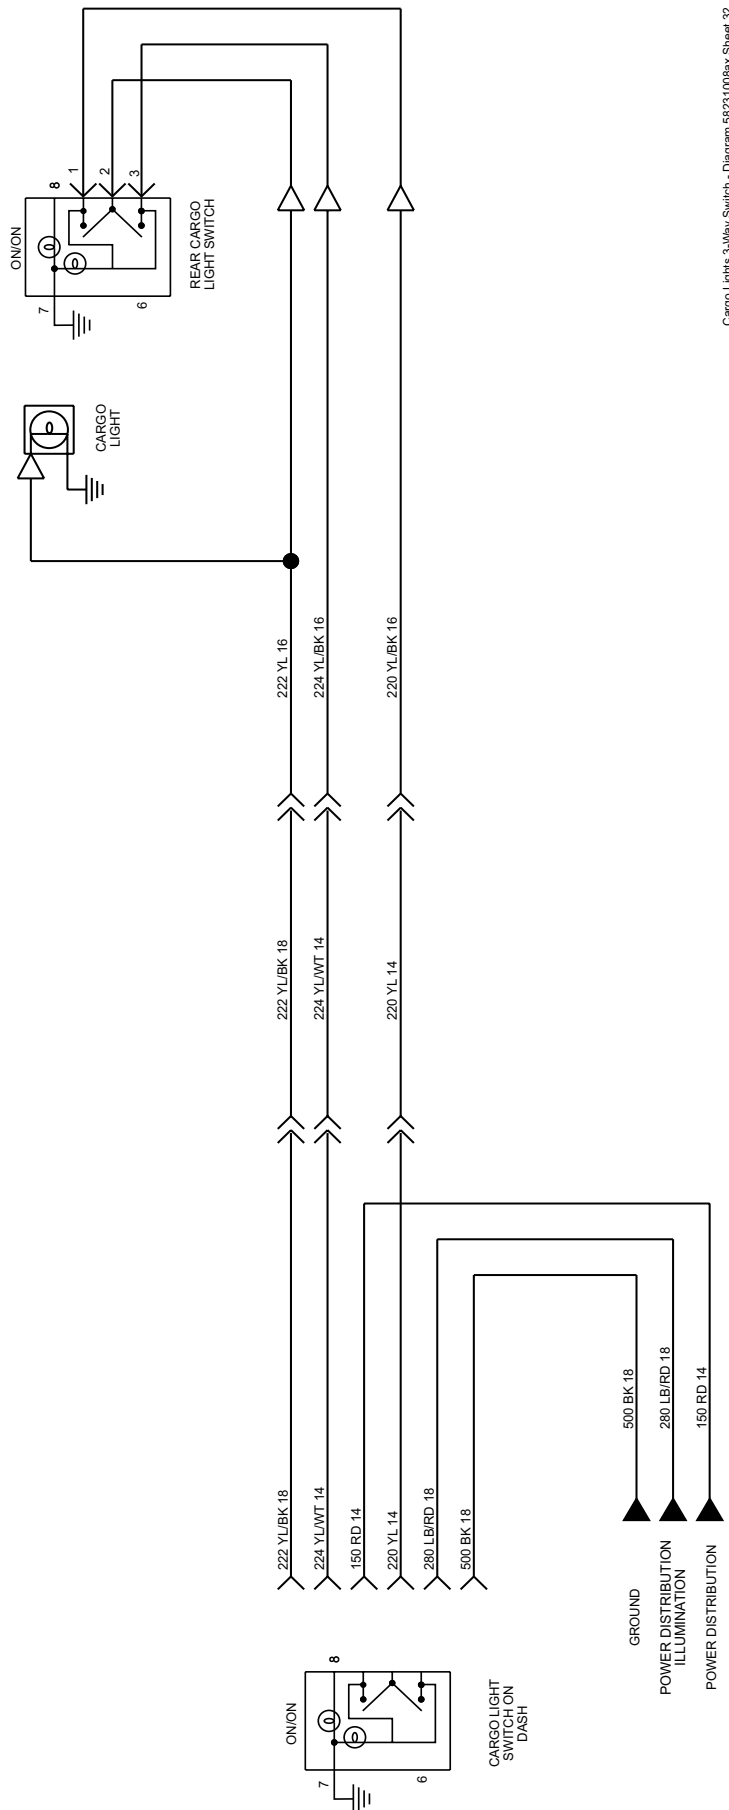


NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

Lights, Forward


Clearance Lights

CLEARANCE LIGHTS

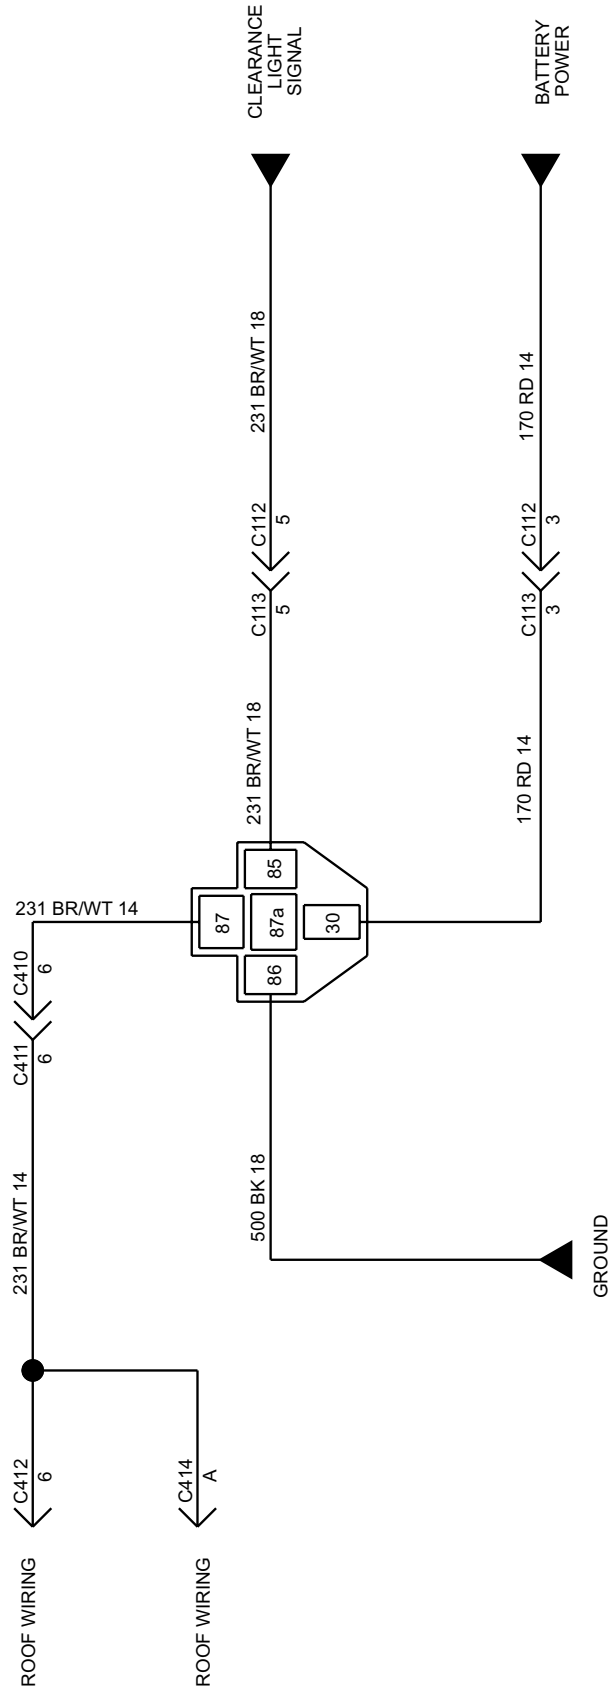

Lights, Forward

Incandescent Without Daytime Running Lights

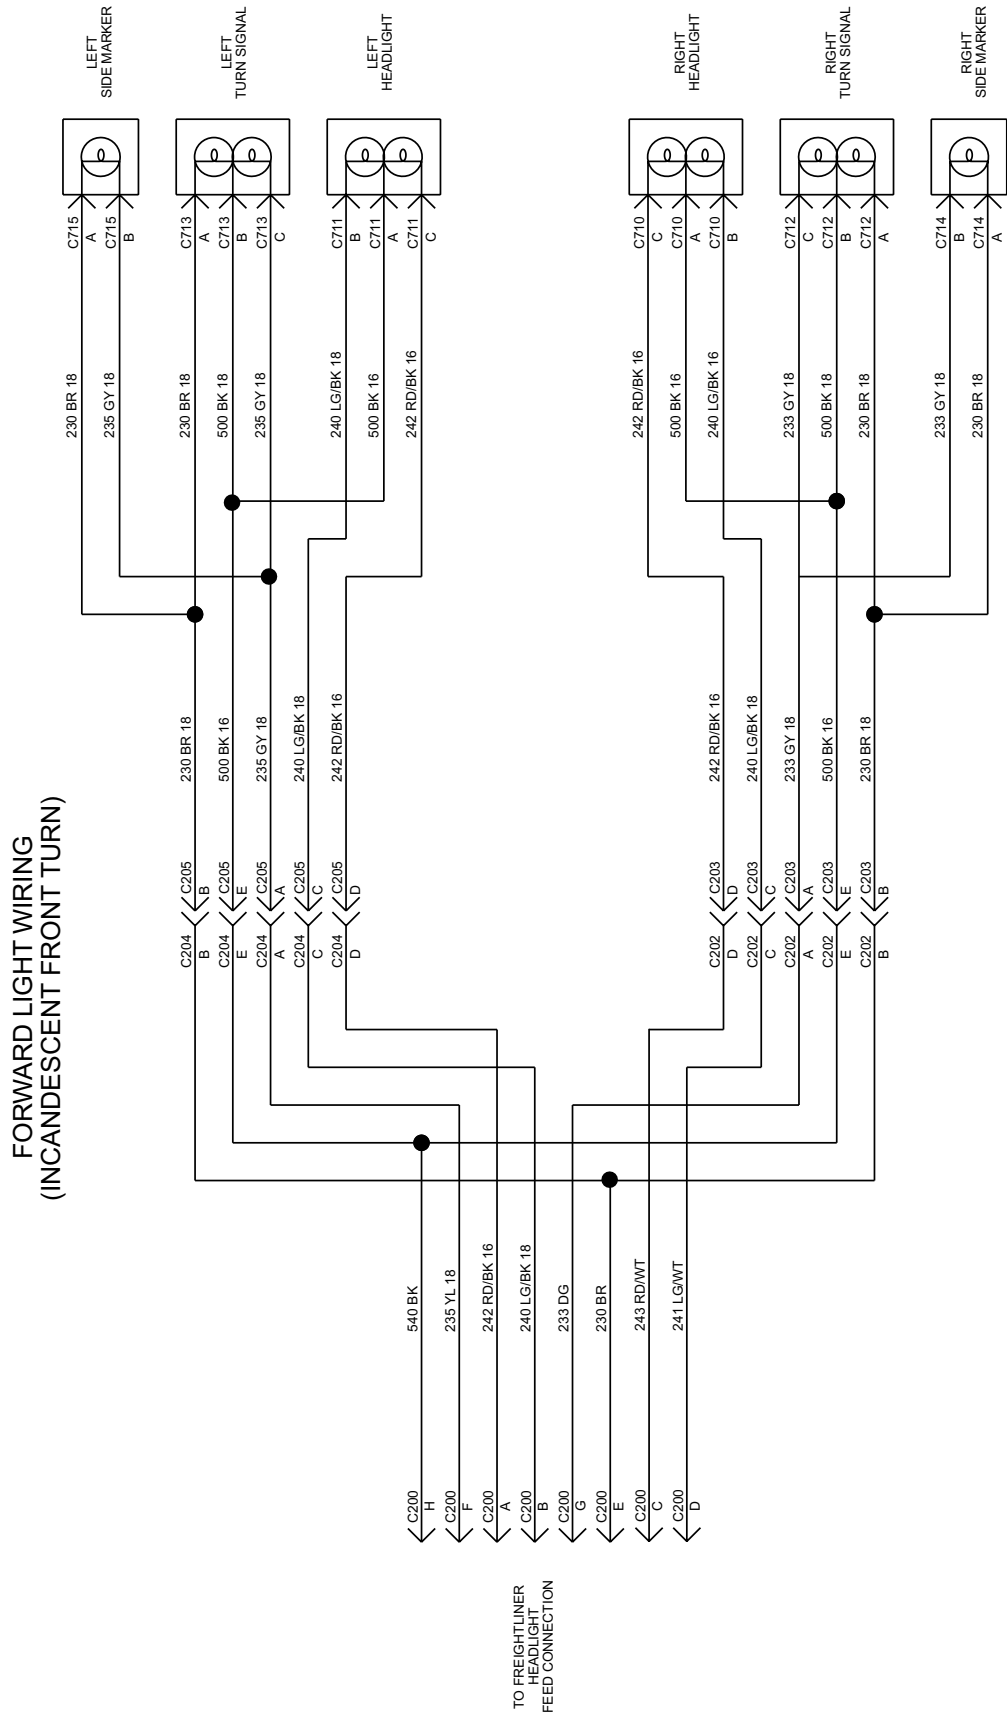


Incand Fwd Lights - Diagram 56231212ax20 Sheet 20

Lights, Forward


LED Without Daytime Running Lights

FORWARD LIGHT WIRING (LED FRONT TURN)

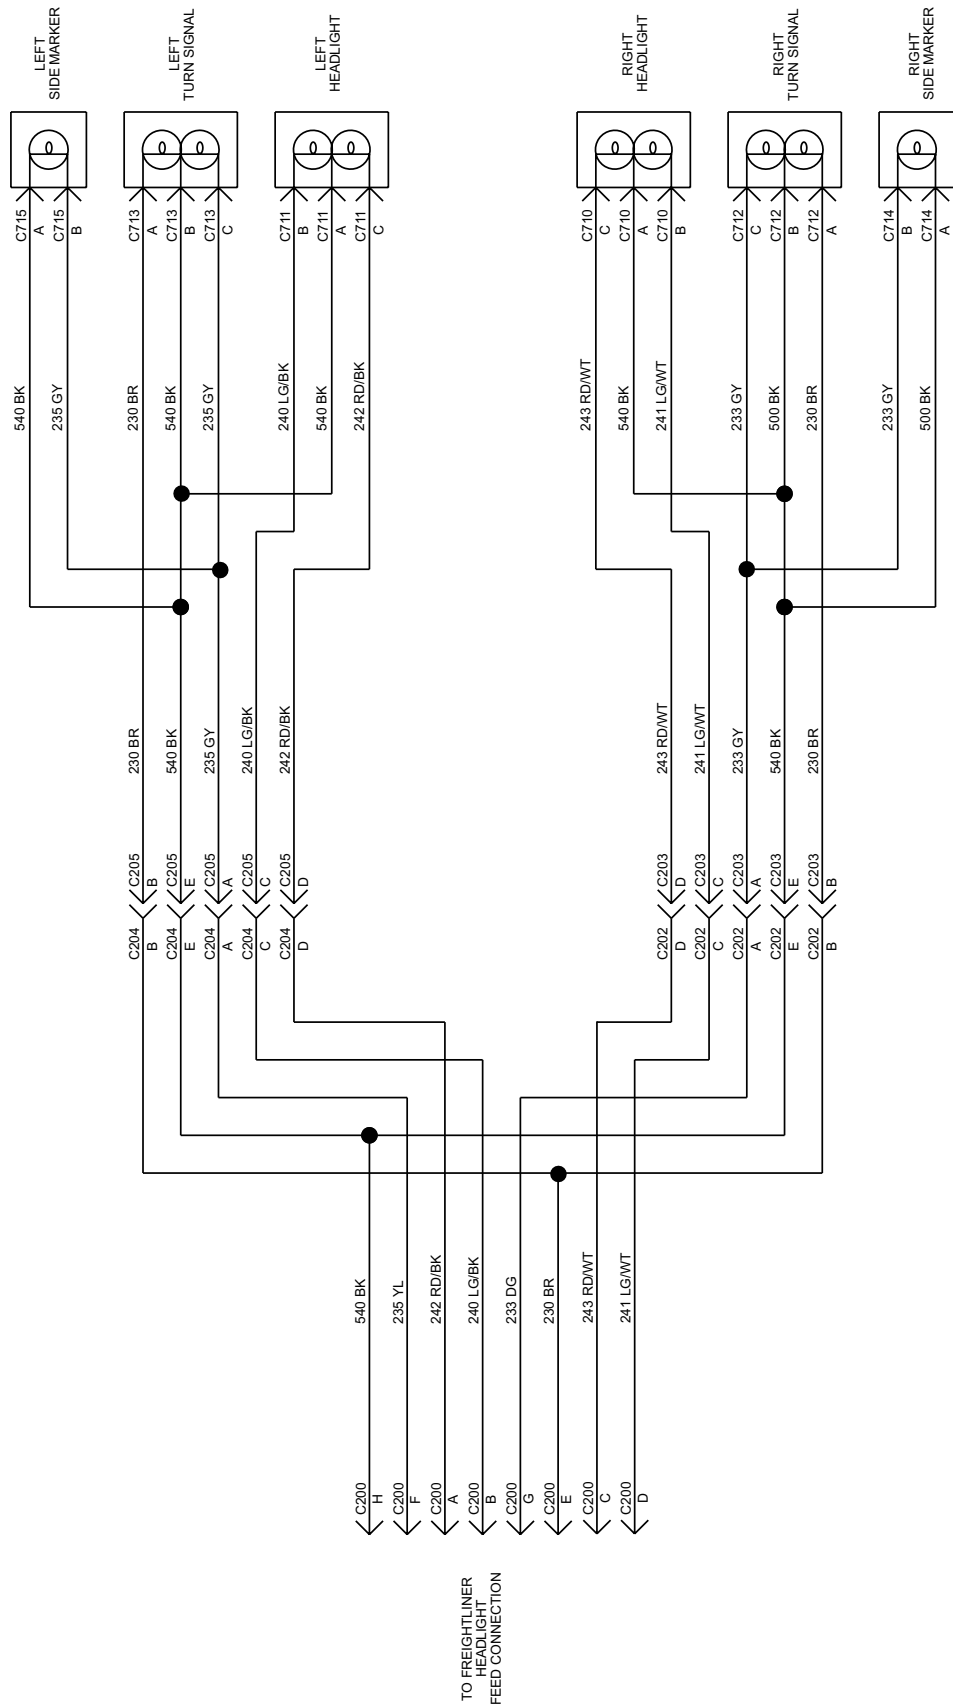


Lights, Forward

Daytime Running Lights

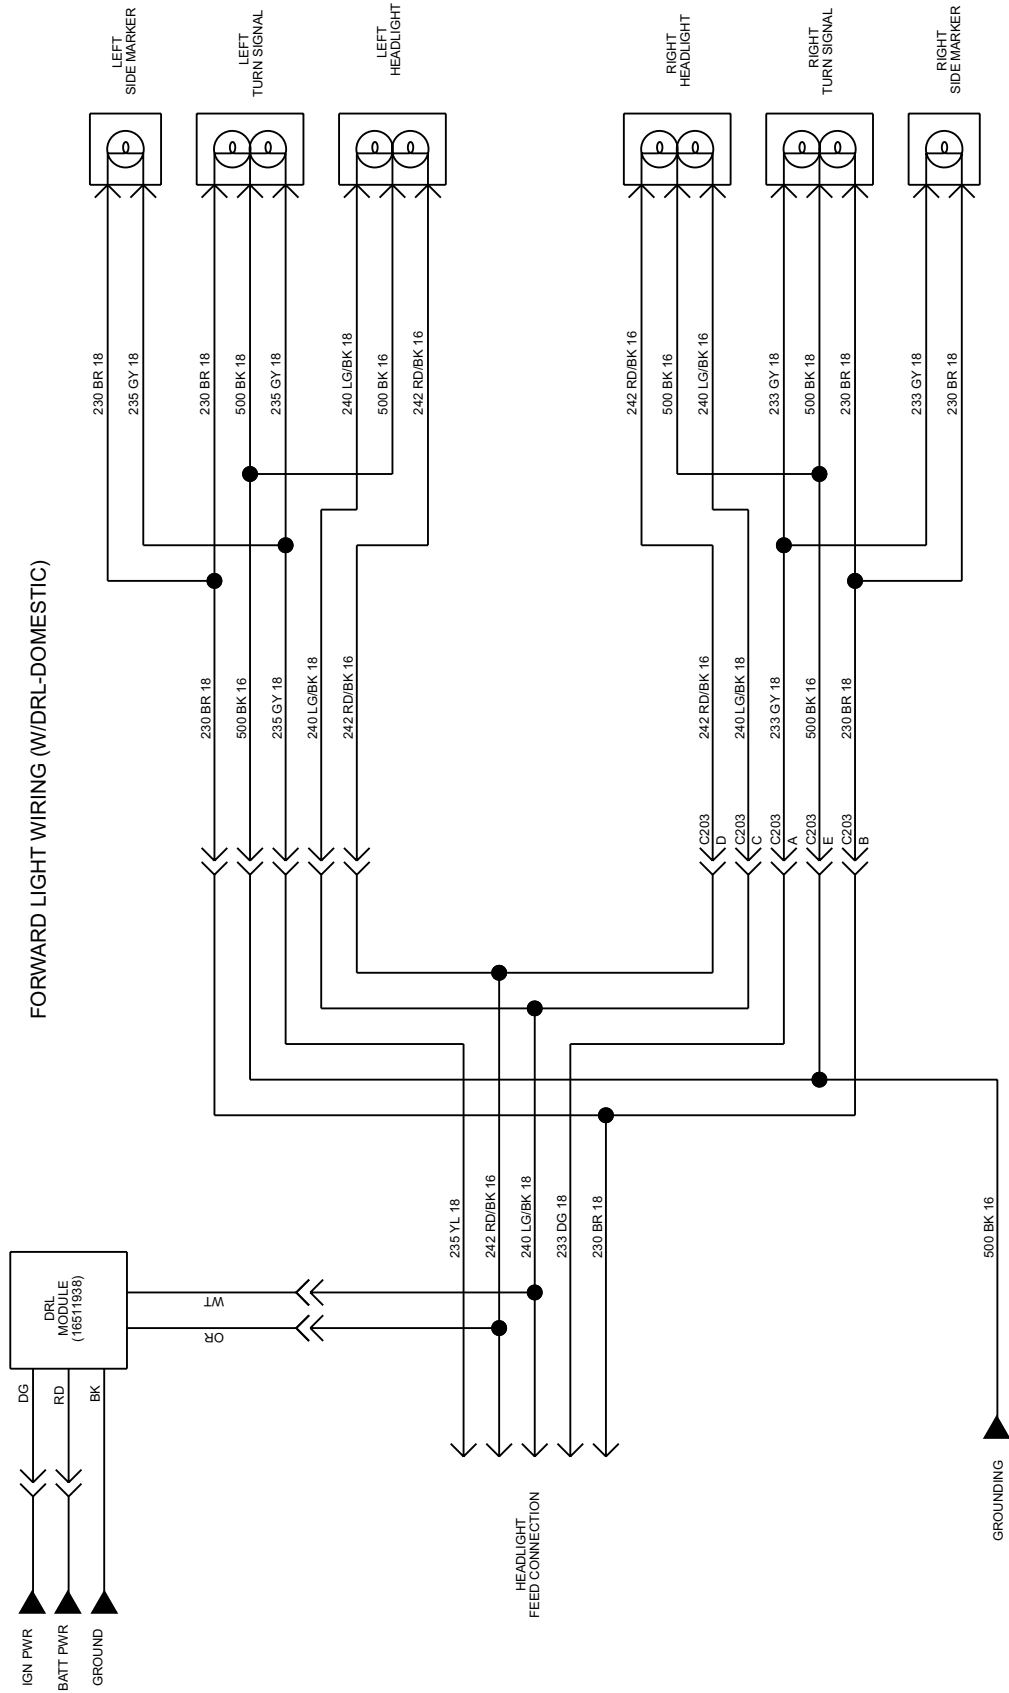


Lights, HVAC Control Panel

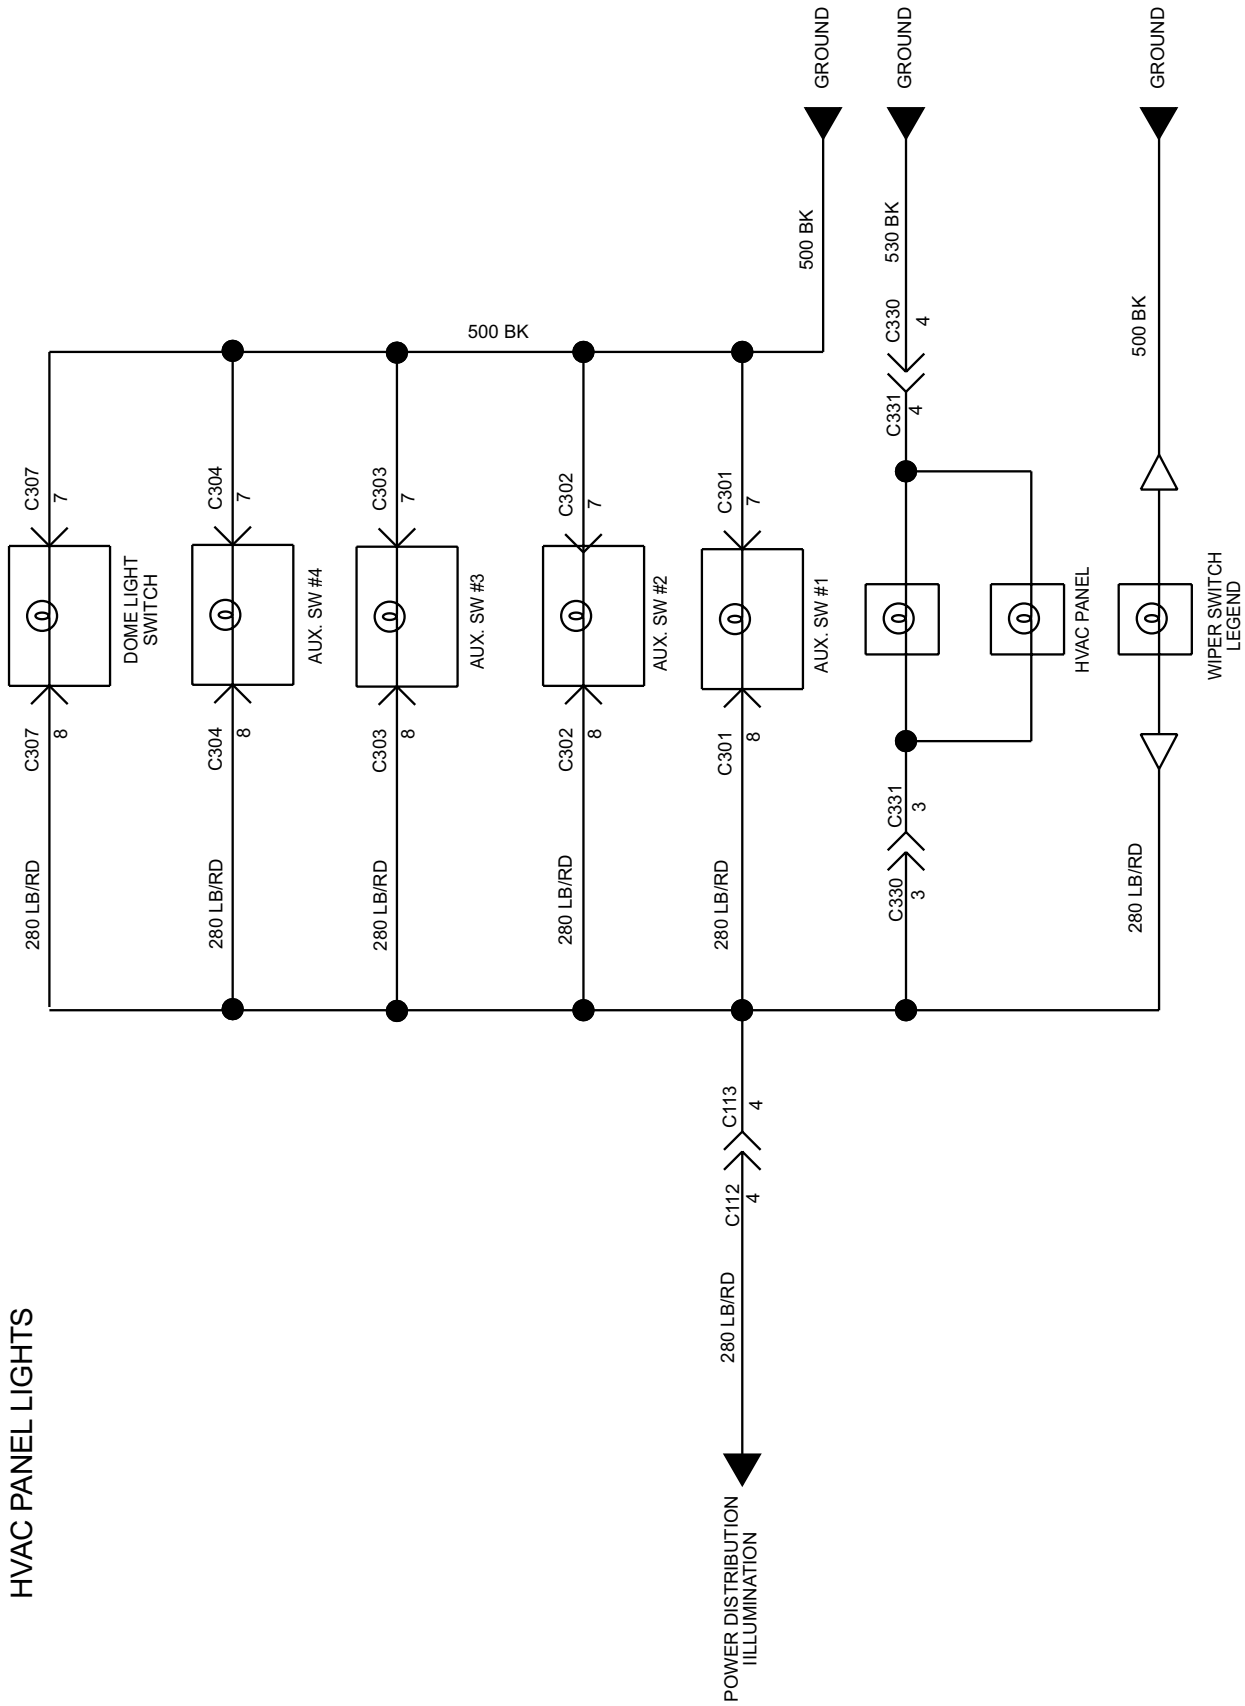

Lights, Rear


Standard

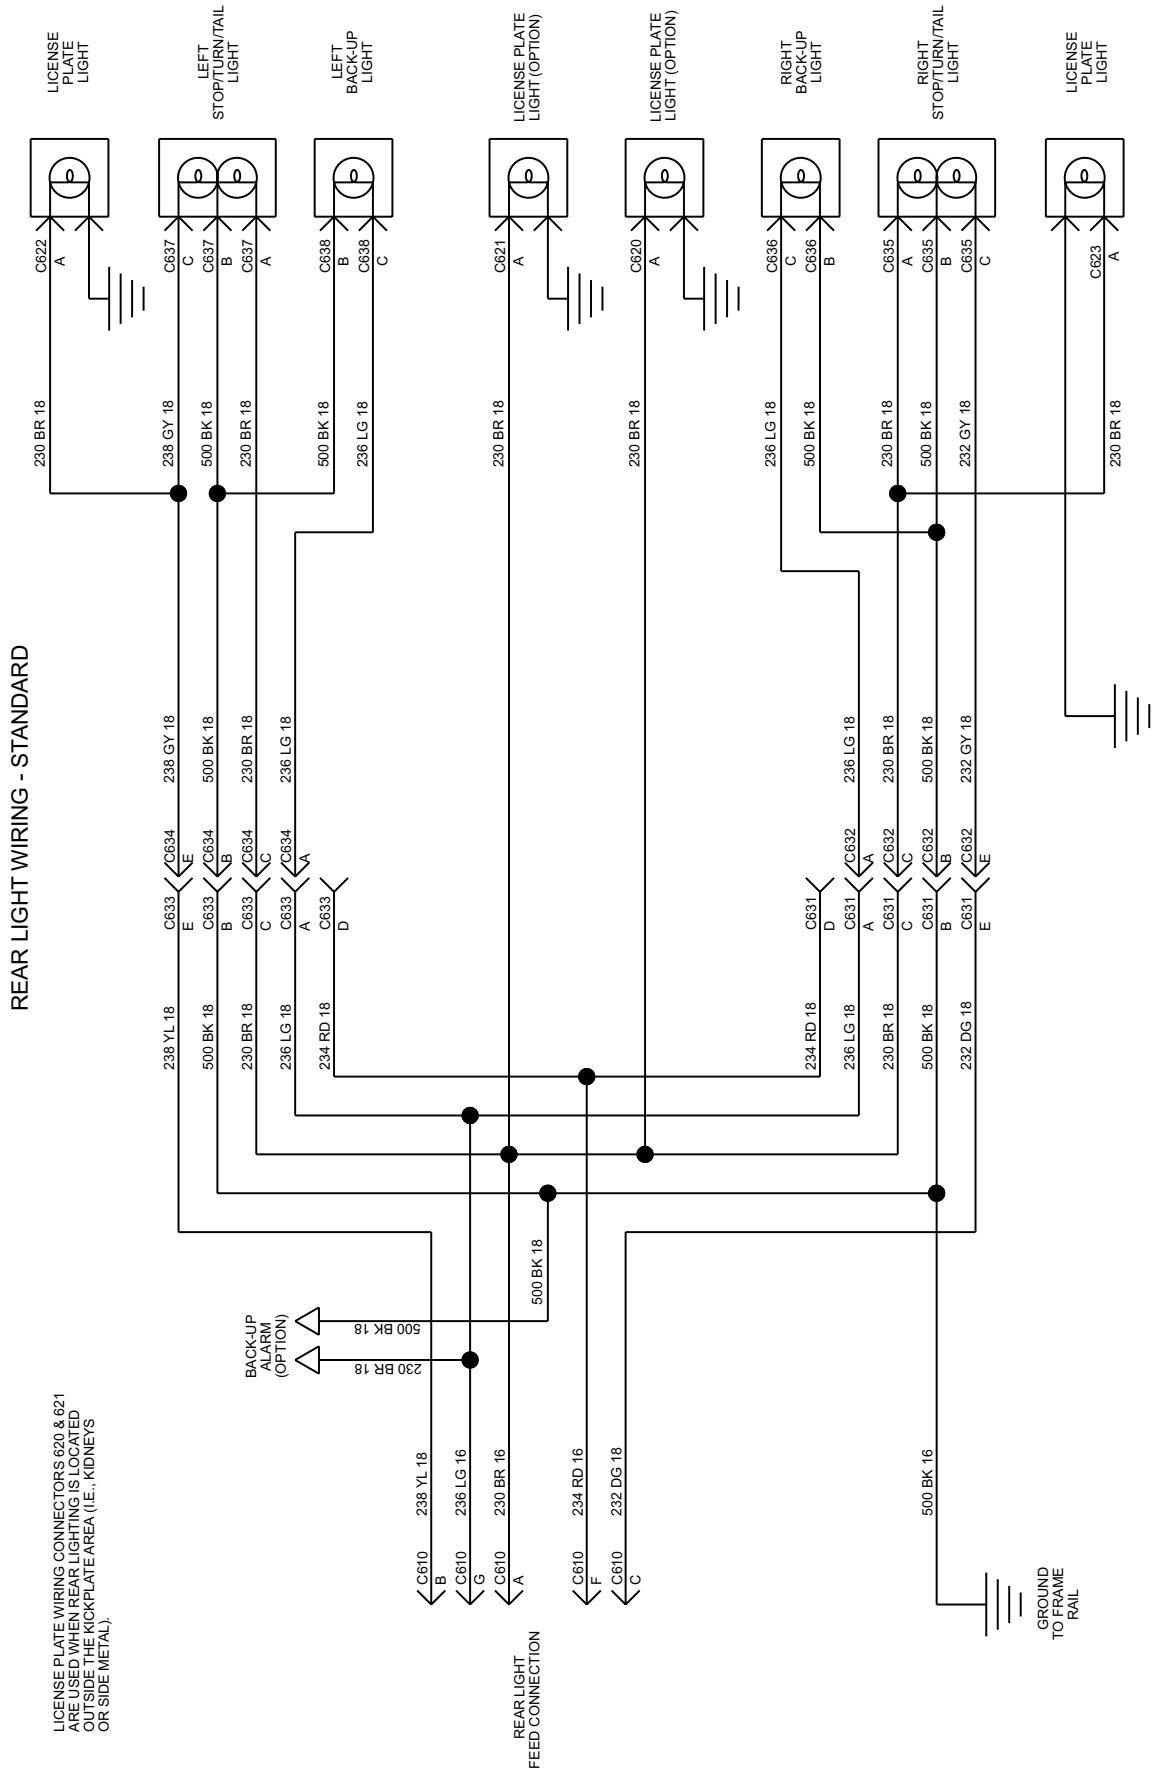

Lights, Rear

Routed through Interior


REAR LIGHT WIRING ROUTED THRU INTERIOR-TYPICAL

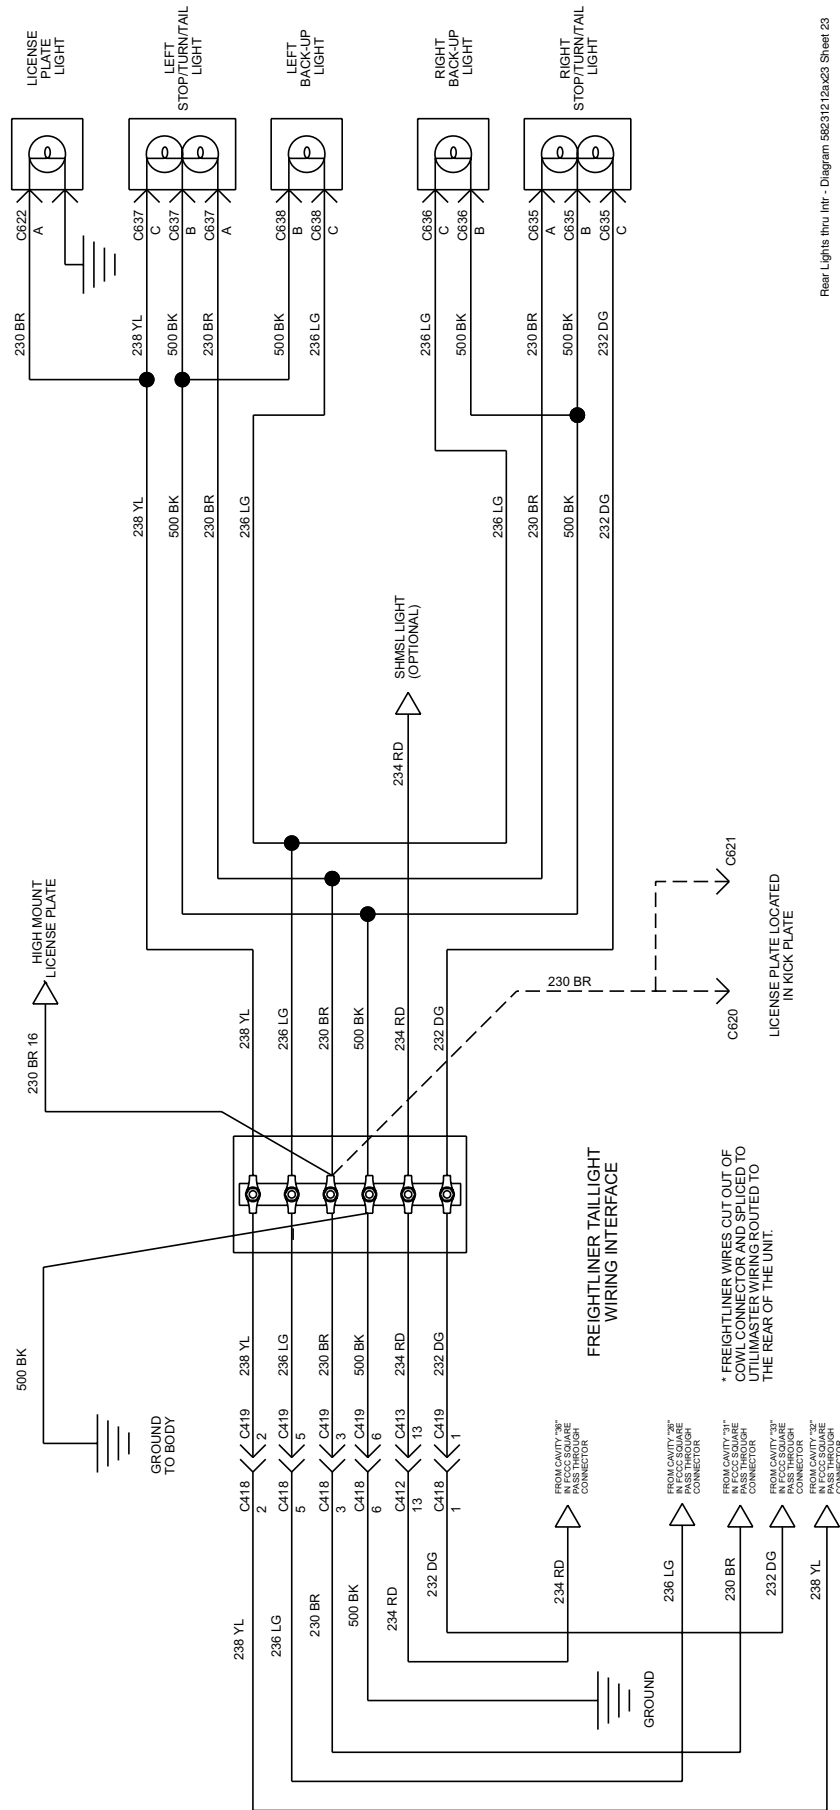

Rear Lights thru Intr - Diagram 5623122a23 Sheet 23

Lights, Rear

Split Taillights

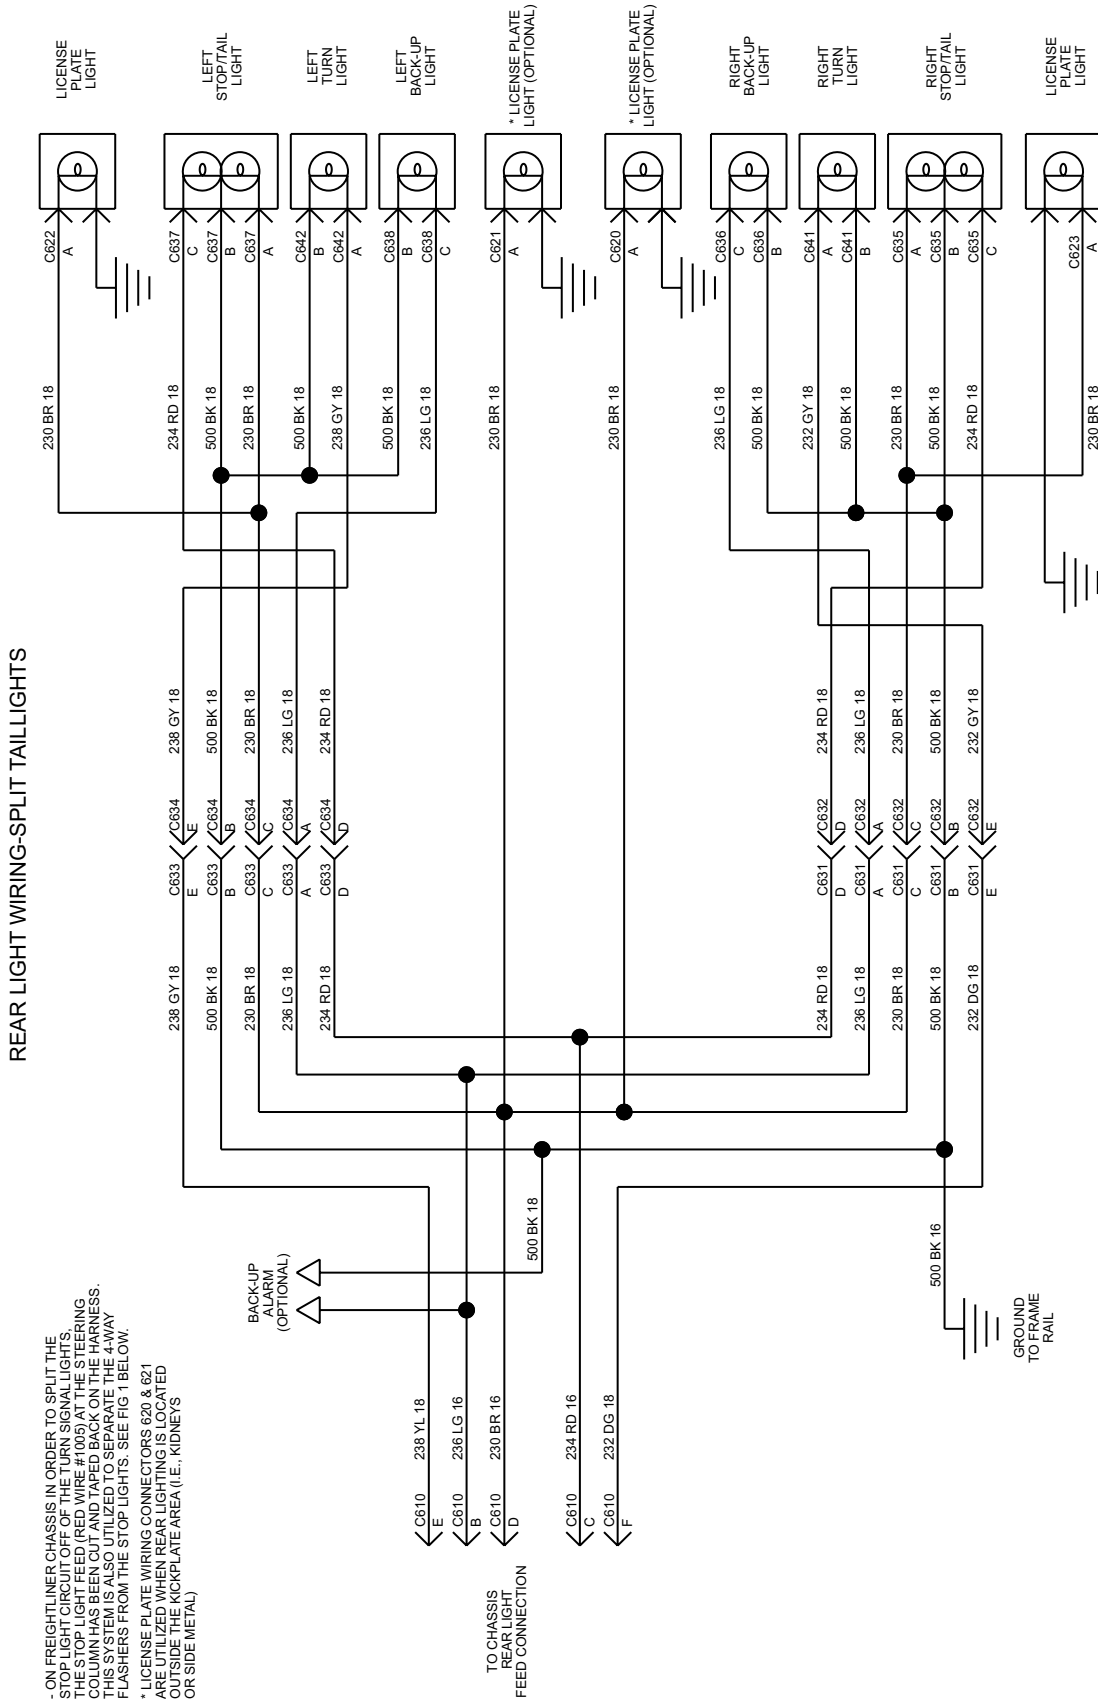

- ON FREIGHTLINER CHASSIS IN ORDER TO SPLIT THE STOP LIGHT CIRCUIT OFF OF THE TURN SIGNAL LIGHTS, THE STOP LIGHTS ARE WIRING SEPARATELY. THE WIRING COLUMN HAS BEEN CUT AND TAPED BACK ON THE HARNESS. THIS SYSTEM IS ALSO UTILIZED TO SEPARATE THE 4-WAY FLASHERS FROM THE STOP LIGHTS. SEE FIG 1 BELOW.

* LICENSE PLATE WIRING CONNECTORS 620 & 621 ARE UTILIZED WHEN REAR LIGHTING IS LOCATED ON SIDE OF THE KICKPLATE AREA (I.E., KIDNEYS OR SIDE METAL)


Lights, Rear

Split Taillights Routed through Interior

REAR LIGHT WIRING ROUTED THROUGH INTERIOR - SPLIT TAILLIGHTS

* ON FREIGHTLINER CHASSIS IN ORDER TO RITE THE STOP LIGHT CIRCUIT OFF OF THE TURN SIGNALS, THE STOP LIGHT FEED (RED WIRE #1005) AT THE STEERING COLUMN HAS BEEN CUT AND TAPED BACK ON THE CHASSIS HARNESS. THIS SYSTEM ALSO SEPARATES 4-WAY FLASHERS FROM THE STOP LIGHTS. SEE FIG 1 BELOW.


* FREIGHTLINER WIRES CUT OUT OF CHASSIS HARNESS AND RECONNECTED TO UTIL MASTER WIRING ROUTED TO THE REAR OF THE UNIT.

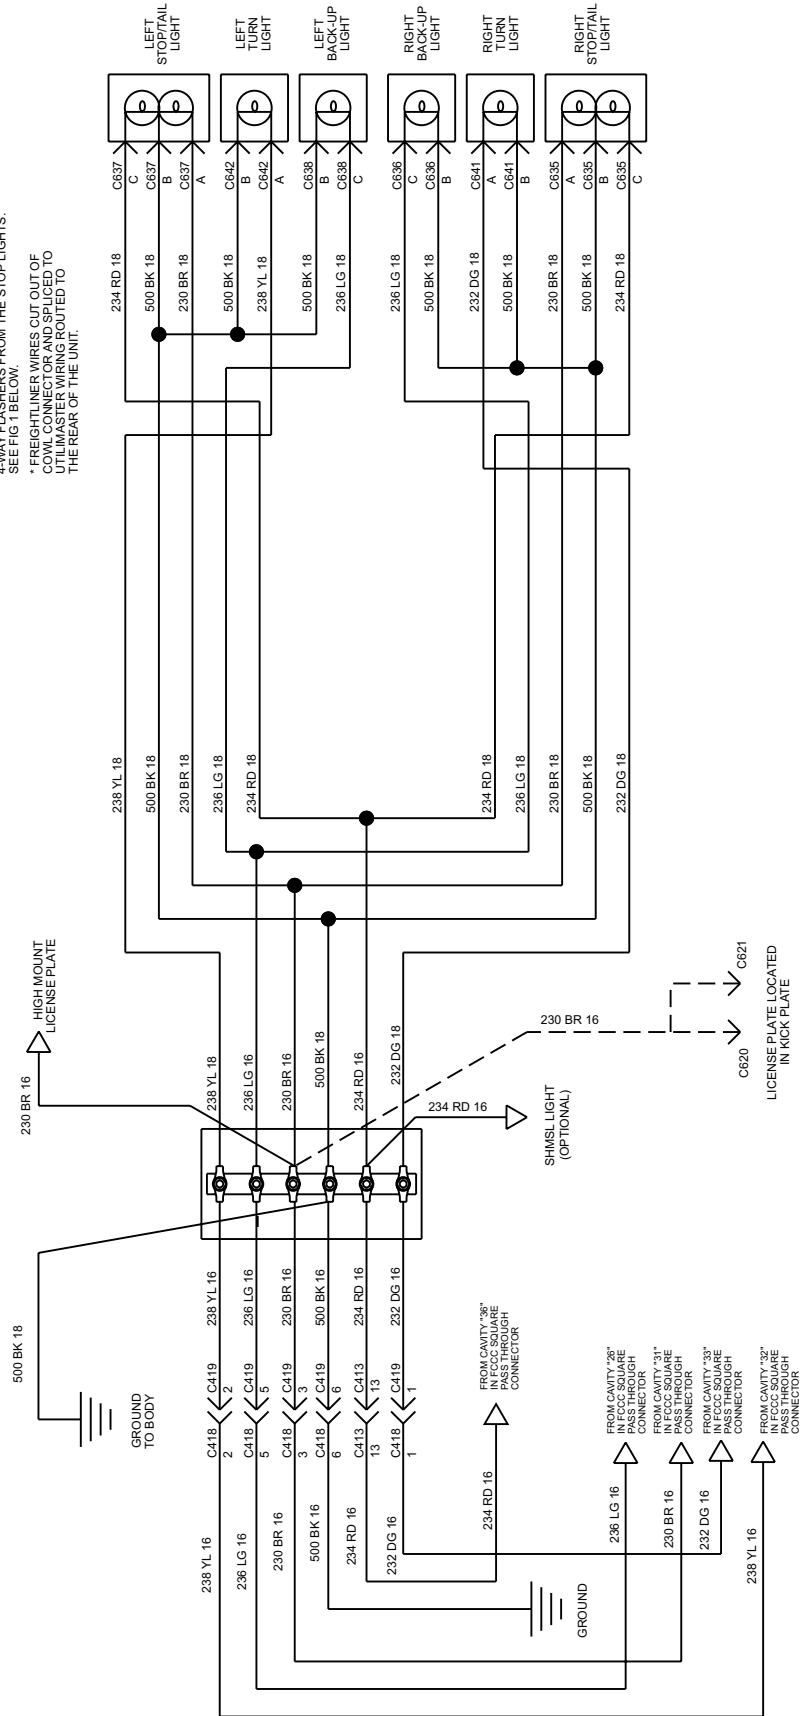

Lights, Rear


Supplemental High Mount Stop Light (SHMSL)

SUPPLEMENTAL HIGH MOUNT STOP LIGHT (SHMSL)

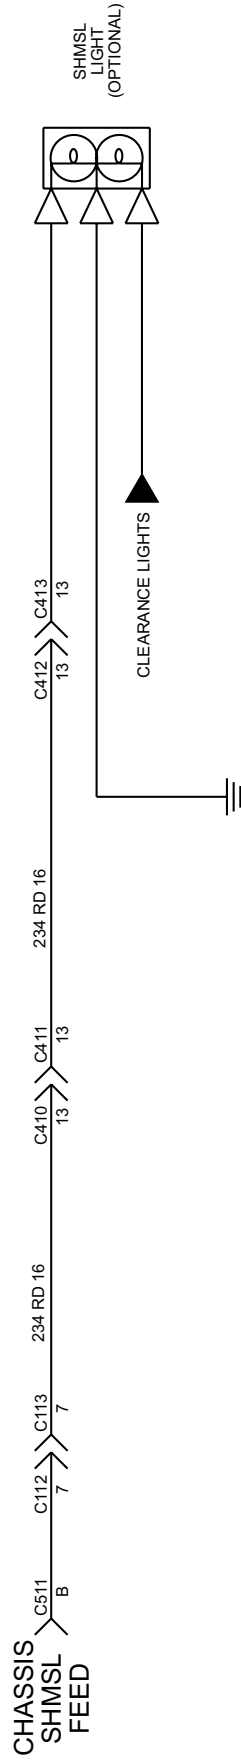


Lights, Spot, Scene/Flood, or Strobe

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilmaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

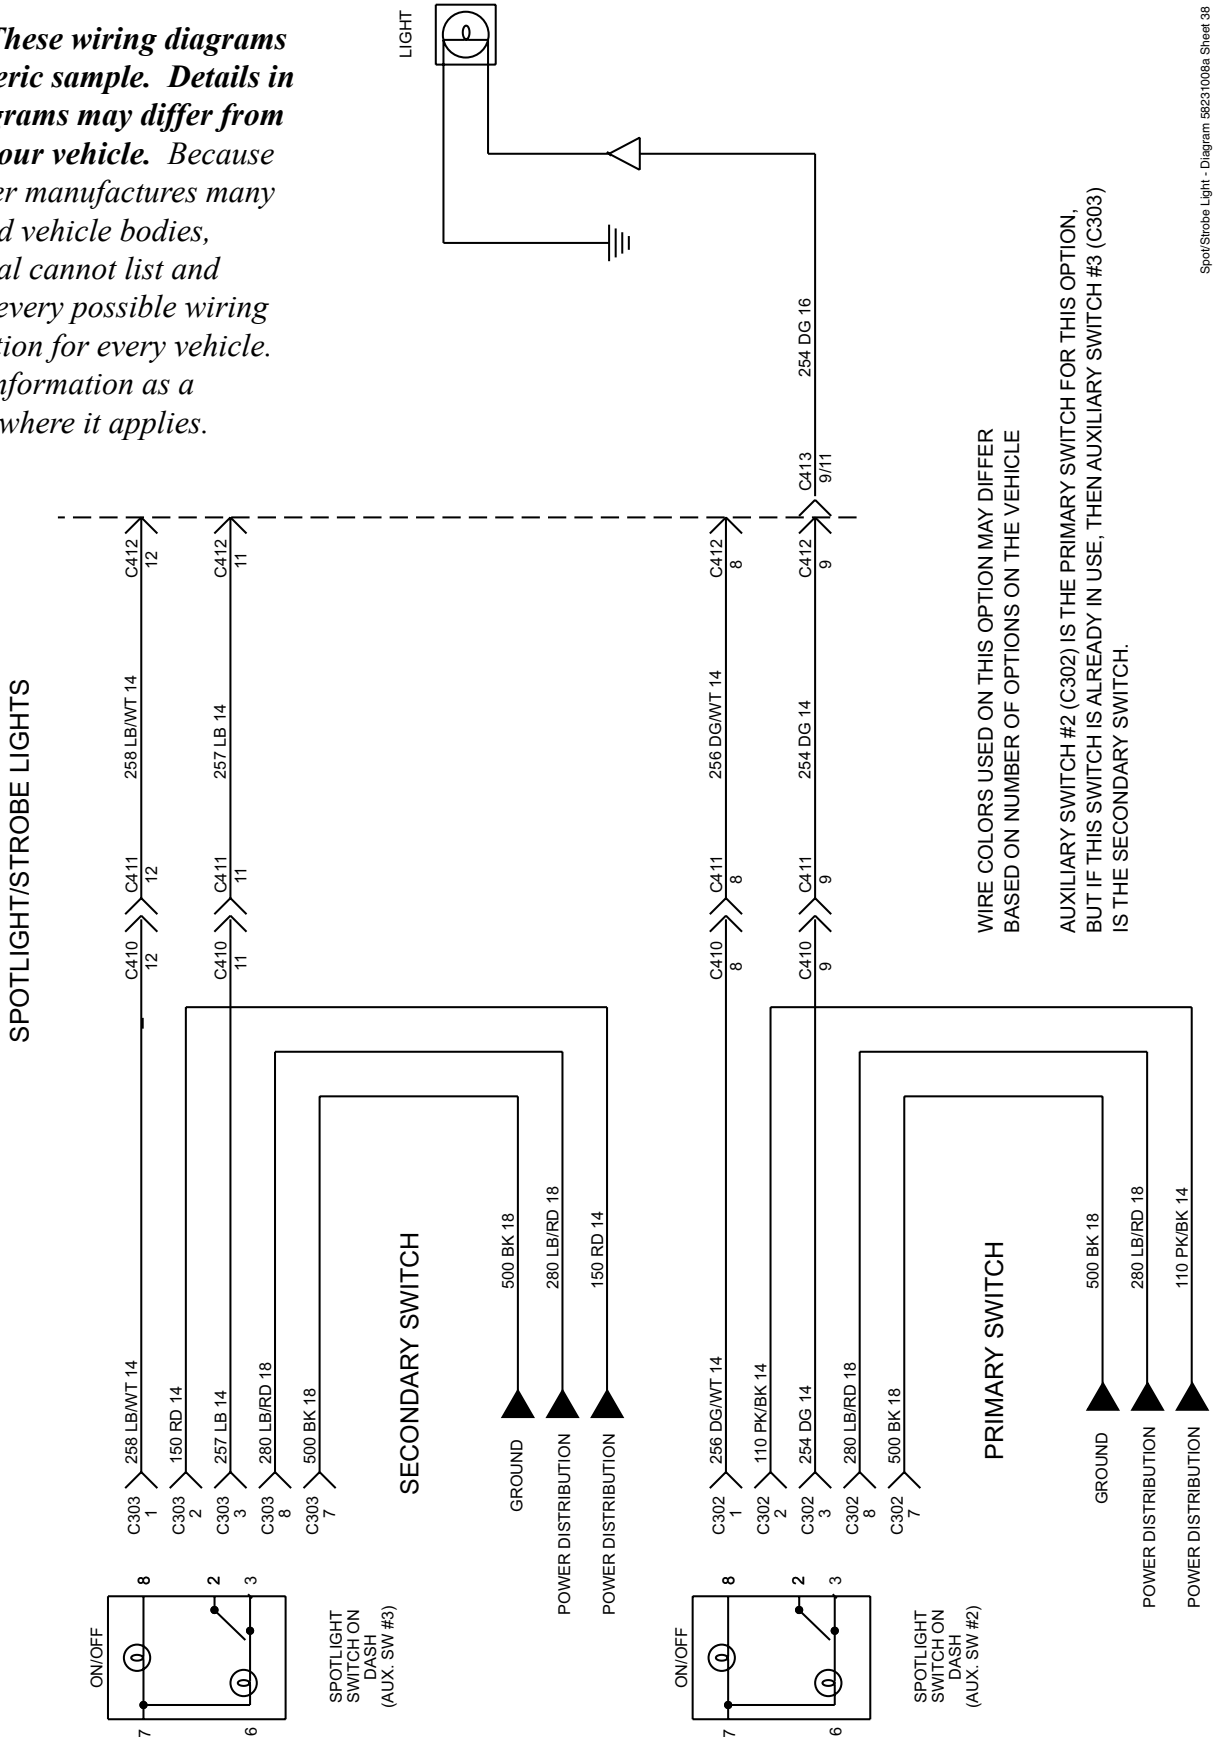


Mirrors, Heated

NOTE: These wiring diagrams are a generic sample. Details in these diagrams may differ from those in your vehicle. Because Utilimaster manufactures many customized vehicle bodies, this manual cannot list and illustrate every possible wiring configuration for every vehicle. Use this information as a guideline where it applies.

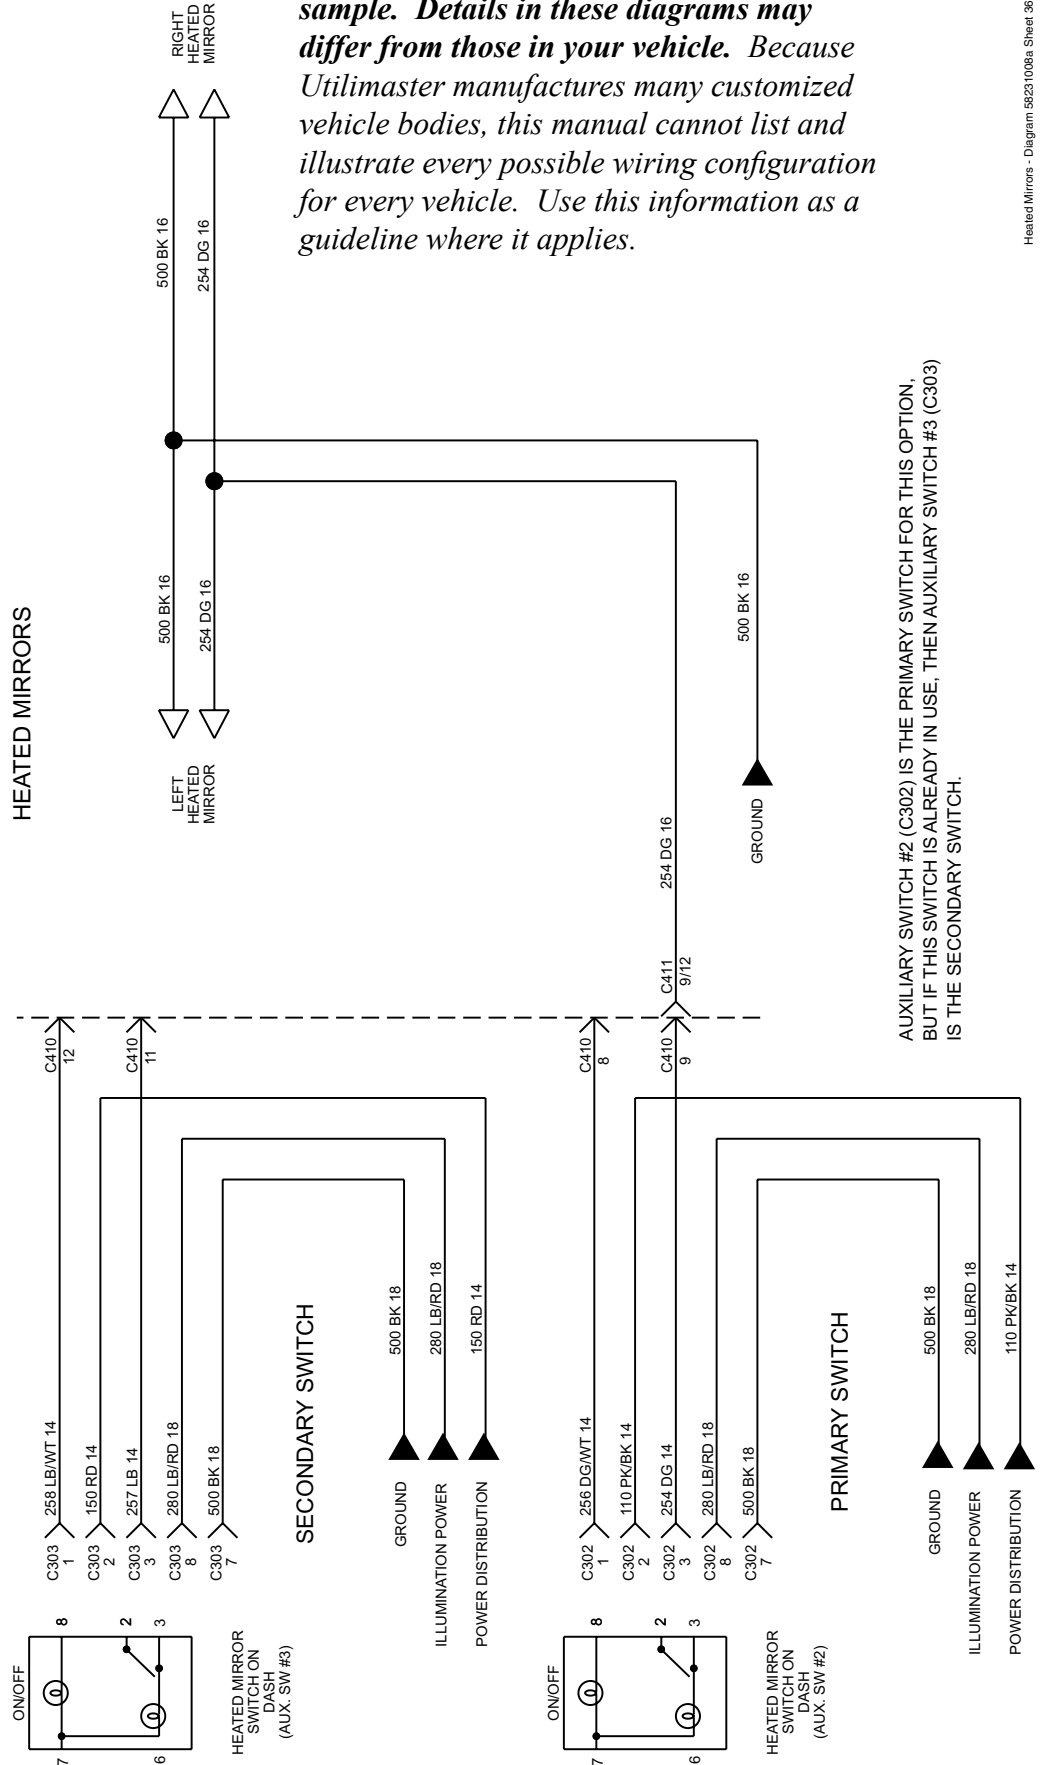


Power Distribution

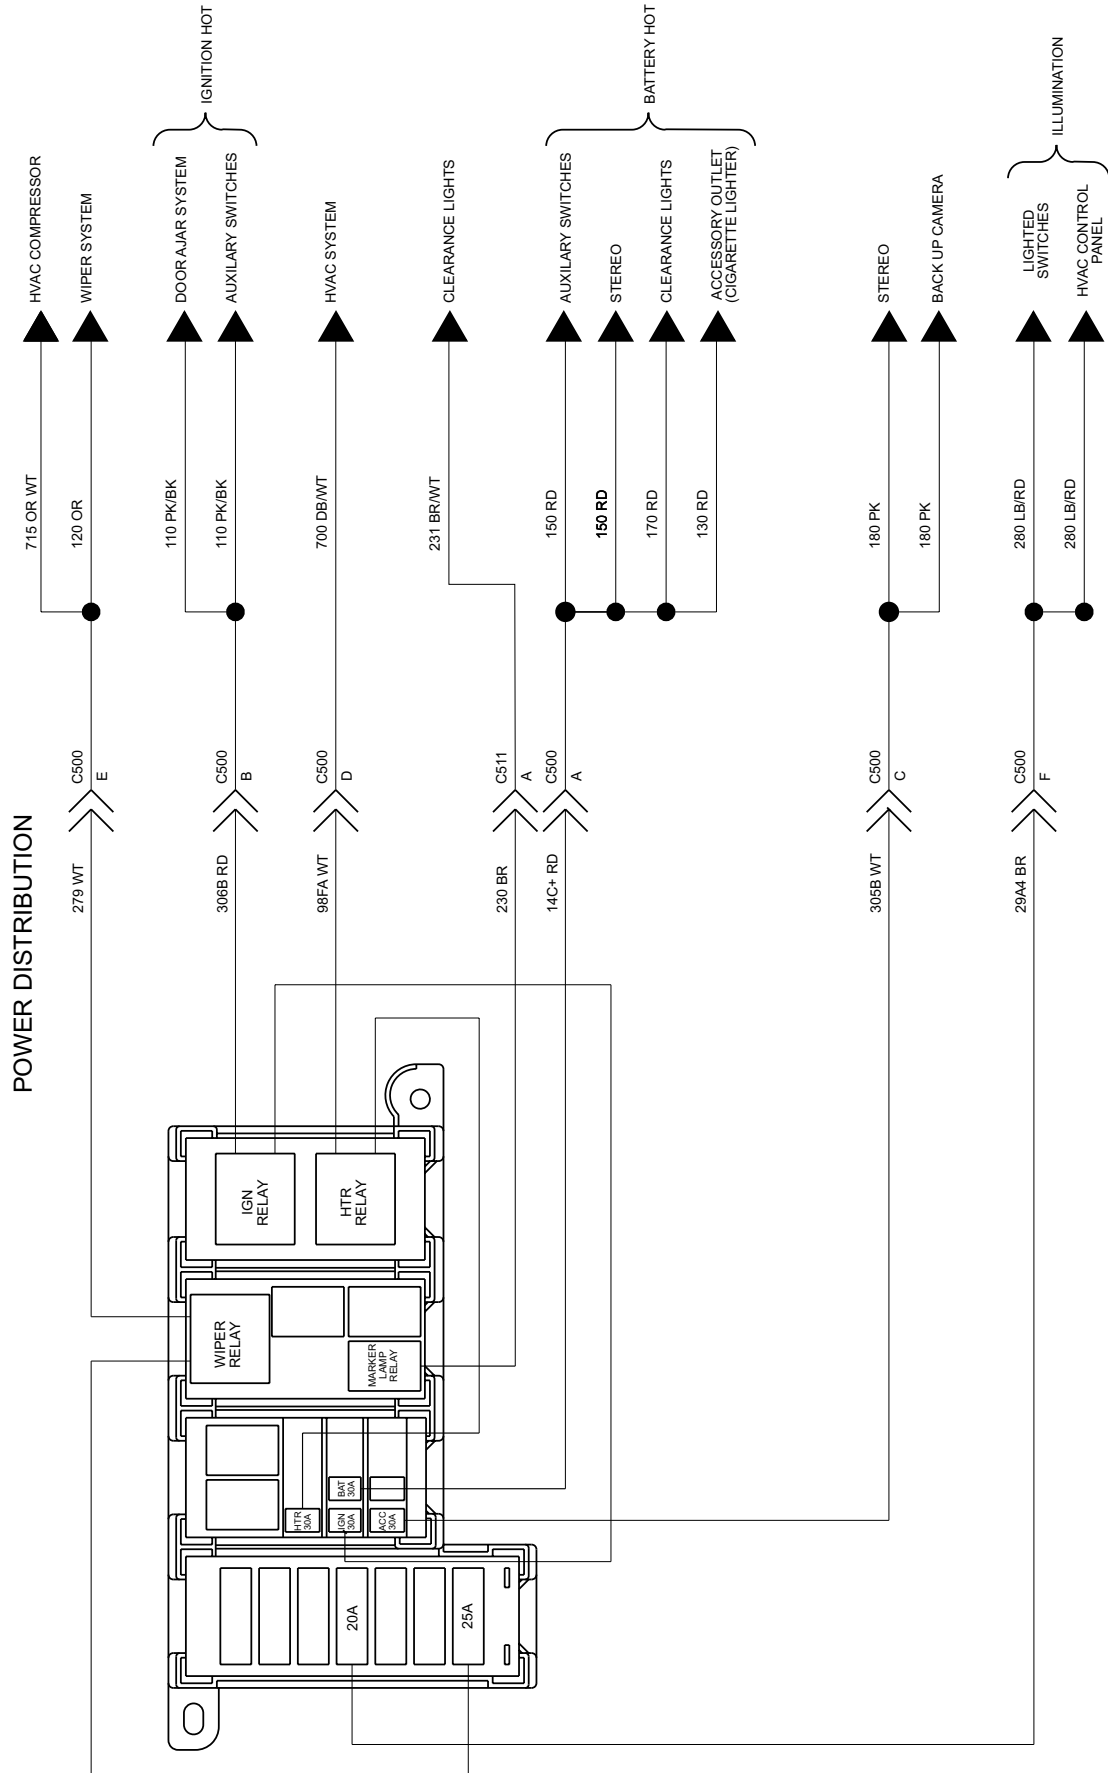


Roof Wiring

TYPICAL ROOF WIRING

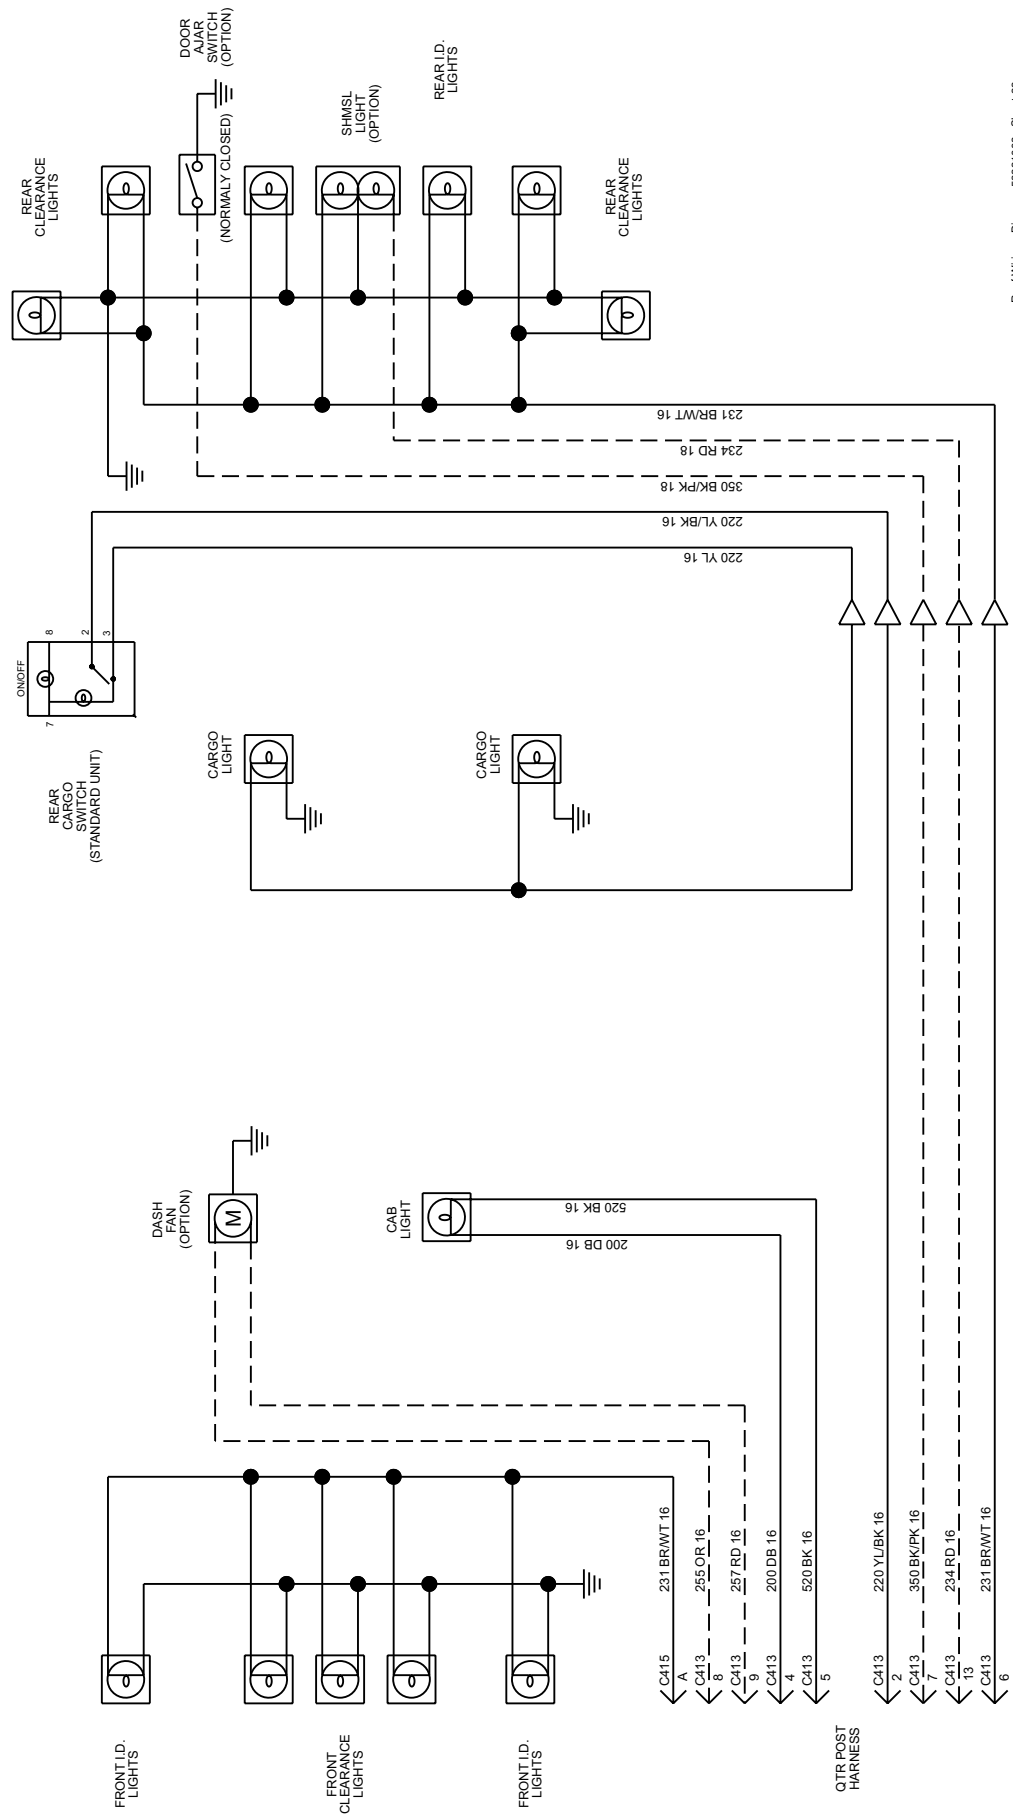


Stereo System

STEREO SYSTEM WIRING

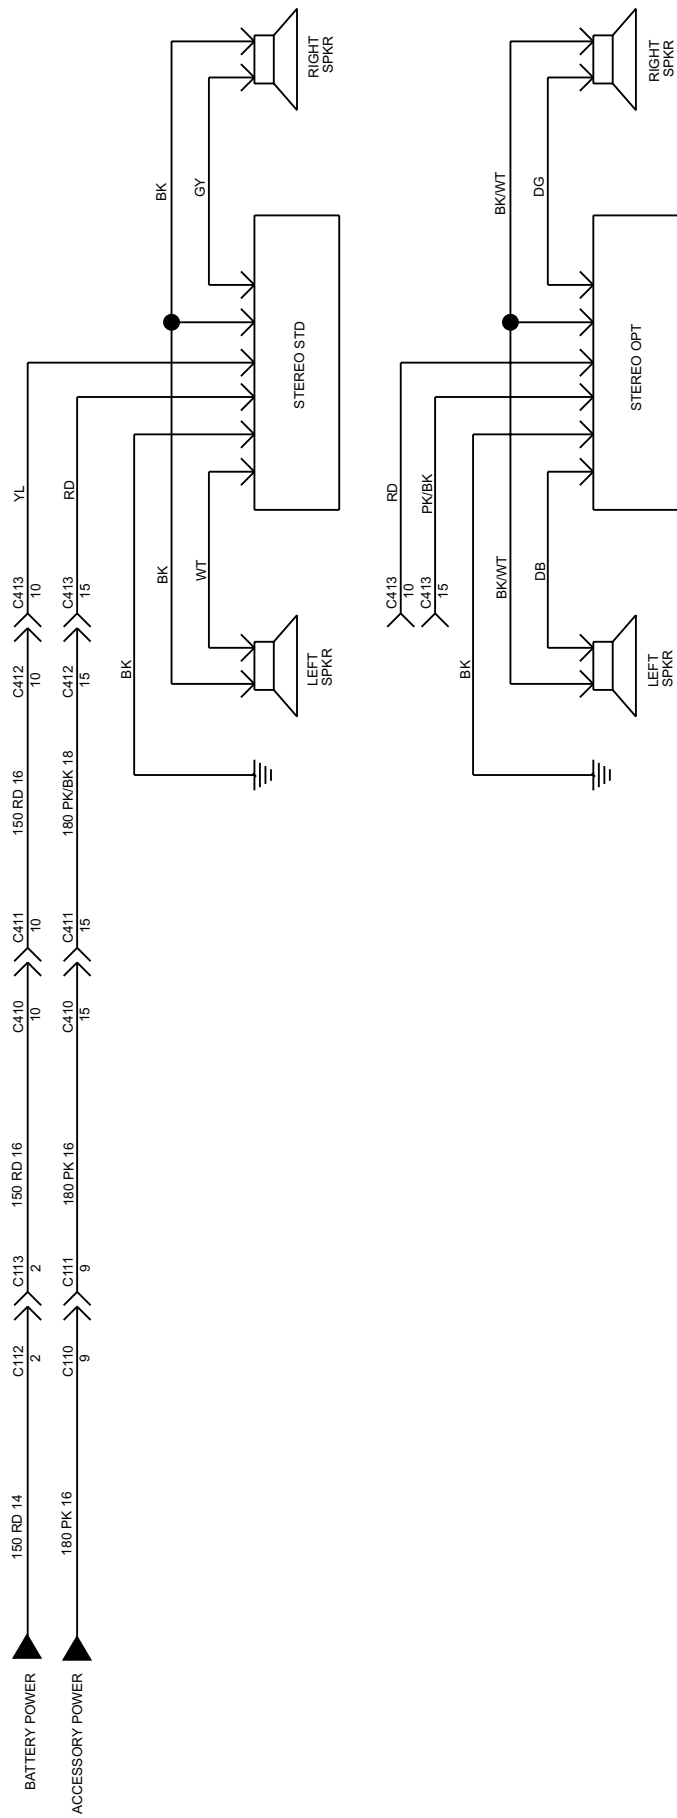

Switches

SWITCHES

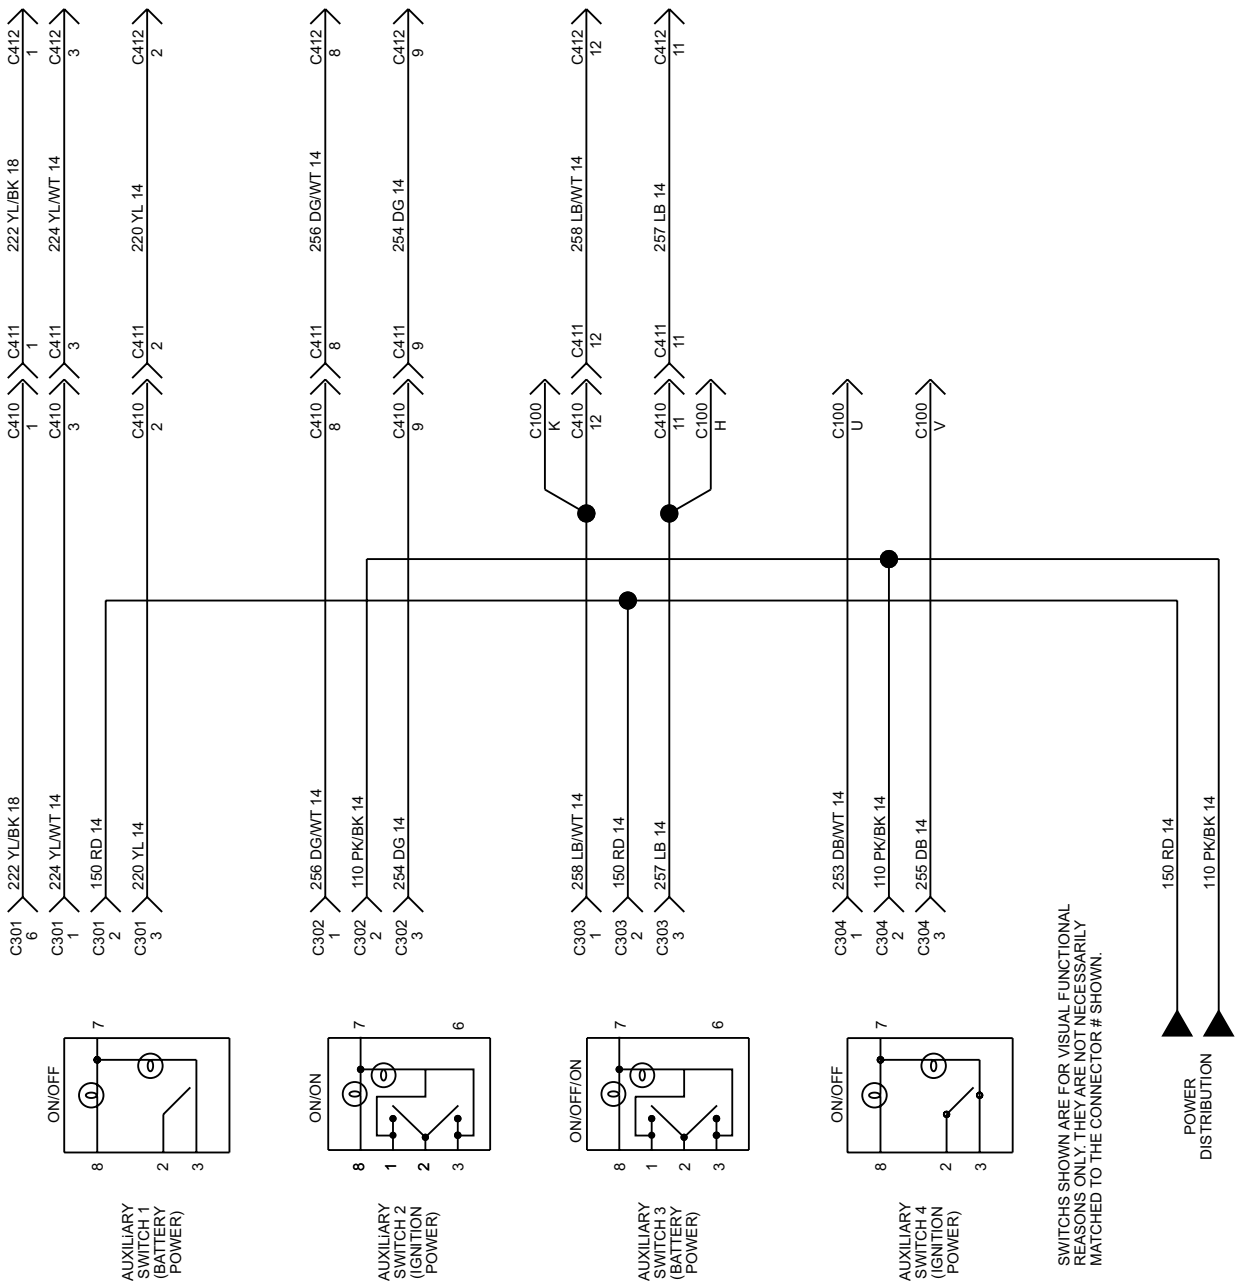


WIRE COLOR TO LOAD FUNCTION MAY VARY BASED ON OPTIONS CHOSEN AND NUMBER OF SWITCHED OPTIONS CHOSEN.
SPECIAL REQUESTED OPTIONS MAY BE WIRED DIFFERENTLY THAN SHOWN ON THIS OR OTHER SHEETS.

TYPICAL SWITCH USAGES:
ON/OFF—LIGHTING/HTID MIRRORS/POWER VENTS
ON/ON—3-WAY CARGO LIGHT SWITCHING ONLY
ON/OFF/ON—AUX. HEATERS/DASH FANS, (2 SPEED LOADS)

SWITCHES SHOWN ARE FOR VISUAL FUNCTIONAL REASONS ONLY. THEY ARE NOT NECESSARILY MATCHED TO THE CONNECTOR # SHOWN.


Vent, Powered

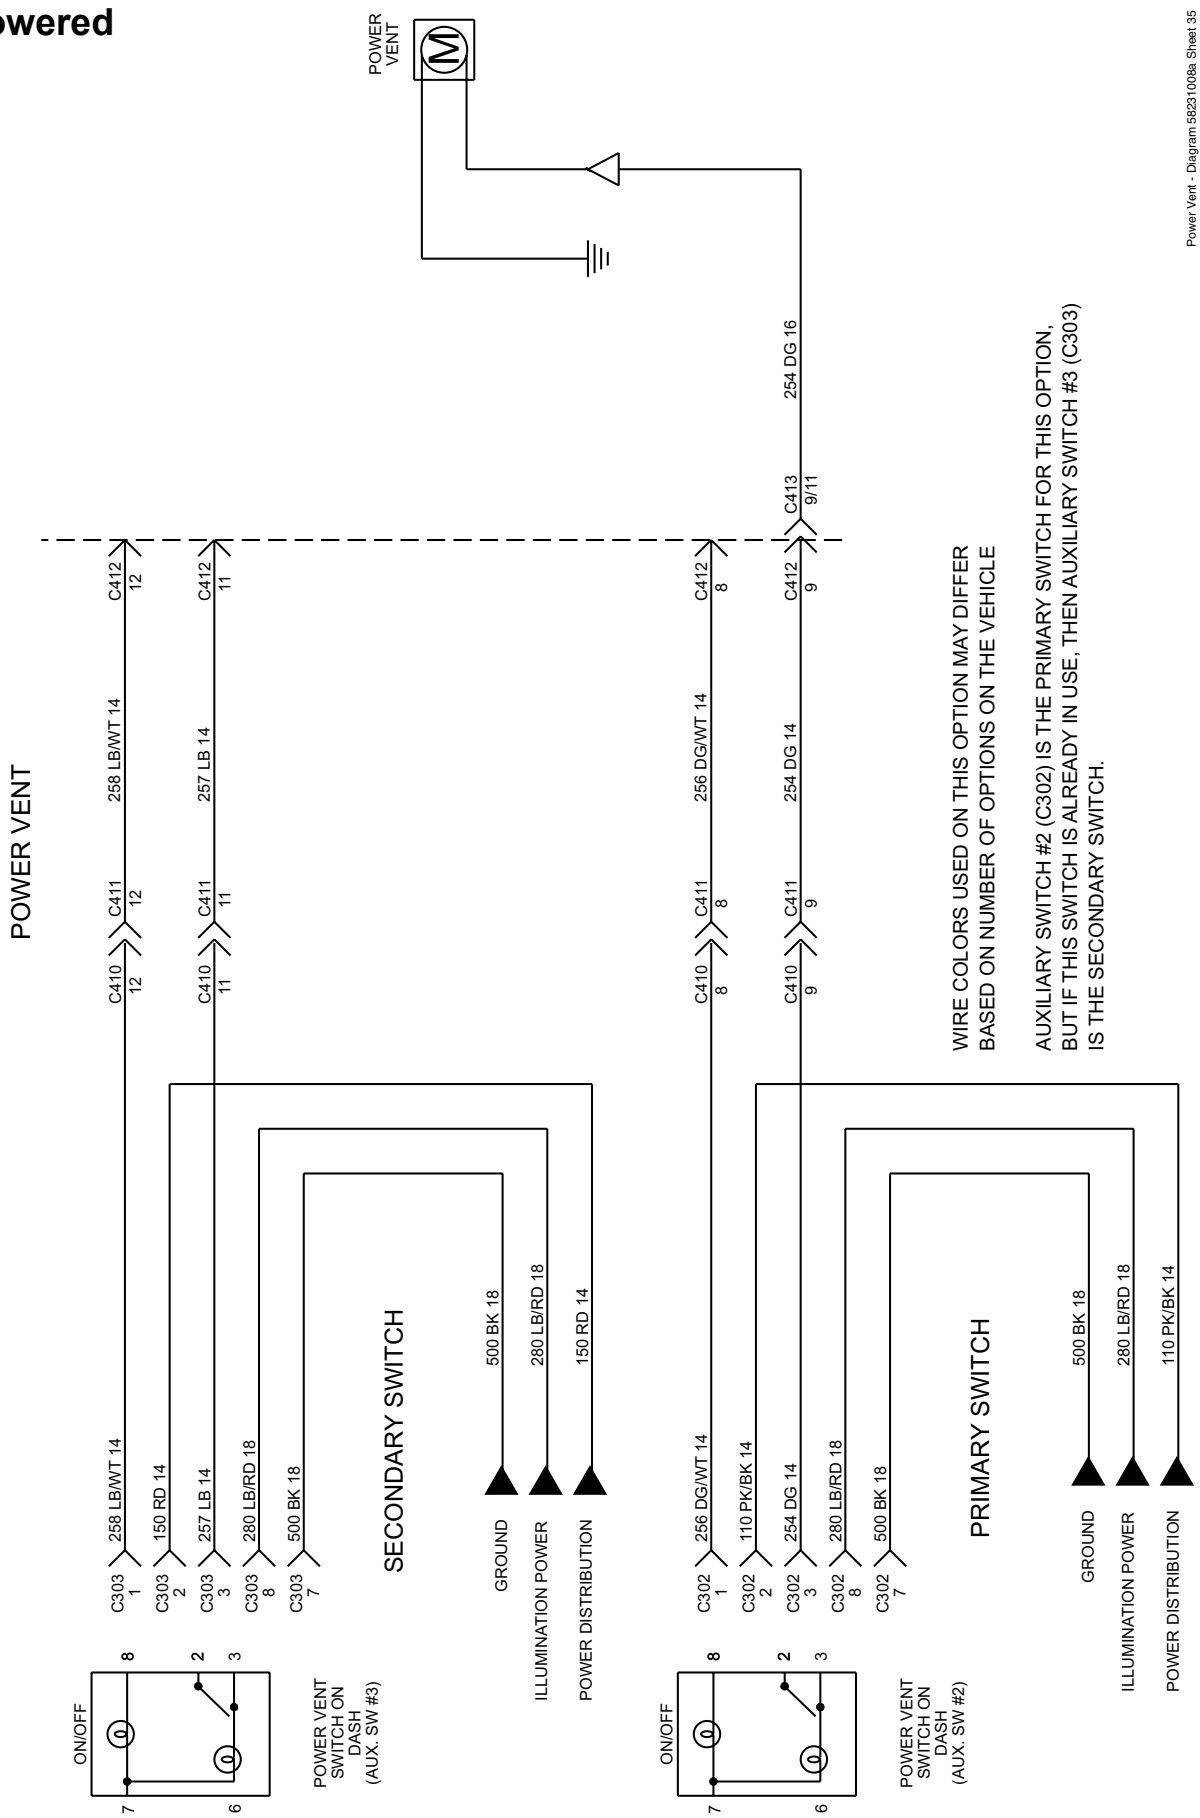

Wiper System


Standard

STANDARD WIPERS

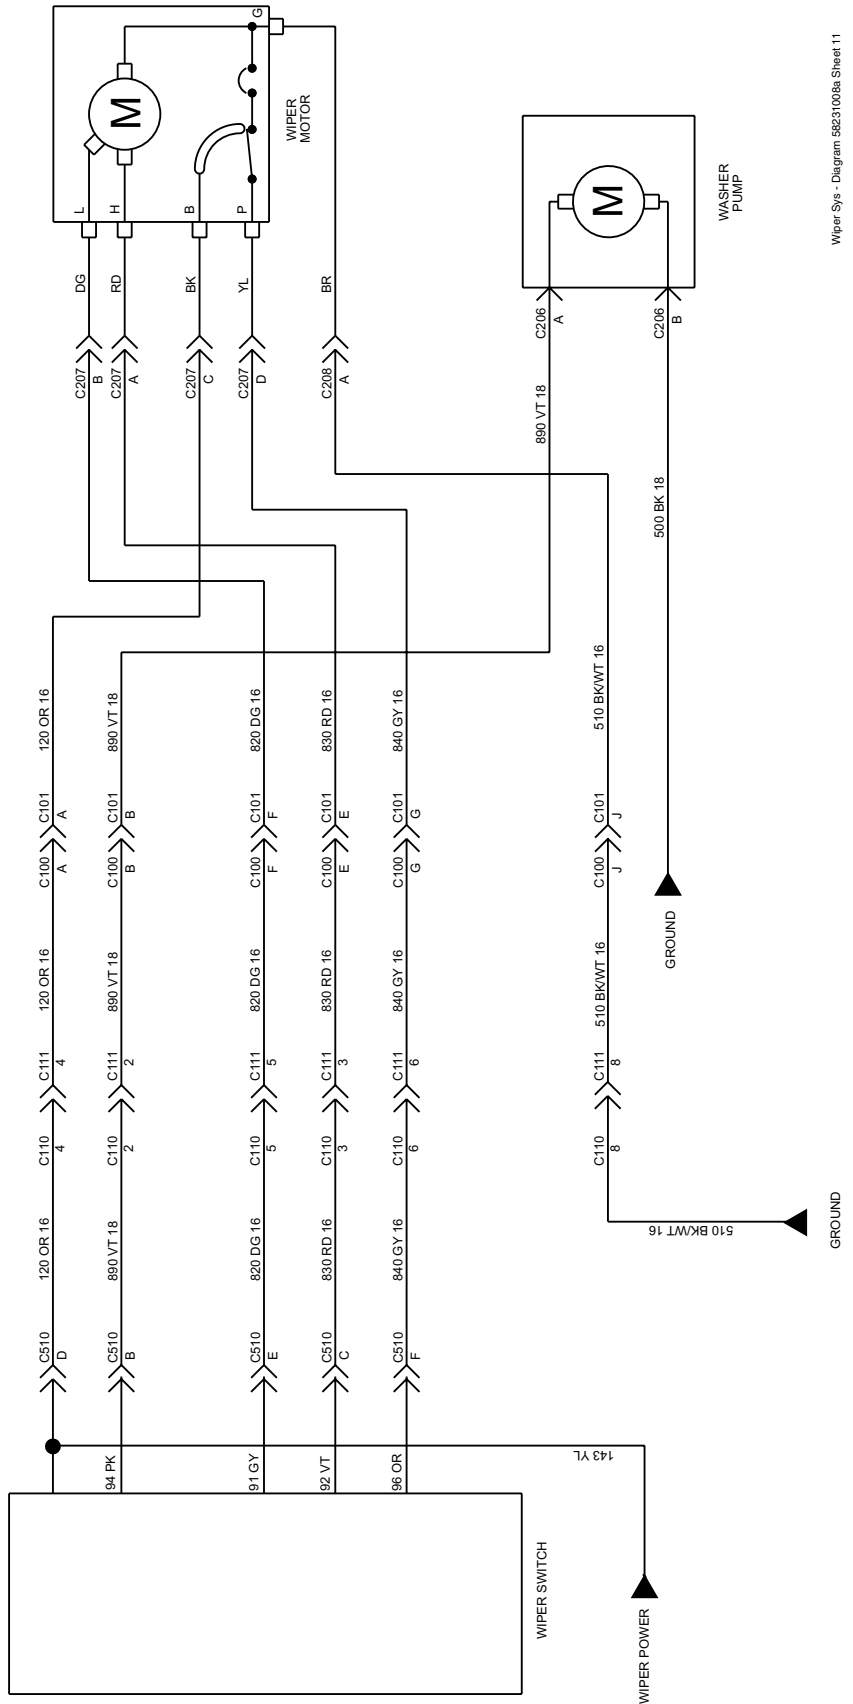

Wiper System

Intermittent Option

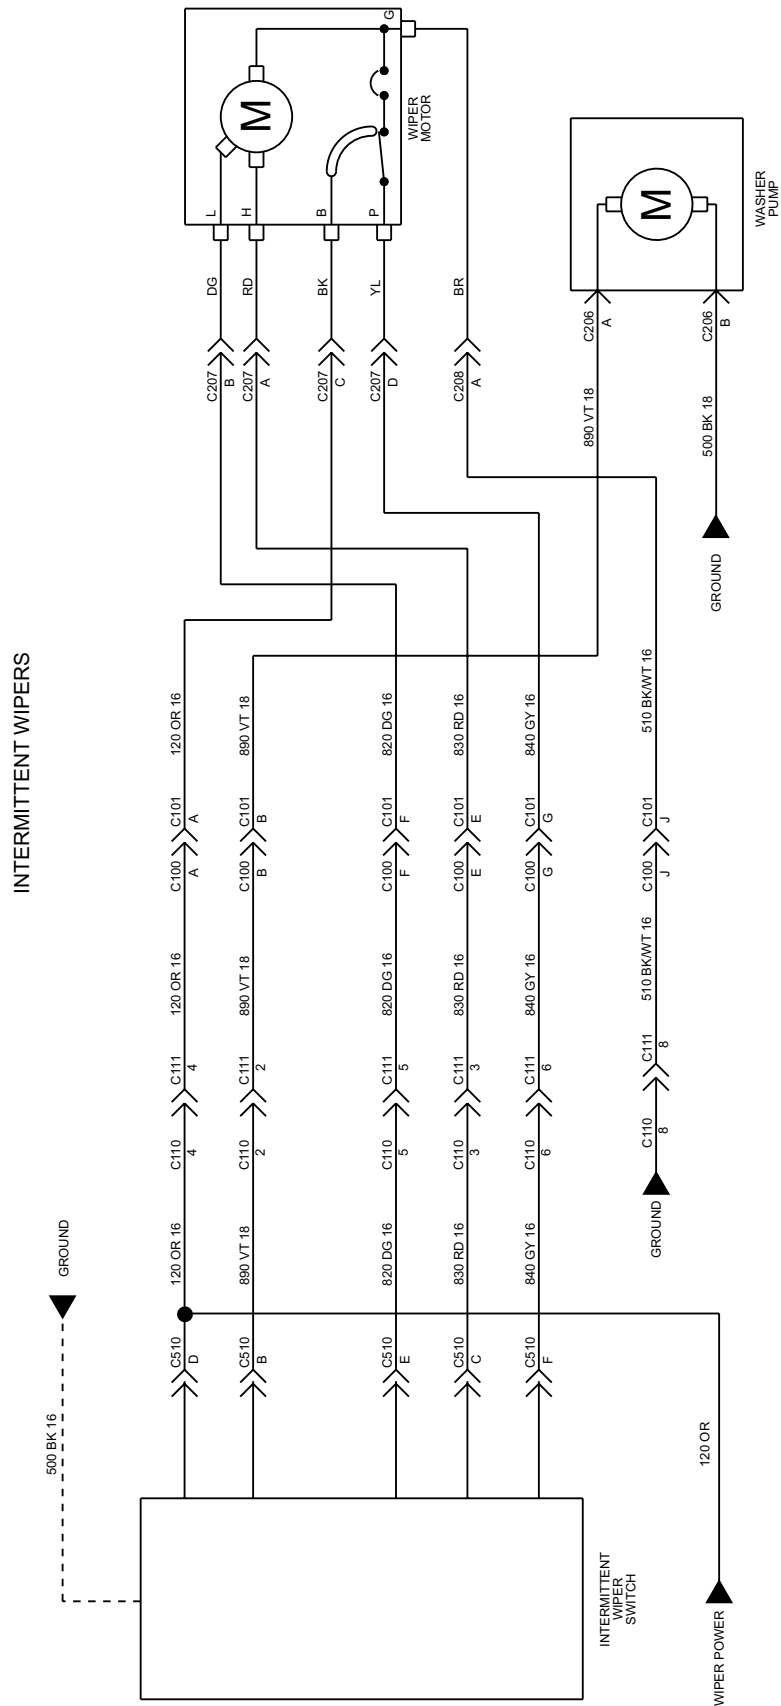

More Information

Download Files

Many support documents, including those described here, are downloadable (as Adobe® Acrobat® PDF files) from our award-winning web site at www.utilimaster.com. **Click on the Technical Manuals button, to access the download page.** To view the files you must have the Adobe Acrobat Reader version 4.0 or higher installed on your computer. Acrobat readers are available free for all leading computer operating systems on the Adobe web site (www.adobe.com).

Utilimaster Quick Reference Parts Guide

Easily find commonly replaced parts for most Utilimaster vehicles in the *Utilimaster Quick Reference Parts Guide*. This illustrated document includes part numbers for door hardware, electrical components, mirrors, vents, mud flaps, roll-up door parts, and many other parts. It also includes sealants and repair kits.

Utilimaster Detailed Parts, Service, and Wiring Manuals

Find parts, routine maintenance procedures, troubleshooting, proper adjustment methods, vehicle repair, aftermarket upgrades, and much more in the Aeromaster parts, service, and wiring manuals.




Utilimaster Glossary of Terms


If you are not familiar with some of the terminology used in this manual, you can find many Utilimaster and industry associated terms and definitions in the *Utilimaster Glossary of Terms—Body Information Guide*.

Contact Utilimaster

Browse our site for more information about Utilimaster and its products or contact Utilimaster Customer Service by using one of the following methods:

- Call 800-237-7806.
- Email to CustSvc@Utilimaster.com.
- Mail to the following address:
Utilimaster Corp.
Attn: Customer Service Department
603 Earthway Blvd.
Bristol, IN 46507-9182
USA

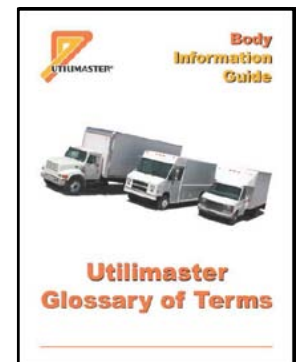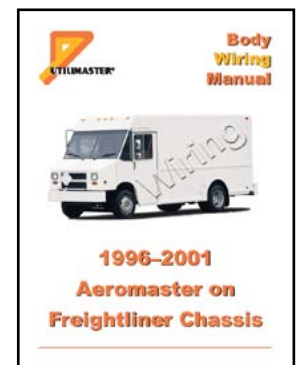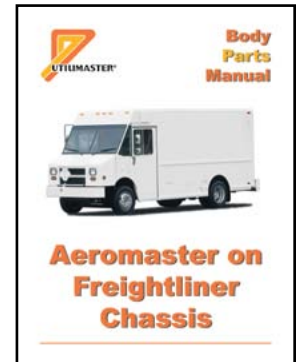

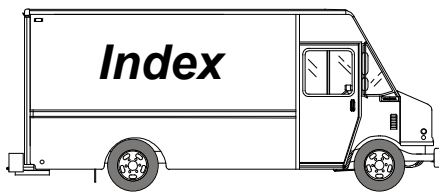

A

A/C. *See* HVAC

Accessory outlet 23

Address

National Highway Traffic Safety Administration 10

Transport Canada 10

U.S. Department of Transportation 10

Utilimaster

Customer Service 54

Publications department 3

Air conditioning. *See* HVAC

Alarm, back-up 40, 42

Auxiliary heater. *See* Heater

B

Back-up. *See* Alarm and Light

Back-up camera 24

Battery

Access 12

Disconnecting 12

Blower. *See* Heater

Body serial number 9

C

Camera, back-up 24

Cautions 11

Chassis, Freightliner 7, 8

CHMSL (Center High Mount Stop Light). *See* Light: Supplemental High Mount Stop Light

Cigarette lighter. *See* Accessory outlet

Circuit number identification 14

Codes 13

Color codes 13, 14

Connectors 17, 18, 19, 20, 21, 22

D

Door ajar system 25

E

Electrical parts 54

Email 54

F

Fan, dash 26, 48

Federal Certification Label 9

Finding information 10

Flood light 45

G

Glossary of terms 54

Grounding system 27

H

Harness layout 15, 16

Heated mirrors 46

Heater. *See also* HVAC

Auxiliary 28

System (no A/C) 29

HVAC 30. *See also* Heater

HVAC panel lights 39

L

Light

Back-up 40, 41, 42, 43

Cab 48

Cargo 31, 32, 33, 34, 48

Center High Mount Stop Light (CHMSL). *See* Light: Supplemental High Mount Stop Light

Clearance 35, 48

Daytime running (DRL) 38

Dome 31

Flood 45

Forward 35

Front 37, 38

Head light 36, 37, 38

HVAC panel 39

License plate 40, 41, 42, 43

Master three-way switch 31, 32, 33, 34

Rear 40, 41, 42, 43

Roof 48

Scene 45

Side marker 36, 37, 38

- Spot 45
- Stop 40, 41, 42, 43
- Strobe 45
- Supplemental High Mount Stop (SHMSL) 44, 48
- Tail 40, 41, 42, 43
- Turn signal 36, 37, 38, 40, 41, 42

M

- Mirrors, heated 46
- Model numbers 8

N

- Notes 11
- Numbers
 - Body serial number 9
 - Engineering drawings 10
 - Index 10
 - Model 8
 - Phone 10, 54
 - Section 10
 - Sheet 10
 - VIN 9
 - Work order 9

O

- Outlet. See Accessory outlet

P

- Panel, HVAC Control 39
- Parts guide and manuals 54
- Phone numbers
 - NHTSA 10
 - Transport Canada 10
 - Utilimaster Customer Service 54
- Power distribution 47

R

- Revision control 3
- Roof wiring 48

S

- Safety
 - Considerations 11
 - Defects, reporting 10
- Scene light 45

- Sections 10
- Serial number 9
- SHMSL (Supplemental High Mount Stop Light) 44, 48
- Spotlight 45
- Stereo system 49
- Strobe light 45
- Supplemental High Mount Stop Light (SHMSL) 44, 48

Switches 50

- A/C 30
- Auxiliary 50
- Auxiliary heater 28
- Blower 29, 30
- Cargo 31, 32, 33, 34
- Dash 26
- Heated mirror 46
- Hi/Lo (A/C) 30
- Power vent 51
- Spotlight 45
- Strobe 45
- Thermo (A/C) 30

Symbols 13

U

- Utilimaster body parts manuals 54
- Utilimaster body serial number 9
- Utilimaster Customer Service 54
- Utilimaster Glossary of Terms 54
- Utilimaster Quick Reference Parts Guide 54

V

- VACS 7
- Vent, powered 51
- VIN 9

W

- Warnings 11
- Web site 3, 54
- Wiper system
 - Intermittent 53
 - Standard 52
- Work order number 9

Notes



Part Number: 03102353-WY01EN