

MAN ECAS 2 Fault Codes PDF

MAN truck PDF Service Manuals

00639
CAN bus disconnection
01043
Supply voltage for the periphery
03001
Control unit (internal fault)
03010
Control unit (ECU special data checksum)
03011
Control unit (checksum of parameters)
03012
Control unit (checksum of the calibration data of the displacement sensors)
03013
Control unit (checksum of calibration data of pressure sensors)
03015
Control unit (check sum of permissible load on bridges)
03050
Supply voltage of the control device
03051
Data transmission line of the control unit (data)
03052
The clock bar of the control device (clock)
03053
Control unit data 2
03054
Control Unit Tact 2
03061
Interruption of communication
03062
CAN message VSC1
03063
CAN message EEC1
03064
CAN Communication EBC2
03065
CAN message FFR_1
03066
CAN message ECAM_1
03067
CAN message EBS (load on the drive axle)
03068
CAN Communication EBC5
03069
CAN Communication EBC1
03070
CAN time and date message
03074
CAN message, dashboard display
03075

<https://truckmanualshub.com/>

Wrong CAN message (ASC_2C)
03076
Wrong CAN message (ASC_2A)
03077
Invalid CAN message (ASC_2B)
03078
Invalid CAN message (ASC_6A)
03079
Wrong CAN message (ASC_6B)
03080
Wrong CAN message (door status)
03081
Wrong CAN message (TCO1)
03082
Wrong CAN message (mileage in kilometers)
03101
Rear axle displacement sensor, left
03102
Rear axle displacement sensor, right
03103
Front axle displacement sensor
03151
Rear Axle Pressure Sensor Left
03152
Rear Axle Pressure Sensor Right
03153
Front axle pressure sensor
03154
Front axle pressure sensor
03155
Second rear axle displacement sensor
03156
The 2nd rear axle displacement sensor
03157
Brake pressure sensor
03158
Lifting bridge pressure sensor
03170
Steering angle sensor
03200
Voltage supply / feedback of solenoid valves
03201
Solenoid valve 2/2 of the rear axle on the left
03202
Solenoid valve 2/2 of the rear axle on the right
03203
Solenoid valve 2/2, front axle
03204
Solenoid valve 3/3 lifting / lowering lifting / supporting bridge
03205
Solenoid valve 3/3 lifting / lowering lifting / supporting bridge
03206

<https://truckmanualshub.com/>

Solenoid valve 3/2 spare

03207

Solenoid valve 3/3 of the lifting bellows

03208

Solenoid valve 2/2, 3rd bridge on the right

03209

Solenoid valve 2/2, 3rd axle left

03212

Solenoid valve cross-choke

03216

Solenoid valve 3/3, raising / lowering the 2nd lifting / supporting bridge

03217

Solenoid valve 3/3, raising / lowering the 2nd lifting / supporting bridge

03230

Adjustment of the preset level

03231

A leak

03260

Voltage supply / feedback damper valve

03261

Front Axle Shock Absorber

03262

The damper of the 1st rear axle

03263

The damper of the 2nd rear axle