

100.03 - Twine arm position potentiometer - shorted to Supply

100.04 - Twine potentiometer - shorted to ground

101.03 - Net arm position sensor - shorted to Supply

101.04 - Net arm position sensor - shorted to ground

102.07 - Twine potentiometer range - out of range below max error

103.07 - Twine potentiometer range - out of range above min error

104.07 - Net arm position potentiometer range - out of range below max error

105.07 - Net arm position potentiometer range - out of range above min error

106.03 - Bale size potentiometer - shorted to Supply

106.04 - Bale size potentiometer - shorted to ground

107.03 - Left bale shape potentiometer - shorted to Supply

107.04 - LH shape potentiometer - shorted to ground

108.03 - Right bale shape potentiometer - shorted to supply

108.04 - Right bale shape potentiometer - shorted to ground

120.03 - Battery voltage - shorted to supply

120.04 - Battery voltage - shorted to ground

121.03 - 8V reference - shorted to supply

121.04 - 8V reference - shorted to ground